

true smooth  
by *BaByliss*



**BATTERY OPERATED LADY SHAVER**

**Model: 8771BU**

# true smooth

by *BaByliss*

## **Silky Smooth Shaver**

The TrueSmooth battery operated lady shaver can be used wet or dry to suit your shaving routine. Use on legs, underarms and bikini line to leave your skin feeling irresistibly soft and smooth.

A floating trimmer tracks the curves of your body to cut longer hairs before the dual foils ensure a closer shave.

### **Features**

- Dual foil for a closer shave
- Floating trimmer tracks your curves for comfort
- Suitable for wet and dry use
- Removable washable heads for easy cleaning
- 2 x comb guides 2mm, 4mm
- Battery operated (requires 2 x AAA not included)
- 2 year guarantee

### **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

### **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. This bag is not a toy.

- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY INFORMATION**

### **WARNING!**

- Do not immerse into water or other liquids.
- Special care is required when using the appliance close to sensitive areas. Use gentle pressure only.
- Do not place appliance on any surface while it is operating.
- Do not leave the appliance unattended when switched on.
- Allow appliance to cool before storing away.
- Always inspect the appliance before use for noticeable signs of damage. Do not use the appliance if it has been dropped or if it shows noticeable damage. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.

- Return the appliance to the nearest service facility for examination, electrical or mechanical adjustment or repair. No repair should be attempted by the consumer.
- Batteries must be removed from the appliance at the end of their life and disposed of safely. Please take them to a recycling centre. If the batteries are leaking do not touch them and take them to a recycling centre.
- This appliance complies with Directives 2004/10/EEC (Electromagnetic Compatibility) and 2006/95/CE (Electrical Safety of Domestic Appliances)

## **INSTRUCTIONS FOR USE**

### A. Preparation of the skin

Before starting: make sure that the skin is perfectly clean. Do not apply any cream or body milk.

### B. Use on batteries

The TrueSmooth works on 2xAAA alkaline batteries (1.5V). To insert or replace batteries, remove the lower casing of the shaver to reveal the battery compartment. This is done by gripping the upper part of the lady shaver in one hand and pulling the lower part in a downward direction. Insert the batteries as indicated on the inside of the battery compartment (alkaline batteries ensure a better performance and a longer life for the appliance). If the appliance remains unused for a while or if the batteries are dead, remove them from the appliance. This will increase the life of the appliance.

When the batteries have come to the end of their life they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak, avoid touching them and dispose of them at a recycling centre.

## C. Instructions for use

### **1. Shaving your legs:**

- Fix the shaving head on the appliance. Switch on by sliding the switch upwards.
- Always keep the shaver perpendicular to the surface to be shaved.
- Always work with both hands: stretch the skin with one hand and move the appliance with the other hand.
- Slowly move the shaver, exerting light pressure. As a precaution, the operation of the appliance may slow down substantially, if the machine is pressed too hard against the skin.

### **2. Shaving sensitive areas:**

- To remove hairs from your underarms, move the appliance from the bottom, in an upwards direction.
- To remove hairs from the bikini line, carefully stretch the skin and move the appliance from the outside to the inside.

**Do not apply too much pressure to avoid causing irritation to the skin.  
Do not apply any perfume or deodorant for 24 hours after shaving.**

## **CLEANING AND MAINTENANCE**

- Make sure unit is in the OFF position before cleaning your shaver.
- Hold shaver head and lift up from the back, then press the foil frame release buttons on each side and lift up (the cutter is now in view). **BE CAREFUL NOT TO PUSH ON THE FOILS, THEY ARE DELICATE AND CAN EASILY BE DAMAGED.**
- Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
- After wet cleaning, allow the foil frame and cutters to air-dry before closing the foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.
- The cutter can also be cleaned with a cleaning brush.

- If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. **NEVER** use thinners, other solvents or any harsh cleaners.
- Once dried, carefully place the protective cap on.

## **CAUTION**

- When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the units.
- Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

## **IMPORTANT**

- Do not shave on open wounds, cuts, burns, warts, moles, on sunburned skin or varicose veins.
- Do not use it if you suffer from skin irritations or infections, such as psoriasis or eczema of the legs. If at all unsure always consult your doctor before use.
- Carefully check the foil before each use for signs of damage.
- If the foil is cracked, broken or loose, do not use it again and replace with a new foil. Using a foil in a faulty condition can cause injury.



## **SAFE DISPOSAL** ████

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

## **UK GUARANTEE**

This True Smooth appliance is guaranteed for consumer use for 2 years.

This 2 year guarantee will cover defects found due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. The guarantee will be void if the damage has been caused by a fall, alteration or repair by any unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd. reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

The return address is:

Customer Care Centre,  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of fault.

