

true smooth
by *BaByliss*



RECHARGEABLE LADY SHAVER

Model: 8770BU



Rechargeable Lady Shaver

The TrueSmooth rechargeable lady shaver can be used wet or dry to suit your shaving routine. Use on legs, underarms and bikini line to leave your skin feeling irresistibly soft and smooth.

A floating trimmer tracks the curves of your body to cut longer hairs before the dual foils ensure a closer shave.

Features

- Dual foil for a closer shave
- Floating trimmer tracks your curves for comfort
- Suitable for wet and dry use
- Removable washable heads for easy cleaning
- 2 x comb guides 2mm, 4mm
- Charging stand
- 2 year guarantee

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. This bag is not a toy.

- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY INFORMATION

WARNING!

- Do not immerse into water or other liquids.
- Special care is required when using the appliance close to sensitive areas. Use gentle pressure only.
- Do not place appliance on any surface while it is operating.
- Do not leave the appliance unattended when switched on.
- Allow appliance to cool before storing away.
- Always inspect the appliance before use for noticeable signs of damage. Do not use the appliance if it has been dropped or if it shows noticeable damage. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.

- Return the appliance to the nearest service facility for examination, electrical or mechanical adjustment or repair. No repair should be attempted by the consumer.
- This appliance contains Nickel Metal Hydride batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre.
- This appliance complies with Directives 2004/10/EEC (Electromagnetic Compatibility) and 2006/95/CE (Electrical Safety of Domestic Appliances)

INSTRUCTIONS FOR USE

A. Preparation of the skin

Before starting: make sure that the skin is perfectly clean. Do not apply any cream or body milk.

B. Charging

The TrueSmooth Rechargeable Lady Shaver can only be charged using the adapter supplied directly with the appliance.

- Before using your shaver for the first time, charge the unit for 16 hours. Always place the appliance in the base with the ON/OFF switch in the OFF position. Maximum battery capacity will only be reached after several charging/ discharging cycles.
- A full charge will supply enough power for about 30 minutes shaving.
- To place the shaver in the charging stand, make sure the ON/OFF switch faces forwards and lines up the hole on the base of the shaver with the corresponding pin on the charging stand.
- Although there is no risk of over charging, it is advisable to unplug the charging stand after a maximum of 24 hours. This will help prolong the battery life.
- In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be full discharged every 6 months

approximately. Then recharge the appliance to full capacity again for 16 hours.

C. Instructions for use

1. Shaving your legs:

- Fix the shaving head on the appliance. Switch on by sliding the switch upwards.
- Always keep the shaver perpendicular to the surface to be shaved.
- Always work with both hands: stretch the skin with one hand and move the appliance with the other hand.
- Slowly move the shaver, exerting light pressure. As a precaution, the operation of the appliance may slow down substantially, if the machine is pressed too hard against the skin.

2. Shaving sensitive areas:

- To remove hairs from your underarms, move the appliance from the bottom, in an upwards direction.
- To remove hairs from the bikini line, carefully stretch the skin and move the appliance from the outside to the inside.

Do not apply too much pressure to avoid causing irritation to the skin.

Do not apply any perfume or deodorant for 24 hours after shaving.

CLEANING AND MAINTENANCE

- Make sure unit is in the OFF position before cleaning your shaver.
- Hold shaver head and lift up from the back, then press the foil frame release buttons on each side and lift up (the cutter is now in view).
BE CAREFUL NOT TO PUSH ON THE FOILS, THEY ARE DELICATE AND CAN EASILY BE DAMAGED.
- Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
- After wet cleaning, allow the foil frame and cutters to air-dry before closing the foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.
- The cutter can also be cleaned with a cleaning brush.
- If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. NEVER use thinners, other solvents or any harsh cleaners.
- Once dried, carefully place the protective cap on.

CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the units.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

IMPORTANT

- Do not shave on open wounds, cuts, burns, warts, moles, on sunburned skin or varicose veins.
- Do not use it if you suffer from skin irritations or infections, such as psoriasis or eczema of the legs. If at all unsure always consult your doctor before use.
- Carefully check the foil before each use for signs of damage.
- If the foil is cracked, broken or loose, do not use it again and replace with a new foil. Using a foil in a faulty condition can cause injury.



SAFE DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

UK GUARANTEE

This True Smooth appliance is guaranteed for consumer use for 2 years.

This 2 year guarantee will cover defects found due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. The guarantee will be void if the damage has been caused by a fall, alteration or repair by any unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd. reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre,
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of fault.