

TRESemmé
USED BY PROFESSIONALS

Thank you for buying the TRESemmé Fast Dry 2000

We hope you enjoy using it. From our origins in salons in 1948, TRESemmé has been driven by a simple truth: every woman deserves to look & feel fabulous, like they've just stepped out of the salon.

TRESemmé is dedicated to creating haircare products that are salon quality. Inspired by stylists and tested in salons the products are designed to help you achieve salon gorgeous hair every day.

TRESemmé® – Professional. At your fingertips.®



**FAST DRY
2000**

Model: 9142TU

Safety Cautions

- This appliance should only be used as described within this instruction booklet. Please retain for future reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual

operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Never look directly into the barrel of the hairdryer when it is switched on.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the dryer to the '0' position, unplug and allow to



cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).

- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 accredited company that continually

evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See "U.K. After Sales Service" section for further information.)

How to use your new TRESemmé Fast Dry 2000

- Towel dry and detangle the hair.
- We recommend using a heat protect spray such as the TRESemmé Heat Defence Spray to help protect your hair against damage caused by heat styling tools up to 230°C*
*vs a non-conditioning shampoo alone.
- There are 3 heat/speed settings. Use the high heat/speed setting for initial drying and use the low heat/speed setting for styling as the hair begins to dry and scrunch drying.
- Use the cool shot on warm hair to set your style for long-lasting effect.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away.

Concentrator Nozzle

The concentrator nozzle is great for straightening or styling hair when using a brush. Use the concentrator nozzle for directing the airflow just where you want it. When using the concentrator nozzle use a low heat/low speed setting.

Hints and Tips from the Stylists at TRESemmé

General Hair Maintenance

- Don't rub hair with a towel when drying – this makes the cuticle rough, which can give the appearance of frizz and therefore prevents shine. Instead, gently squeeze excess water out of the hair with a towel.
- Try not to shampoo every day – washing too often can dehydrate your hair. Try one of TRESemmé's Instant Refresh Dry Shampoos for a quick alternative to shampooing your hair.

Straightening and Smoothing

- Starting with the hair at the nape of the neck, section off a piece of hair as wide as your brush.
- Use your brush to remove any tangles that have formed in the section of hair.
- Place the brush under your hair and run from roots to ends, holding it at the ends to create tension in the hair.
- Using the hairdryer with the concentrator nozzle on, direct the airflow down the hair towards the ends.
- Continue to work down the length of your hair in this way until only the ends are left around the brush. For a turned under or flicked out style, simply bend the hair around the brush.
- Once the section is fully dry, continue with the remaining hair, drying each section individually until the whole head is dried.

Volume and Body

- When blow-drying your hair, tilt your head from one side to the other or tip upside down for more lift and volume.
- Part your hair how you wish your hair to sit once it has been styled.
- Start at the nape of the neck and section a piece of hair as wide as your brush.
- Place your brush underneath a section of hair, close to the root. Aim the hot air over the brush and hold for a few seconds, this will help create root lift.
- Move the brush down the section of hair, whilst aiming the hot airflow down the section towards the shoulder to create a smooth, shiny finish.
- Repeat this throughout the entire head of hair.

Care and Maintenance

General

- Do not wrap the lead around the dryer, instead coil the lead loosely by the side of the dryer.
- Do not use the dryer at a stretch from the power point.
- Always unplug after use.

Cleaning the Filter

- Ensure the appliance is switched off, unplugged and cool.
- Holding the handle of the appliance, use the raised grips to pull the rear filter down and away from the dryer.
- Using a soft brush, clean any hair and other debris from the filter.

- Replace the rear filter by pushing back into position.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure no water enters the appliance and it is completely dry before use.

UK Guarantee

This TRESemmé appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.


The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

TRESemmé is a registered trade mark of Unilever and is used under license. All rights reserved.

Safe Disposal

The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.