# **BaByliss**

# **VELVET ORCHID 235 STRAIGHTENER 2513U**

### **SAFETY CAUTIONS**

 This appliance should only be used as described within this instruction booklet. Please retain for reference.

# **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

# **WARNING! THIS APPLIANCE GETS HOT!**

- ALWAYS keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

# **IMPORTANT SAFETY**

- Do not use the appliance in the bathroom.
- WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface, even when using the heat mat provided.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- In the event the appliance is left switched on, it will automatically shut off after 60 minutes. If you wish to

continue using the appliance after this time, simply press and hold the button marked 'I/0' for 1-2 seconds to turn the power on.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See "U.K.

After Sales Service" section for further information.)

#### SWITCH ACTIVATION CONTROL

**IMPORTANT!** This straightener features delayed activation control. Immediately after turning on the straightener you are able to adjust the temperature settings. After 5 seconds of the straightener being turned on, the temperature buttons will automatically lock. To adjust any settings, hold down the button of the required setting for 1-2 seconds, this will deactivate the lock mode and allow the settings to be changed. To turn off the appliance whilst in lock mode, hold down the button marked 'I/0' for 1-2 seconds until the unit switches off.

#### INSTRUCTIONS FOR USE

- Comb through dry hair and divide into sections.
- Press and hold the button marked 'I/0' for 1-2 seconds to switch on.
- To select a heat setting suitable for your hair type, hold down the '+' or '-' button for 1-2 seconds and switch between the '+' and '-' buttons until desired heat setting is selected.

**Please note:** The appliance will automatically set to 205°C and the red indicator lights will blink until the temperature has been reached. Once the temperature has been reached, the indicator lights will remain solid in colour.

- Take a section of hair and place between the plates, close to the roots.
- Hold the hair firmly between the plates and slide down the length of the hair, from root to tip.
- Repeat as necessary.
- Allow the hair to cool before combing through.
- After use, hold down the button marked 'I/0' for 1-2 seconds to switch off and unplug the appliance
- Allow to cool before storing the appliance away.

# **Heat Settings**

If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.

It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

There are 6 heat settings available to suit all hair types, 160°C, 175°C, 190°C, 205°C, 220°C, 235°C.

#### **Auto Shut Off**

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply press and hold the 'I/O' button for 1-2 seconds to turn the power on.

#### **Heat Mat**

The appliance comes with a heat mat for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.

# **CARE & MAINTENANCE**

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use and allow to cool completely.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliances and it is completely dry before use.

For more information on this appliance visit www.babyliss.co.uk

#### **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through the Conair UK After Sales Service. The Conair Group Ltd reserve the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

#### **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre Conair Logistics Unit 4, Revolution Park Buckshaw Avenue Buckshaw Village Chorley PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

#### SAFE DISPOSAL

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.