

TRESemmé®

USED BY PROFESSIONALS

## Thank you for buying the TRESemmé Salon Shine Waves

From our origins in salons in 1948, TRESemmé has been driven by a simple truth: every woman deserves to look & feel fabulous, like they've just stepped out of the salon.

The Expert Selection range has been specially formulated with advanced technology. Selected by our top stylists, the products deliver professional-quality results, giving you the power to be the expert of your own style.

TRESemmé® – Professional. At your fingertips.®



WITH MARULA OIL  
KERATIN  
SMOOTH

SALON SHINE WAVES

Model: 2804CU



## Safety Cautions

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

### IMPORTANT CHILD SAFETY

- **WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

### IMPORTANT SAFETY

- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not use this appliance in the bathroom.



- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- In the event the appliance is left switched on it will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, slide the switch to '0' position, then slide the switch to the heat setting you require to turn the power on and continue styling your hair.
- Do not place the appliance on any heat sensitive surface whilst in operation, even

when using the heat mat provided.

- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See "U.K. After Sales Service" section for further information.)

## How to use your new TRESemmé Salon Shine Waves

**CAUTION!** This appliance reaches temperatures of 200°C and should only be used with the heat protection glove supplied. Use the glove on the hand wrapping the hair around the barrel.

**NOTE:** The heat protection glove is only designed to give temporary contact protection. Discomfort will be caused with prolonged contact with the hot surface.

- After using the Keratin Smooth Shampoo & Conditioner, apply the Keratin Smooth Heat Protect Spray and get protection from heat styling damage, leaving your hair luxuriously smooth and shiny. Suitable for colour treated hair.
- Towel dry and detangle the hair.
- Always use Keratin Smooth Heat Protect Spray before heat styling your hair. Our spray helps to create a barrier against the damage of blow-drying, straightening and heat curling up to 230 °C degrees. Giving you the perfect base to start styling.
- Spray liberally from 6 to 8 inches away onto damp, towel dried hair and comb through. The pump spray offers easy misting.
- Use either on damp hair before you blow-dry or on dry hair before heat curling or flat ironing to help shield hair from damaging heat.
- Dry hair as normal – make sure hair is fully dry before using the styling wand.
- Slide the switch to the heat setting you require to turn the styling wand on.

- There are three heat settings:  
Use setting I for fine, damaged or coloured hair  
Use setting II for medium hair  
Use setting III for thicker, coarser hair.

- Always start on the lowest heat setting on initial use and increase the temperature as desired to achieve result.
- The styling wand will heat up in seconds.
- Hold the styling wand with the cool tip pointing downwards towards your shoulder. Wind the section around the barrel starting with the hair nearest your head, winding downwards towards the ends.
- Hold the end of the hair in place at the cool tip for 5-8 seconds depending on hair type, and then release hair.
- Allow the curl to cool before styling as this helps set the curl for long-lasting effect.
- Repeat as required.
- Once you have finished styling your hair, turn the appliance off and allow to cool on the heat protection mat. The styling wand should be completely cool before storing away. Never store the styling wand when it is still hot.

### Auto Shut Off

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. If you wish to continue using the wand after this time, simply slide the switch to the '0' position, then slide the switch to the heat setting you require. This will turn on the wand and you can continue to style your hair.

### Heat Protection Mat

During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided.

After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

## Hints and Tips from the Stylists at TRESemmé

### General Hair Maintenance

- Don't rub hair with a towel when drying – this makes the cuticle rough, which can give the appearance of frizz and therefore prevents shine. Instead, gently squeeze excess water out of the hair with a towel.
- Refresh your hair in between washes with one of TRESemme's Instant Refresh Dry Shampoos for a quick alternative to shampooing your hair.

### Curling

- Make sure hair is 100% dry before you begin to style it.
- To get the look to last longer, spray each section of hair with hairspray before you curl it.
- Start from the widest end of the wand and wrap sections of your hair around the barrel.
- Make sure to hold the end of the hair against the styling wand ensuring the hair section is curled right to the ends of the hair without any kinks. (Make sure you are wearing your glove – the styling wand gets very hot).
- When you've created your curl – leave it to completely cool.

When it is cool use your fingers to break up curls and set your hair in place.

- For a spiral look to your curls, twist the section of hair before wrapping it around the styling wand.
- For tighter, bouncier curls, wrap more hair.
- For loose, free flowing curls, wrap less hair.
- For a modern look don't start curling too close to the root. Leave a couple of inches straight at the root before starting to curl.

For more professional secrets from our stylists go to [tresemmecom.com](http://tresemmecom.com).

## Care and Maintenance

To keep your styling wand in the best possible condition, it is important to make sure there is no product build up on the barrel. This will ensure optimum results, every use. Use a damp cloth over the surface of the barrel to wipe away any styling product – only do this when the styler is completely cool. To prevent cord damage – never wrap the cord around the styler – always store the cord next to it.

## UK Guarantee

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet, GU51 3TW

This TRESemmé appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse

6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)

## UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Customer Care Centre Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

The return address is:  
Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

For further advice on using the TRESemmé Keratin Smooth Heat Protection Spray, contact Unilever UK Consumer Care on 0800 585895 or write to:

Unilever UK  
Freepost  
Admail 1000  
London  
SW1A 2XX

Unilever IR Consumer Care on 1850 404060 or write to:


Unilever Ireland  
20 Riverwalk  
Citywest  
Dublin 24

TRESemmé is a registered trade mark of Unilever and is used under license. All rights reserved.

**Please note this Instruction Booklet is not the guarantee.**

## Safe Disposal



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.