



Thank you for buying the TRESemmé Keratin Smooth, Smooth Volume Hot Air Styler

From our origins in salons in 1948, TRESemmé has been driven by a simple truth: every woman deserves to look & feel fabulous, like they've just stepped out of the salon.

The Expert Selection range has been specially formulated with advanced technology. Selected by our top stylists, the products deliver professional-quality results, giving you the power to be the expert of your own style.

TRESemmé® – Professional. At your fingertips.®



WITH MARULA OIL
**KERATIN
SMOOTH**

SMOOTH VOLUME HOT AIR STYLER

Model: 2776BU



Safety Cautions

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual

operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the styler to the '0' position, unplug and allow to cool for 10 minutes. Before use, ensure that the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat, discontinue use immediately and contact the Conair Customer Care Line (refer



to 'UK After Sales Service' section for further information).

- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See "U.K. After Sales Service" section for further information).

How to use your new TRESemmé Keratin Smooth, Smooth Volume Hot Air Styler

- Towel dry and detangle the hair.
- After using the Keratin Smooth Shampoo & Conditioner, apply the Keratin Smooth Heat Protect Spray and get protection from heat styling damage, leaving your hair luxuriously smooth and shiny. Suitable for colour treated hair.
- Towel dry and detangle the hair.
- Always use Keratin Smooth Heat Protect Spray before heat styling your hair. Our spray helps to create a barrier against the damage of blow-drying, straightening and heat curling up to 230°C. Giving you the perfect base to start styling.
- For best results, use a hairdryer to rough dry hair until it is 80% dry.
- Separate your hair into manageable sections and place the brush head under the section of hair, as close to the roots as possible.
- Choose the setting that best suits your hair type and the style you want to achieve.
- Use setting 'I' for cooler drying and less heat - ideal for shorter styles and finer hair.
- Use setting 'II' for faster drying and more heat - ideal for long styles and thicker, more coarse hair.
- Use the brush to lift the hair at the roots as you dry.
- Move the styler down through the hair, gently brushing the hair as you dry.
- Finally, select the cool setting '*' to set your style.

- Repeat across all sections until hair is dry and the desired style is achieved.
- After use, switch off the styler and remove plug from socket.
- Allow to cool before storing away.

Hints and Tips from the Stylists at TRESemmé

General Hair Maintenance

- Don't rub hair with a towel when drying – this makes the cuticle rough, which can give the appearance of frizz and therefore prevents shine. Instead, gently squeeze excess water out of the hair with a towel.
- Refresh your hair in between washes with one of TRESemmé's Instant Refresh Dry Shampoos for a quick alternative to shampooing your hair.
- For best results, use a hairdryer to rough dry hair until it is 80% dry. Use the Keratin Smooth, Smooth Volume Hot Air Styler to add volume and body and finish your style.
- To create volume at the roots, take a section of hair and hold the brush head in place at the root for a few seconds before moving the styler slowly down the hair.
- To create shape at the ends of the hair, run the brush head from the root to the ends. As you reach the end of the section rotate the brush head turning the ends of your hair inward to achieve a turned in style or alternatively rotate the brush outwards for a flicked out style.
- The cool setting is use at the end of styling to set the style and give long-lasting effect. Once you have finished styling your hair,

move the slide switch to the cool position ^{***} and brush through the section of hair. The cool air helps lock in the style.

Ionic Technology

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase static, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become “fly-away” and difficult to style. The ion generator in this styler produces a stream of negative ions which act to neutralise the static charge, smoothing the cuticle for shiny, smooth and manageable hair.

Care and Maintenance

In order for your styler to retain its tip-top performance please follow the steps below:

- Do not wrap the lead around the styler, instead coil the lead loosely by the side.
- Do not use the styler at a stretch from the power point.
- Always unplug after use.
- It is important to make sure you regularly remove hair tangled in the brush attachment.
- Clean the rear filter regularly to help prevent overheating in use. Ensure the appliance is switched off, cool and unplugged. Gripping the rear filter, turn anti-clockwise to release, slide the filter towards the cord, then using a soft brush, clean away any hair and debris from the filter. To

replace the filter, align the the grooves and turn clockwise until it locks back into position.

UK Guarantee

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet, GU51 3TW

This TRESemmé appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*

- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:
Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

For further advice on using the TRESemmé Keratin Smooth Heat Protection Spray, contact Unilever UK Consumer Care on 0800 585895 or write to:


Unilever UK
Freepost
Admail 1000
London
SW1A 2XX

Unilever IR Consumer Care on 1850 404060 or write to:
Unilever Ireland
20 Riverwalk
Citywest
Dublin 24

TRESemmé is a registered trade mark of Unilever and is used under license. All rights reserved.

Please note this Instruction Booklet is not the guarantee.

Safe Disposal

The  symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.