



Thank you for buying the TRESemmé Keratin Smooth, Smooth Control 230 Styler

From our origins in salons in 1948, TRESemmé has been driven by a simple truth: every woman deserves to look & feel fabulous, like they've just stepped out of the salon.

The Expert Selection range has been specially formulated with advanced technology. Selected by our top stylists, the products deliver professional-quality results, giving you the power to be the expert of your own style.

TRESemmé® – Professional. At your fingertips.®



WITH MARULA OIL
KERATIN SMOOTH
SMOOTH CONTROL 230 STYLER

Model: 2066BU



Safety Cautions

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

- **WARNING!** Polythene bags over a product may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not use this appliance in the bathroom.



- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.

- Do not leave the appliance unattended when switched on or plugged in.
- In the event the appliance is left switched on it will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply slide the switch to "0" position, then slide the switch to the heat setting you require to turn the power on and continue styling your hair.
- Do not place the appliance on any heat sensitive surface whilst in operation, even

when using the heat mat provided.

- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See "U.K. After Sales Service" section for further information.)

How to use your new TRESemmé Keratin Smooth, Smooth Control 230 Styler

CAUTION! This appliance has a high performance Advanced Ceramics™ heater and is designed to reach very high temperatures. Take care to avoid the hot surfaces of the styler coming into direct contact with the skin, in particular the eyes, ears, face and neck.

- After using the Keratin Smooth Shampoo & Conditioner, apply the Keratin Smooth Heat Protect Spray and get protection from heat styling damage, leaving your hair luxuriously smooth and shiny. Suitable for colour treated hair.
- Towel dry and detangle the hair.
- Always use Keratin Smooth Heat Protect Spray before heat styling your hair. Our spray helps to create a barrier against the damage of blow-drying, straightening and heat curling up to 230°C. Giving you the perfect base to start styling.
- Dry hair as normal.
- Always ensure your hair is completely dry before using the styler. Never use the styler on wet hair.
- Plug the styler into a suitable mains socket and slide the switch to one of the heat settings to turn the styler on. The on indicator light will illuminate.
- There are three heat settings:
 - Use setting 'I' for fine, damaged or coloured hair
 - Use setting 'II' for medium hair
 - Use setting 'III' for thicker coarse hair

- Allow the styler to heat up for 15 seconds. Allow slightly longer if using on the higher temperature settings.
- After use, slide the switch to the '0' position to switch off and unplug the styler. Immediately wrap the appliance in the heat mat provided.

Auto Shut Off

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the styler after this time, simply slide the switch to "0" position, then slide the switch to the heat setting you require. This will turn on the styler and you can continue to style your hair.

Heat Protection Mat

The appliance comes with a heat protection mat for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.

Hints and Tips from the Stylists at TRESemmé

General Hair Maintenance

- Don't rub hair with a towel when drying – this makes the cuticle rough, which can give the appearance of frizz and therefore prevents shine. Instead, gently squeeze excess water out of the hair with a towel.
- Refresh your hair in between washes with one of TRESemmé's Instant Refresh Dry Shampoos for a quick alternative to shampooing your hair.

Straightening

- Comb through dry hair and divide in to sections. Take a section of hair and place between the styler plates and close together.
- Slide the styler slowly and evenly along the section.
- As the styler reaches towards the end of the hair section, turn the styler under to add shape to your style.
- Allow the hair to cool before combing through.

Curling

- Slide the styler a short distance along the section of hair and turn the styler back on itself 180 degrees.
- In one smooth action, slowly slide the styler, along the hair towards the ends.
- Once through the entire length of hair, twirl the section around your fingers and leave to cool in the ringlet shape you have formed.
- Once the curl has cooled down, break up the curls using your finger tips and style as required.

- If you use smaller sections and slide the styler slower through the hair, the curl result will be tighter.
- Do not try to curl a section bigger than one inch wide.

Waves

- When making a wave, work horizontally to the head, but lift the hair up and away from the scalp.
- Place a section of hair between the styler plates and close together. Slide the styler slightly away from the scalp.
- Turn the styler back on itself 180 degrees.
- In one smooth action, slide the styler through the entire length of hair.
- Finish each wave by twirling it around your fingers and allow to cool before you dress the finished look.
- If you use bigger sections and slide the styler faster through the hair, the looser the wave will be.

General tips

- Clip unwanted hair out of the way and make sure each section is tangle free before you begin styling.
- To get the result to last longer, lightly spray each section of hair with TRESemmé hairspray before styling.

Care and Maintenance

In order for your styler to retain its tip top performance it is important to make sure there is no product build up on the plates. This will ensure the plates always glide smoothly through the hair. Use a damp cloth over the surface of the plates to wipe away any styling product – only do this when the styler is completely cool. To prevent cord damage – never wrap the cord around the styler.

UK Guarantee

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet, GU51 3TW

This TRESemmé appliance is guaranteed for consumer use for 5 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Customer Care Centre Line on 0345 2 668869 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:
Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

For further advice on using the TRESemmé Keratin Smooth Heat Protection Spray, contact Unilever UK Consumer Care on 0800 585895 or write to:

Unilever UK
Freepost
Admail 1000
London
SW1A 2XX


Unilever IR Consumer Care on 1850 404060 or write to:

Unilever Ireland
20 Riverwalk
Citywest
Dublin 24

TRESemmé is a registered trade mark of Unilever and is used under license. All rights reserved.

Please note this Instruction Booklet is not the guarantee.

Safe Disposal

The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.