



no![®]
no!
PRECISION
TRIMMER

Getting Started

Visit www.HowToNoNo.com
for Videos, Tips & Tricks

Contents

Getting to Know no!no![®] Precision Trimmer

- 4** Getting to Know no!no![®] Precision Trimmer
- 5** The no!no![®] Precision Trimmer
- 6** Safety Information
- 7** Safety Warnings

How to no!no![®] Precision Trimmer

- 10** A Quick Introduction to no!no![®] Precision Trimmer
- 12** Operating
- 14** Taking Care of Your no!no![®] Precision Trimmer
- 15** Customer Support

Warranty and Technical Specifications

- 17** Warranty
- 19** Technical Specifications

 


Getting to Know no!no![®] Precision Trimmer

The no!no![®] Precision Trimmer removes unwanted facial and body hair pain-free, fast and effectively.

Read this entire GETTING STARTED guide completely before using the device to ensure safety and results.

The no!no![®] Precision Trimmer

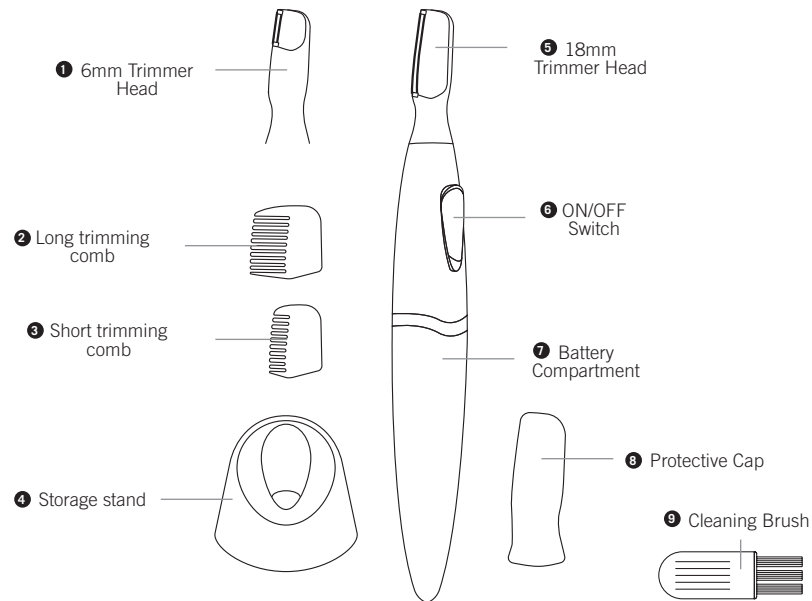

Safety Information



IMPORTANT INFORMATION! RETAIN FOR FUTURE USE!

Read this **GETTING STARTED** guide carefully before using this device, especially the safety instructions, and keep this **GETTING STARTED** guide for future use. Should you give this device to another person, it is vital that you also pass on this **GETTING STARTED** guide for use.

Explanation of symbols



This **GETTING STARTED** guide belongs to this device. It contains important information about starting up and operation. Read this **GETTING STARTED** guide thoroughly. Non-observance of these instructions can result in serious injury or damage to the device.



WARNING

These warning notes must be observed to prevent any injury to the user and damage to the device.

LOT

LOT number



Manufacturer




Protect against moisture!
Keep the device dry.






Only for indoor use!


Safety Warnings

- > This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- > Always ensure that the main body of the appliance does not get wet (water splashing, etc.) and do not use with wet hands.
- > Always keep the product dry.
- > Never use the product on irritated skin.
- > Never use attachments other than those we supply.

- > Never use the appliance if it is damaged or malfunctions.
- > Never use the appliance if there is any damage on the inside/outside of the blades or comb accessories.
- >  Do not immerse the product in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.

Batteries

- > This trimmer operates with 1 x AAA 1.5 V battery (not supplied). For best performance, use an alkaline battery.
- > Always use the battery by the recommended use-by-date.
- > Make sure the product is turned to the OFF '0' position .
- > Remove the battery compartment by pulling the cover downwards .
- > Insert the battery ensuring that the battery is fitted the right way round observing the + and – signs on the battery and product.
- > Place the outer cover back on the unit until it clicks into position .
- > Always seek medical advice if you believe a battery has been swallowed.

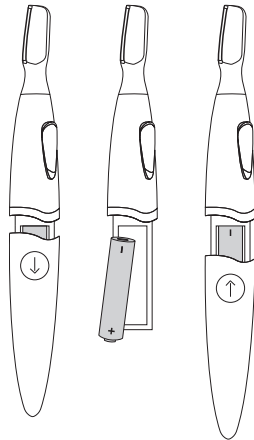

If the appliance is not used for long periods of time, do not leave the battery inserted (danger of leakage). Remove the battery when not in use for extended periods of time. In the instance of battery leakage occurring and coming into contact with the skin or eyes, wash immediately with lots of water.

- > Always store batteries in a well ventilated cool dry place away from direct sunlight.
- > Always keep batteries out of the reach of young children.
- > Used batteries should not be disposed of with the household waste. Please recycle batteries at special collection points or return them to your retailer.
- > Never place the battery in a fire or mutilate the battery as it may burst or release toxic materials.
- > Never puncture, crush, dent or dismantle batteries or attempt to revive batteries by heating, charging or other means.

A Quick Introduction to no!no![®] Precision Trimmer

READ this entire GETTING STARTED guide before using the no!no![®] Precision Trimmer to ensure safety and results.

1



Insert the battery into the back of the precision trimmer.

2



Attach the trimmer head you wish to use.

3



Attach a comb attachment by placing it over the trimmer head until it clicks into place.

4




To turn on, switch the ON/OFF switch to the '1' position.

5



Pull your skin taut with one hand and glide the trimmer against the direction of hair growth.

Get
Started

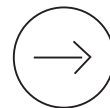

Operating

Your no!no!® Precision Trimmer is perfectly suited for closely and safely removing any unwanted hair on body and face e.g. neck, back, eyebrows.

The product comes with two trimming combs long ② and short ③ for trimming hair to a uniform length.

Ensure the appliance is turned OFF ⑥ before attaching a trimming comb. We recommend that you start with the long trimming comb ②.

Make sure that the teeth of the comb are facing in the same direction as the trimming blades.

Slide the comb over the trimmer head until it clicks into place.

Slide the ON/OFF switch up ⑥ to the '1' position to turn the appliance on.

Ensure that the comb is laid flat against the skin.

Place the trimmer gently against the hair to be removed and glide it slowly against the direction of hair growth.

For optimum results, pull the skin taut with one hand while using.

When trimming is complete, remove the comb and place the protective cap ④ over the trimmer head to protect the blades when not in use.

The no!no!® Precision Trimmer can also be used without the long ② or short ③ trimming


comb to edge and shape areas as desired.

A smaller (6mm) trimmer head ① is supplied for precision trimming and smaller areas. Pull your skin taut with one hand and glide the trimmer against the direction of hair growth.

Put the protective cap ④ on to keep blades new and place the trimmer in the storage stand ④ to keep it tidy.

Changing the Trimmer Heads

To use the smaller trimmer head, remove the larger (18mm) trimmer head ⑤ from the unit by turning it 45° in an anti-clockwise direction. Gently lift-off the larger (18mm) trimmer head ⑤ from the unit and insert the smaller trimmer head ① into the unit. Lock it into place by following the reverse method of removing the trimmer head.

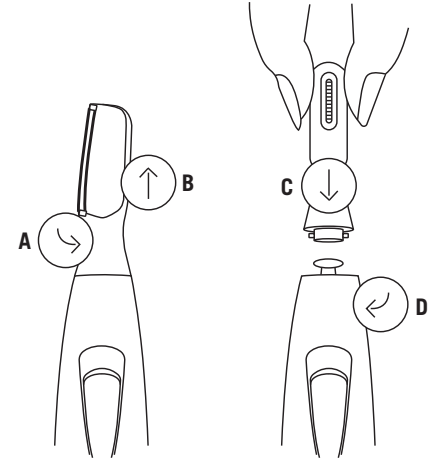

Taking Care of Your no!no![®] Precision Trimmer

Always turn off the appliance before cleaning.

Do not wash the main body of the device to avoid risk of damage caused by contact with water.

Use the cleaning brush ⑨ to remove any dust or hair from the trimming combs.

Remove the trimmer head by turning anti-clockwise and then lifting it up. You can rinse the detached trimmer head under warm running water.

Always ensure that the trimmer head is completely dry before attaching it back to the main body.

Attach the protective cap during storage.

We recommend you to lubricate the blades of the trimmer heads with 1 drop of lubricating oil twice a year or after cleaning with water.

If the device is not working properly **contact Customer Support** for more troubleshooting tips or go to **www.HowToNoNo.com**.

The no!no![®] warranty is only valid if no!no! has been used according to the instructions in this guide. Retain all receipts and original packaging.

Customer Support

US & Canada Customer Support: 888.525.7580

European Customer Support: +44 (0) 344 482 5089

For additional no!no![®] products make sure to visit:

US & CA: www.officialnono.com

United Kingdom: www.officialnono.co.uk

© 2017 ICTV Brands[®], Inc.

no!no![®] is a registered trademark of ICTV Brands[®], Inc.

Disposal

This product must not be disposed together with the domestic waste. All users are obliged to hand in all electrical or electronic devices, regardless of whether or not they contain toxic substances, at a municipal or commercial collection point so that they can be disposed of in an environmentally acceptable manner. Consult your local authority or your dealer for information about disposal.

The packaging can be reused or recycled. Please dispose properly of any packaging material no longer required. If you notice any transport damage during unpacking, please contact your supplier without delay.

 


Manufacturer



MPL Home Ltd, IMEX, 575-599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, United Kingdom.

EC Representative



MPL Home Ltd, IMEX, 575-599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, United Kingdom.



In accordance with our policy of continual product improvement, we reserve the right for technical and design changes without notice.

Warranty

Limited Warranty

This Limited Warranty covers the no!no![®] product. The warranty provides for the repair or replacement of the device or its component parts, free of charge, within the warranty period.

Note: Certain items, such as the trimmer heads and combs, are excluded from the coverage of this warranty, as they are spare parts/ consumables and subject to wear and tear.

The warranty period is valid for one (1) year. In certain circumstances, an extended

warranty may be available) from the date of the original purchase of the device. When making a warranty claim, you must provide the following information: product serial number, date of purchase, guarantor's name, address and phone number, together with the original sales receipt or invoice to verify the date of purchase. Any alteration or amendment of the purchase documents, including the sales receipt or invoice, or failure to present the purchase documents at the time a warranty claim

is made, will invalidate this warranty.

This warranty does not cover damage or deterioration:

1. Incurred or reported more than one (1) year or more when an extended warranty is purchased) after the date of purchase;
2. Incurred due to improper use of the device;
3. Due to the modification or repair of the device by an unauthorised third party;
4. Due to damage or

defects incurred during transportation or improper handling which were not reported at the time the product was received;

5. Due to humidity or any liquid or foreign body placed inside the device;
6. Due to the use of unapproved accessories or attachments with the device;
7. Due to use contradictory to the procedures shown in the device's user manual;
8. Due to Acts of God, natural events (floods, fire, lightning, etc.), force majeure or accidental or

deliberate damage; or

9. Due to the device being subjected to high dust environments or excessive humidity or temperatures or battery leakage.

This Limited Warranty specifically disclaims and excludes all other warranties, whether express or implied in law, including the warranties of merchantability and fitness for a particular purpose. Manufacturer shall not be liable for any incidental or consequential damages that result from the use of this device. This warranty does

not extend to any purchases made from anyone other than an authorised dealer in the no!no![®] device.

This Limited Warranty gives specific rights to purchasers of the no!no![®] Device; purchasers may have other rights that vary from country to country.

Technical Specifications

Name and model

no!no![®] Precision Trimmer

Power supply

1 x AAA 1.5V battery
(not supplied)

Dimensions

14.6 x 2 x 1.5cm

Weight

approx. 18 g

Item code

NON0025

EAN number

5020260124167

NON0025 06.17

no!
no!