
4 Tier Tapered Shelf Unit

Assembly Instructions - Please keep for future reference

OB406

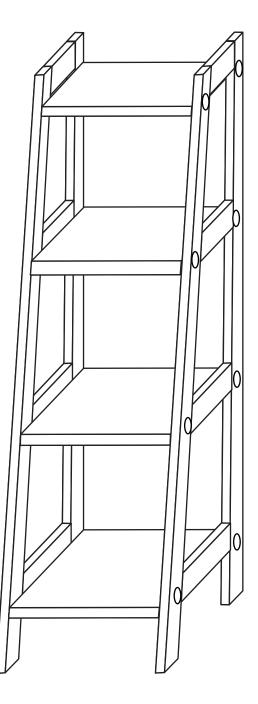

Dimensions

Width - 43cm Depth - 30.5cm Height - 90cm

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

Components - Panels


Please check you have all the panels listed below

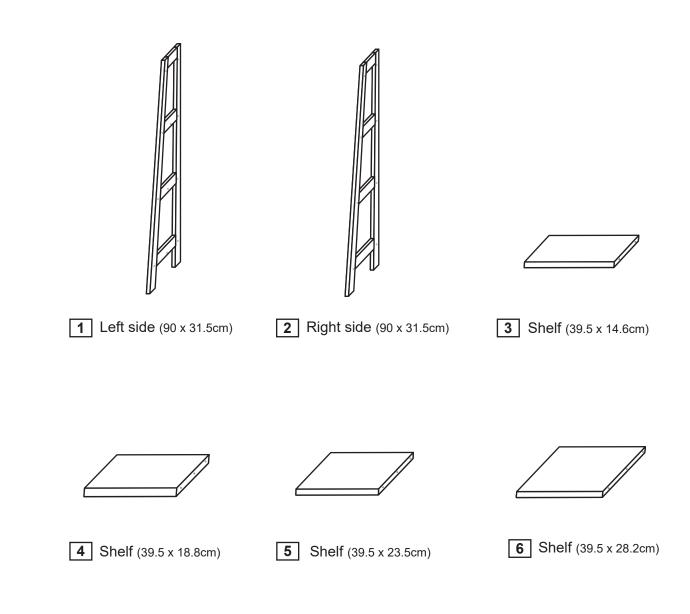


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

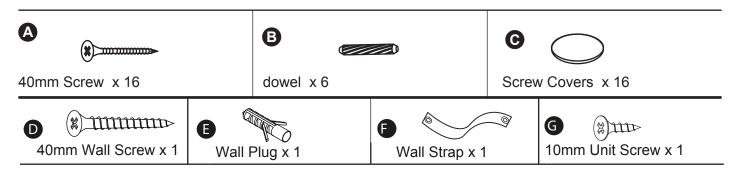

Tools required

 

Phillips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1

1. The following steps will be easier if the unit is assembled on its back. Connect Shelf 3 to left panel 1 with 2 x 40mm screw 4 using a Phillips Screwdriver

Note: Do not fully tighten any screws until the whole unit is assembled.

2. Insert 3 x dowels (2) into the ends of shelves (4) (5) and (6) These will then locate into adjacent holes in Panel (1)

3. Please now connect together with 6 x
40mm screws A using a Phillips Screwdriver

Step 2


1. Keeping the unit lay on its back, repeat the above step to attach Right panel 2 to the structure.


2. Once complete, tighten all screws using a Phillips Screwdriver and bring the unit to an upright position.

Step 3

1. To complete cover all screws with 16 x screw covers **O** as shown

Assembly Complete

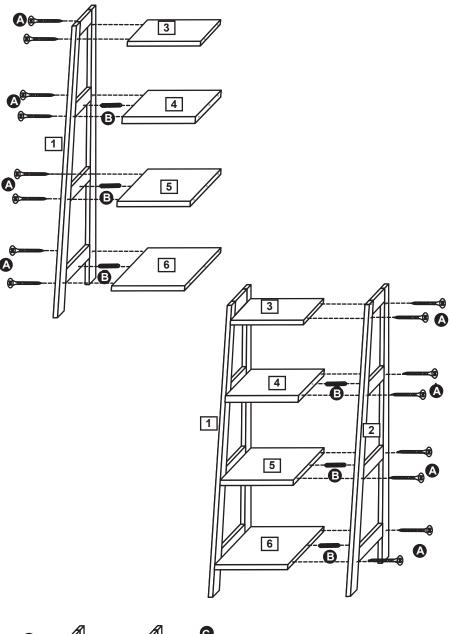

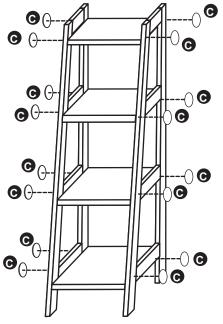

Assembly Instructions

Step 4

This 4 Tier unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Connect 1 x wall straps **F** to the reverse of the unit with 1 x screw **G** as shown

2.Move the units into desired position.


3. Mark the wall with a suitable scribe the position of the fixing hole.



Warning: Before driling,check wall for hidden pipes and cables.

4. Drill hole and insert wall plug


5. Secure the strap to the wall using wall screw **D**

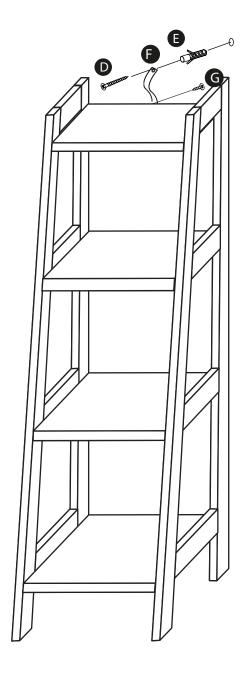

A Guide to Wall Mounting & Fixings

Important note:

 If plastic wall plugs(rawl plugs) are supplied with your product, e.g.:




- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.


Types of walls

 No.1"General Purpose" wall plug



Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2" Plasterboard" wall plug

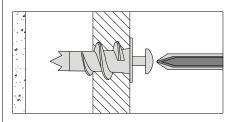

For use when attaching light loads onto plasterboard partitions.





Important: when drilling into walls always check that there are no hidden wires or pipes etc.

 
Make sure that the screws and wall plugs being used are suitable for **supporting your unit.Consult a qualified tradesperson if you** are unsure.

Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls,ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.3"Cavity Fixing" wall plug



For use with plasterboard partitions or hollow wooden doors.

 
No.4" Cavity Fixing - Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: always check the fitting and location to ensure your safety in and around the home.

 No.5"Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.4" Shield Anchor" wall plug heavy loads



For use with heavier loads such as TV and HiFi speakers and satelite dishes etc.

Fitting: from time to time check the fitting: to ensure the wall plugs or screws do not become loose.