

# SLUSH PUPPIE®



## SLUSHIE MAKER INSTRUCTIONS FOR USE

Product Ref: 9041\_v5 Voltage: 220-240V 50/60Hz. Power: 20 Watts.

## **USER INSTRUCTIONS & IMPORTANT SAFEGUARDS PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### **PRODUCT SAFETY**

When using electrical appliances, basic safety precautions should always be followed including; Carefully read through this instruction manual and warning texts before using this appliance, save this instruction manual for future reference.

- Always ensure the appliance is only used by a responsible adult.
- Always use this appliance on a stable level surface.
- Always ensure that hands are dry before handling the plug or switching on the appliance.
- Never immerse the appliance cord or plug into water or any liquid. This is to protect against electric shock.
- Always carry out regular checks on the appliance and power cord. In order to avoid hazard, should there be any sign of damage, do not attempt to use or repair. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. This appliance has no user serviceable parts.
- Always unplug this unit when not in use and before cleaning.
- Always allow the appliance to fully cool down before cleaning or storing.
- We do not recommend the use of any attachments or tools not included with this appliance.  
The use of these attachments may cause fire, electric shock or injury.
- Never use this appliance for anything other than its intended use. The appliance is for household use only. Do not use outdoors.
- Never allow children to use this appliance, close supervision is necessary when this appliance is in use near children.
- Never let the power cord hang over the edge of the worktop, touch hot surfaces, become knotted, trapped or pinched.
- Never place on or near a heat source.
- Never leave this appliance unattended during use.
- Never touch the exposed metal parts of the appliance during use as they will become very hot.
- Never operate this appliance by means of an external timer or separate remote control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction covering use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised — keep the appliance and its cord out of reach of children less than 8 years. This appliance is intended for domestic use only.

### **ELECTRICAL SAFETY — WARNINGS!**

Read these instructions thoroughly before using this appliance or connecting it to the mains supply. A 3 amp BS1362 ASTA approved fuse must be fitted. There are no user serviceable parts inside this appliance. In order to avoid hazard always refer servicing to a qualified service personnel. Do not allow this product to be exposed to rain or moisture during use or storage. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the appliance's rating plate. Connecting it to any other power source may cause damage. The mains lead of this product is not replaceable by the user. If the mains lead is damaged, the entire appliance should be replaced by a suitable qualified person in order to avoid hazard. In order to avoid hazard if the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted by a qualified person. The old plug must be disposed of safely because inserting it into a 13 amp socket could cause an electrical hazard.

### **BEFORE FIRST USE**

Remove any packaging material and any promotional labels. Before using for the first time, clean any removable parts with a soft sponge and washing up liquid. Thoroughly rinse with clean water and dry.

### **CARE AND CLEANING — WARNING!**

- Before cleaning your appliance, unplug it from the mains supply and allow it to cool down completely. Remove all detachable parts. Clean the outer surface with a soft damp cloth.
- Never immerse any other part of your appliance, its cord or plug in water or any other liquid.
- Always turn off the unit and allow to completely cool before cleaning.
- Please take care when handling any sharp edges or parts during cleaning.
- Clean the detachable non electronic parts in lukewarm water with some washing-up liquid and rinse them under the tap.
- Clean the outer surface with a soft damp cloth.
- Do not use coarse or abrasive cleaners or steel wool to clean the product.
- Never spray or apply cleaning products directly onto the appliance. If necessary, apply cleaner to a soft cloth instead.
- Do not place this item in the dishwasher.
- After each use please clean the central canister thoroughly. The central canister is sturdy but the metal is purposely designed to be thin. Salt should not be left in or on the canister after use, it can cause corrosion. The ultra thin canister allows the freezing cold temperatures to transfer to the outer wall, this design aids you in making the perfect slushies.

### **STORAGE**

Unplug the appliance before storage. Ensure that the appliance has completely cooled down and is clean before storing away. Store your appliance in its packaging box in a clean dry place. Do not allow this product to be exposed to rain or moisture during use or storage.

### **SERVICING**

In order to avoid hazard, if you drop or damage your appliance it should not be used until it has been examined by an authorised service centre or appliance technician. Always refer servicing to qualified service personnel. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

**TECHNICAL SPECIFICATIONS Voltage: 220-240V 50/60Hz. Power: 20 Watts. Capacity: 1 litre**

## DESCRIPTION OF PARTS

- 1 Motor Base
- 2 Mix/Off/Dispense Switch
- 3 Drive Sprocket
- 4 Drinks Tray
- 5 Tap
- 6 Tap Handle
- 7 Slushie Container
- 8 Locking Notch
- 9 Ice/Salt Inlet Cap
- 10 Ice/Salt Inlet
- 11 Syrup Inlet
- 12 Ice Canister Cage with Ice Paddle Locking Clips
- 13 Slushie Blades
- 14 Ice Canister
- 15 Ice Paddle Assembly
- 16 Canister Lid
- 17 Canister Lock

\*NOTE: Illustrations may differ from actual product

## ASSEMBLY

**Before First Use:** Carefully wash all parts with warm soapy water and dry thoroughly. Do not immerse the motor base in any water or any other liquids.

 
 
 
 
**NOTE:** Do not plug the power cord into the mains supply until the unit is fully assembled. - Place the slushie container onto the motor base, ensuring the container is sitting correctly on the drive sprocket. The tap should sit directly above the drinks tray.

- Insert the ice canister cage into the ice canister, ensuring the base fits into place.
- Place the ice canister into the ice paddle assembly, ensuring the clips line up with the 3 indents. Carefully push each clip into place, checking each one is properly seated.
- Insert the assembled ice canister into the slushie container. Check that it is properly seated.
- Fit the canister lid into place, ensuring the SLUSH PUPPIE® logo is at the front. Place the front end on first, then secure the locking catch onto the rear locking notch of the canister.
- Fit the inlet cap over the ice/salt inlet.

## USING YOUR SLUSHIE MAKER

**Before You Begin:**

- Make up your SLUSH PUPPIE® syrup mixture in a jug, following the instructions on the syrup bottle. Chill for best results.
- The slushie maker can make a maximum of 1 litre of slushie mix in one go. Please note, the slushie mix will reduce in volume when the ice starts to form.
- Do not exceed the maximum of 1 litre of liquid in the slushie container, any more slushie mix will result in it spilling into the ice canister and mixing with the salt and ice.
- Before starting the slushie maker, check the slushie container and the canister lid are firmly in place.
- To start the unit, press the Mix/Off/Dispense switch to position I (mix) or position II (dispense).
- Ensure the tap is in the closed position before pouring in your slushie mix.

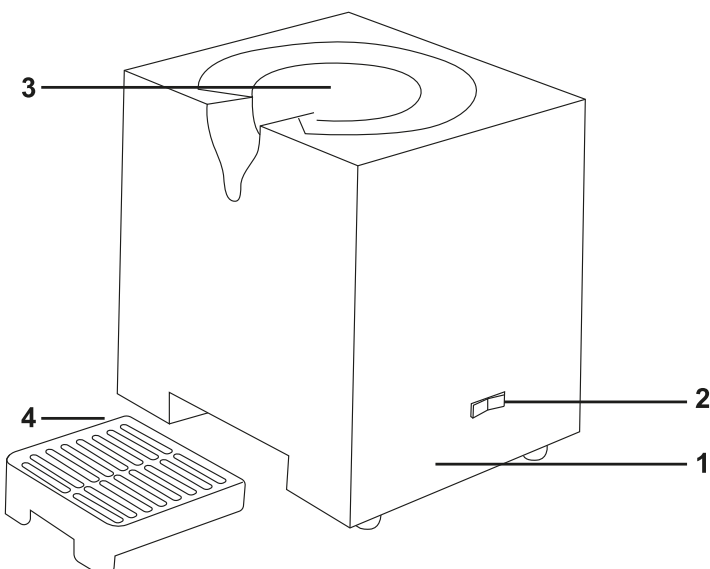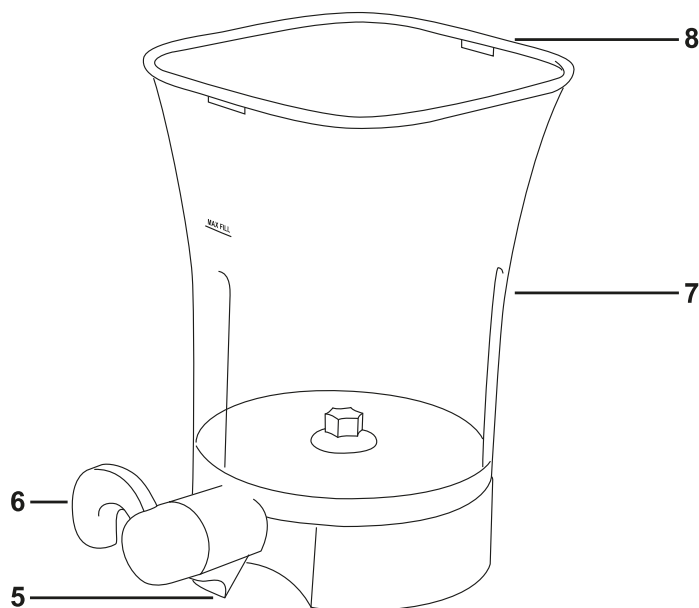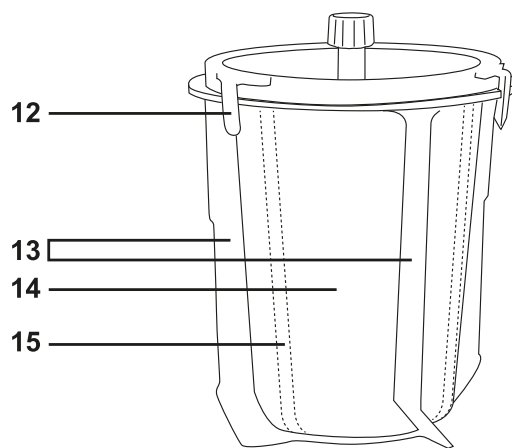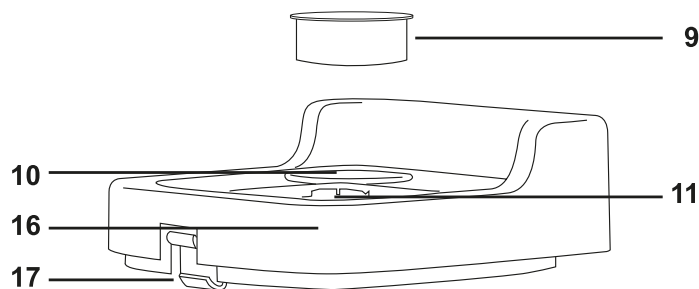

# MAKING SLUSH PUPPIE® SLUSHIES

Watch the instructional video at <http://www.fizzcreations.com/slush-puppie-video/>

1

Start the machine by pressing Mix/Off/Dispense switch to position I (mix).



MIX

Important: Machine must be working before you add ice, otherwise the motor or blade could freeze.



2

Remove inlet cap and half fill the central ice canister with ice



3

Pour 2 inlet caps of salt into the central ice canister



4

Pour 40ml of water into central ice canister



5

Fill the rest of the central canister with ice cubes.

Note: The ice level should be at least 3cm below the rim of the ice canister.



6

Pour a further 3 inlet caps of salt into the central ice canister





7

Pour a further 40ml of water into the central ice canister



8

Fit the inlet cap to the lid



9

Slowly pour your syrup mixture through the syrup inlet located at the rear right of the lid.

Note: Do not exceed the 1 litre limit.



10

Leave the slushie machine running for approx. 15 to 25 minutes.

Note: The amount of time until the desired consistency is reached may vary depending on how warm the surrounding environment is.



11

Add more ice cubes and salt to the central ice canister when the level drops.

Note: Keep the level at 3cm from the top, do not fill higher than this.



12

When peaks form, the slushie mixture has reached the best consistency.



**AFTER USING THE MACHINE PLEASE WAIT AT LEAST 15 MINUTES BEFORE USING AGAIN TO ALLOW THE MOTOR TO COOL.**

**WARNING:** If the blade is frozen and is blocking the motor from spinning, turn the machine OFF, move the frozen blade and restart the machine.

**Possible reasons for the mixture not chilling/freezing:**

- The ice canister was not cold enough, more ice and salt should have been added.
- The mixture was too warm.
- Do not store slushies in the freeze or fridge. They should be consumed immediately.

**Syrup Trouble Shooting** - Please ensure you have checked the label on your syrup bottle. This will tell you at what ratio to mix your syrup with water.

**Recommended syrups** - We recommend that you use the SLUSH PUPPIE® branded syrup. This is mixed with water at a 5 to 1 ratio.

**Suggested Drinks** - You can use any drink with a high sugar level in the SLUSH PUPPIE® Machine. For example, fresh orange juice or fizzy cola.

For the very best results (and faster slushies!) freeze the ice canister for one hour before making slushies.

## DISPENSING SLUSH PUPPIE® SLUSHIES



I = mix



II = dispense



## **DISPENSING SLUSHIES**

- To pour out your slushie mixture, move the Mix/Off/Dispense switch to position II (dispense).
- Place a cup or glass onto the serving tray, then turn the handle clockwise to the pour position.  
The mixture will then begin pouring.
- To stop dispensing, turn the handle anti-clockwise.
- Press the Mix/Off/Dispense switch to the off position when you are finished.

## **HELPFUL HINTS**

- Chill your SLUSH PUPPIE® syrup mixture in the fridge or freezer for a few minutes before pouring into the slushie container for best results.
- Slushie mixtures with higher sugar content will reach the desired consistency quicker than mixtures with lower sugar content.
- Always start with liquid mixtures when preparation begins, not frozen mixtures.
- Do not add thick liquids or solids to the slushie mix.
- Do not operate the unit for longer than required. Do not use for longer than 40 minutes of continuous use.

## **TROUBLESHOOTING**

### **Possible reasons for the mixture not chilling/freezing:**

- The ice canister is not cold enough, please add more ice and salt.
- The mixture added is too warm.
- Consume the slushies as soon as they have been served.
- Freeze the ice canister before use.

**Voltage: 220-240V 50/60Hz. Power: 20 Watts.**

**WARNING!** This is not a toy. Wash before first use. Not suitable for dishwasher use. Remove all packaging before use. Unplug before cleaning. Do not immerse electrical parts in water or any other liquid. Keep out of the reach of children. Indoor Use Only. Read the instructions carefully before use and retain this information for future reference. WEEE product should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority. ©2017 SLUSH PUPPIE®, SLUSH PUPPIE® is a registered trademark of The ICEE Company, a Subsidiary of J&J Snack Foods Corp. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



6 Commerce Way  
BN15 8TA, UK  
[www.fizzcreations.com](http://www.fizzcreations.com)

© 2017 Fizz Creations Ltd. All rights reserved.