

Solar 365 Safety Operating Instructions

Thank you for purchasing this Solar 365 product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Please Note

- This battery-operated item is designed for indoor and outdoor use.
- Uses non-replaceable LEDs (light emitting diodes), which last longer than traditional incandescent (or filament) bulbs.
- This set operates on:
 - Bulb rating: 3V 0.02A 0.06W
 - Solar panel: 6V 60mA
- Use only AA size Ni-MH 3X1.2V 600mAH rechargeable batteries (included)
- It is recommended that NOMA rechargeable batteries be used for maximum performance

Instructions for use

1. Carefully remove the product from the packaging.
2. The power button is located on the solar compartment.
3. To turn on, press the button once. The set is now ready.
4. The same button operates all 8 functions. Click until you achieve the desired setting.
5. This product has a dusk sensor so will turn automatically on when it detects dusk and operate for 6 hours.
6. To turn the unit off, hold the button for 5 seconds.
7. On first use, it is recommended that the set be placed outside for 5 hours minimum to boost the battery charge.
8. Weather and positioning plays an important role in the operation of this light set. Please ensure this solar light set is positioned where the solar panel can absorb maximum daylight. Shady positions will have an effect on long term operating time.
9. The chosen position should not be close to other strong sources of light such as street lamps or security lighting which will also effect long term operation.
10. The solar panel is directional so please ensure it is positioned facing the maximum exposure to direct sunlight.

Changing the Batteries

- Use only recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of a different type.
- Batteries are to be inserted with the correct polarity. The supply terminals are not to be short circuited.
- Always remove exhausted batteries from the product.
- Remove batteries if the set is not used for extended periods of time.
- Do not attempt to re-charge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the item before recharging. Rechargeable batteries are only to be charged under adult supervision.
- Batteries contain substances that may be harmful to the environment and human health.
- Keep out of reach of children and seek immediate medical help if swallowed.
- Never throw batteries in a fire or attempt to open the outer casing.
- It is recommended that all 3 batteries are replaced annually for maximum performance.

Warnings

- This product is a decoration not a toy. Keep out of reach of young children as may contain small parts that could represent a choking hazard.

CE – Complies with the RoHS Directive



This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Customer Support



NOMA Customer Services
LeisureGrow Products Ltd, Dewmead Farm,
New Inn Road, Hinxworth, Hertfordshire, SG7 5HG



consumerservice@leisuregrow.com



01462 744500

Please retain this information leaflet for future reference.