 


Occasional Table

Assembly Instructions - Please keep for future reference

051 xx 2580

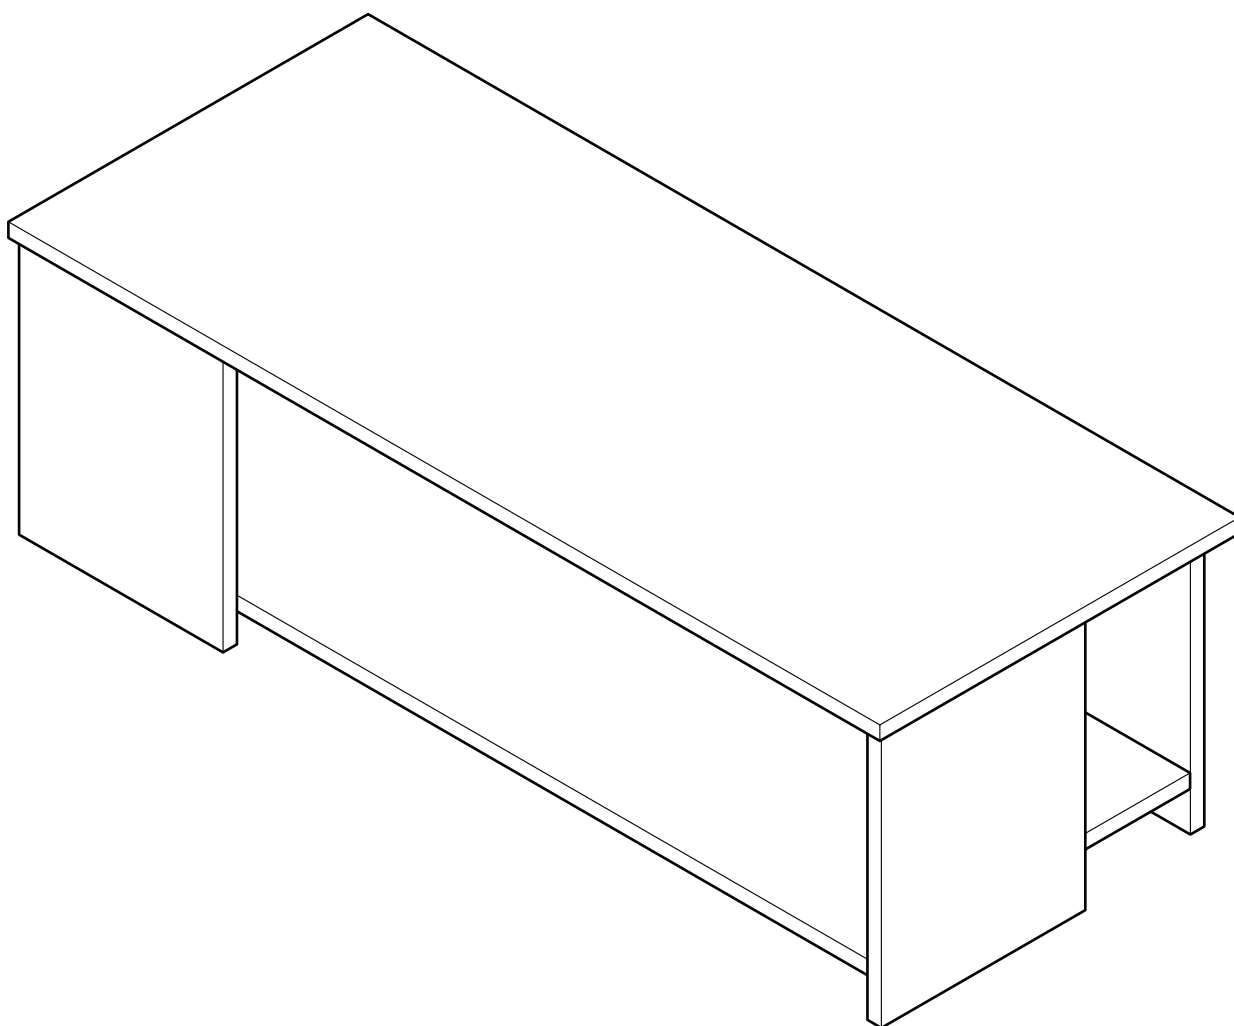

Dimensions

Width - 94cm

Depth - 38.8cm

Height - 29.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 01709 534123**
Please turn to back page for important information when contacting Customer Helpline.



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Do Not dispose of packaging until assembly complete.**

- Dispose of all packaging carefully and responsibly when assembly complete.

Care and maintenance

- To protect the furniture, position the furniture out of direct sunlight and away from direct heat sources such as radiators and fires.

- Do not place the furniture in excessively dry and humid conditions.

- From time to time check that there are no loose screws on this unit.

- Always lift furniture when moving it (do not drag) otherwise the joints may be damaged.

- Do not place hot or cold objects on the surface, always use protective mats to avoid marking the furniture.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

- Clean spills up immediately

- Dust surfaces with a soft, dry, lint free cloth.

- More stubborn marks can be removed using a damp (not wet) cloth. Wipe the surface dry immediately using a soft lint free cloth.

- Do not use detergents, abrasive cleaning products or cleaning products that contain ammonia, solvents or silicone as these may damage the surface finish.

Components - Panels

 
Please check you have all the panels listed below



Important - Thick lines  indicate finished edges



8770 Top (94 x 38.8cm)

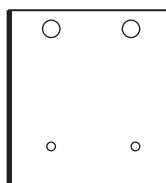

8772 End Panel **x4**
(28 x 22cm)





8771 Bottom (90 x 34.8cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly, In some case more fittings may be supplied than are required.

A 	Large cam x 16 Code 760001103	B 	Metal dowel x 16 Code 760003004	
----------------------------------------------------------------------------------------------	----------------------------------	----------------------------------------------------------------------------------------------	------------------------------------	--

 Tools required




 Cross headed screwdriver
(medium & large)




Tape Measure

 Ruler - Use this ruler to help correctly identify the screws

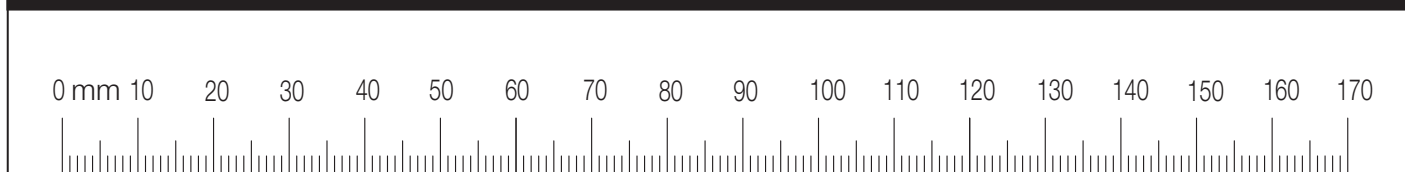


Components - Exploded View

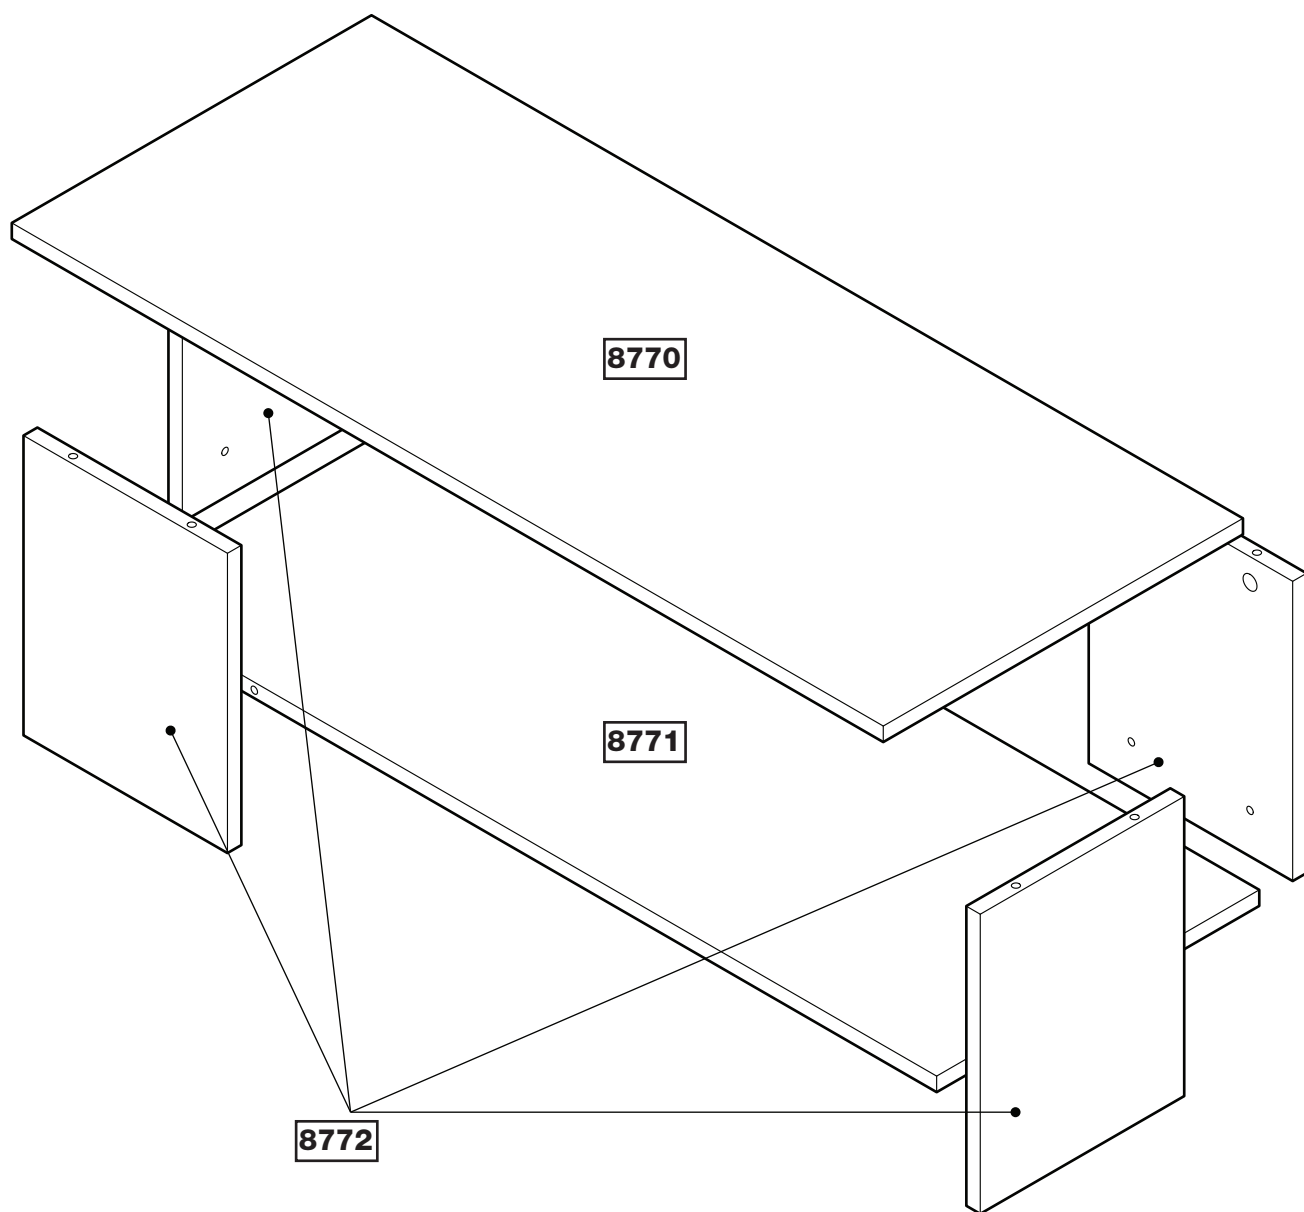 


Assembly Instructions

Step 1

 
Fitting cams & dowels to top, bottom and end panels.

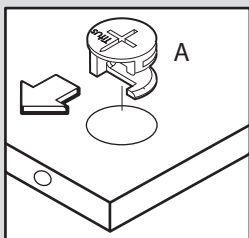

 Note: Ensure cam arrow points towards the edge with hole.

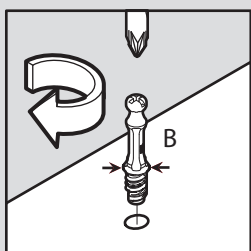

 Note: Insert metal dowels 'B' as far as shown by arrows.
Do not over tighten.

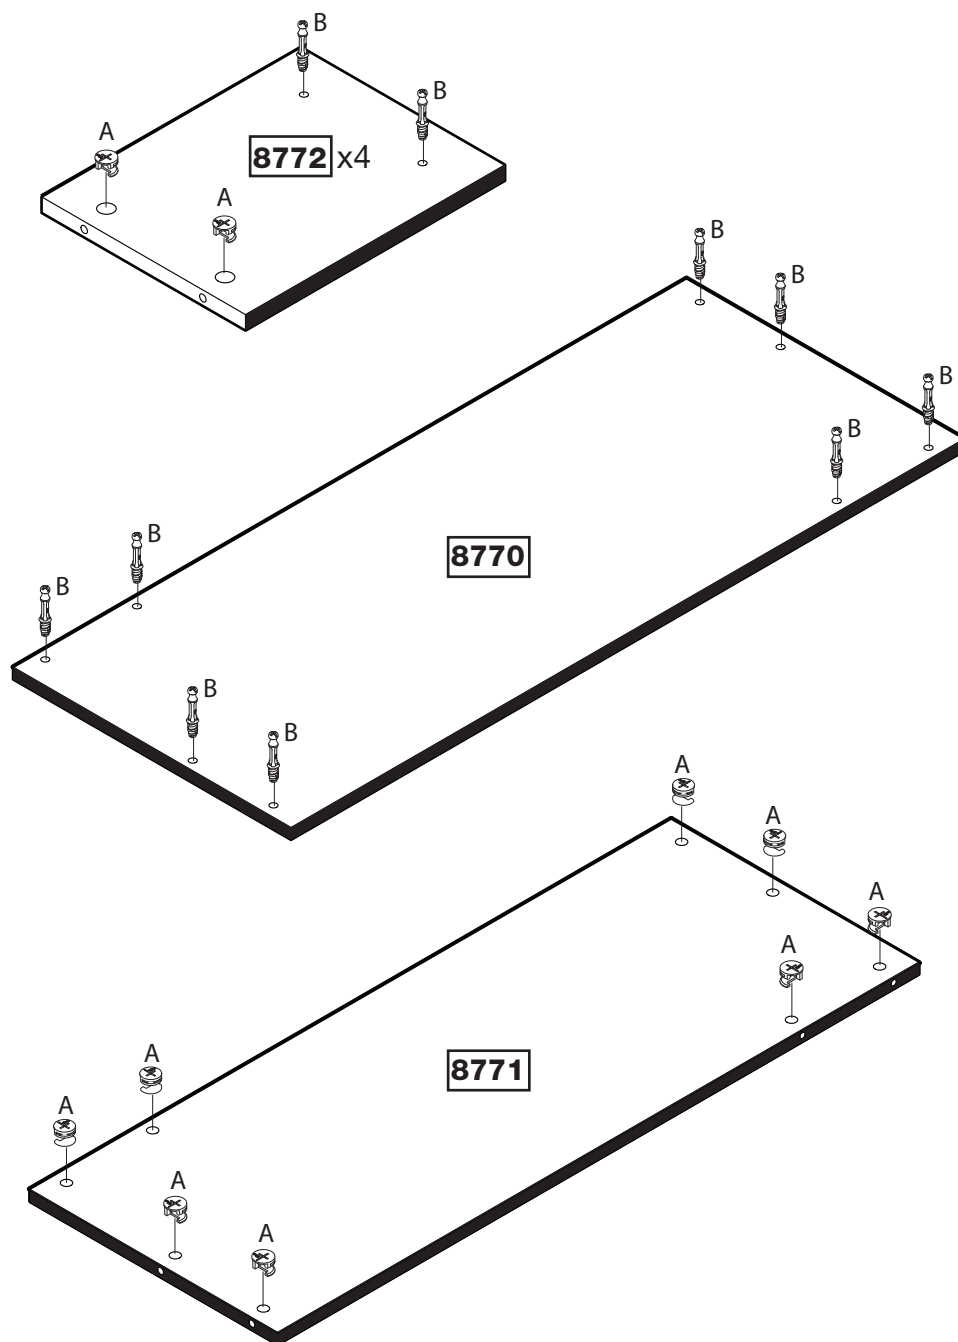


Assembly Instructions


Step 2

Attach end panels to the bottom panel.

 Insert dowels in the end panels into the cams (already inserted) in the bottom panel.

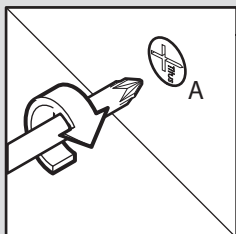


Turn cam 180 degrees to lock

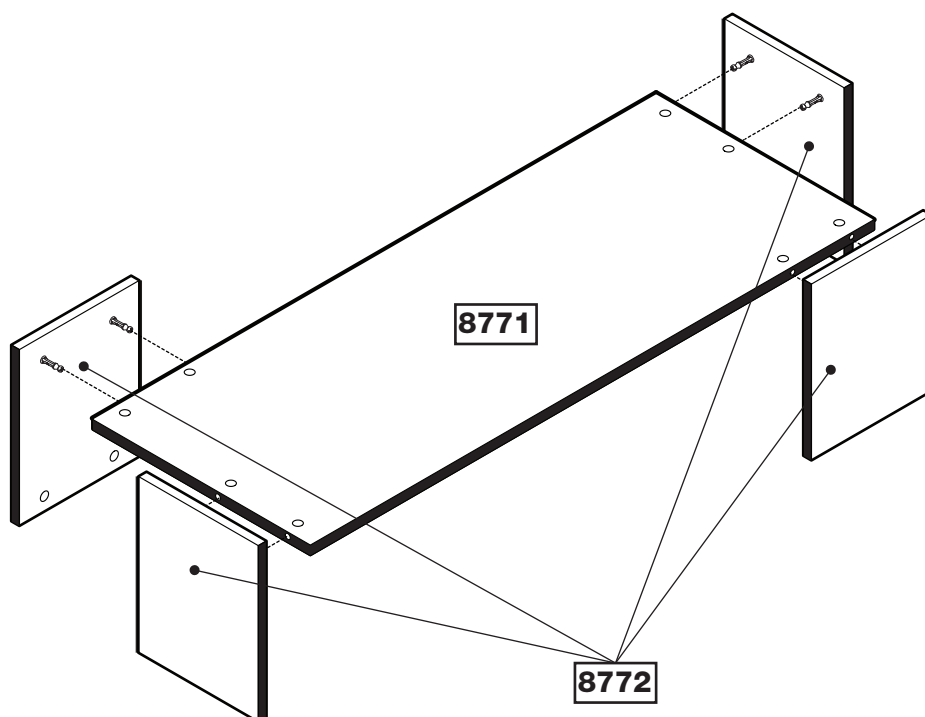 

Step 3


Attach the top panel.

 Lift the already assembled panels onto the top panel. Take care when lining the cams and dowels up so as not to cause damage to the end panels.

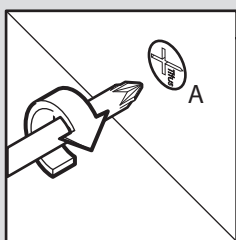


Turn cam 180 degrees to lock.

 Turn unit upright once step 3 is complete.

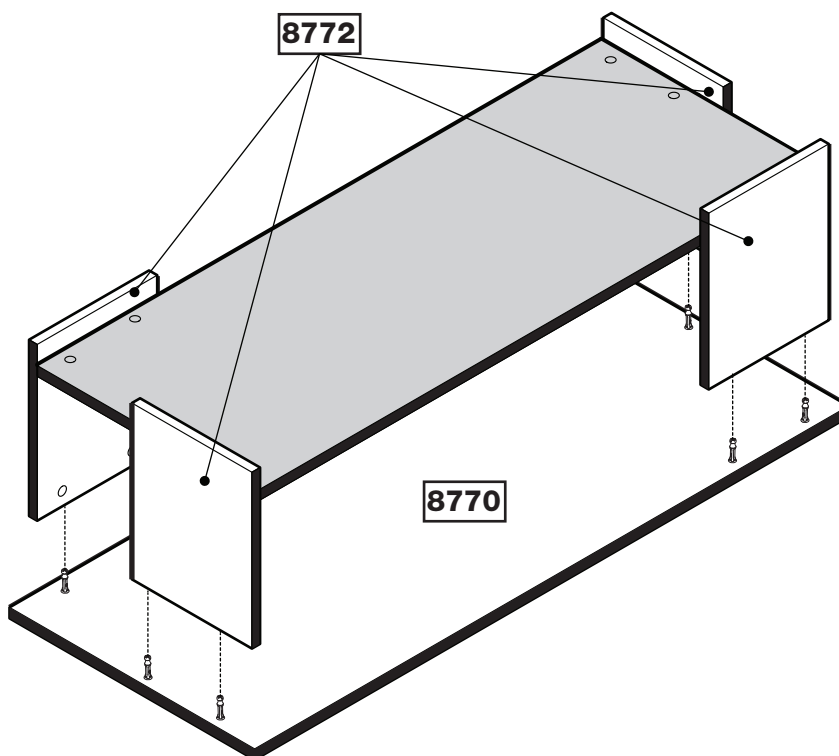

Congratulations! Your unit is complete.

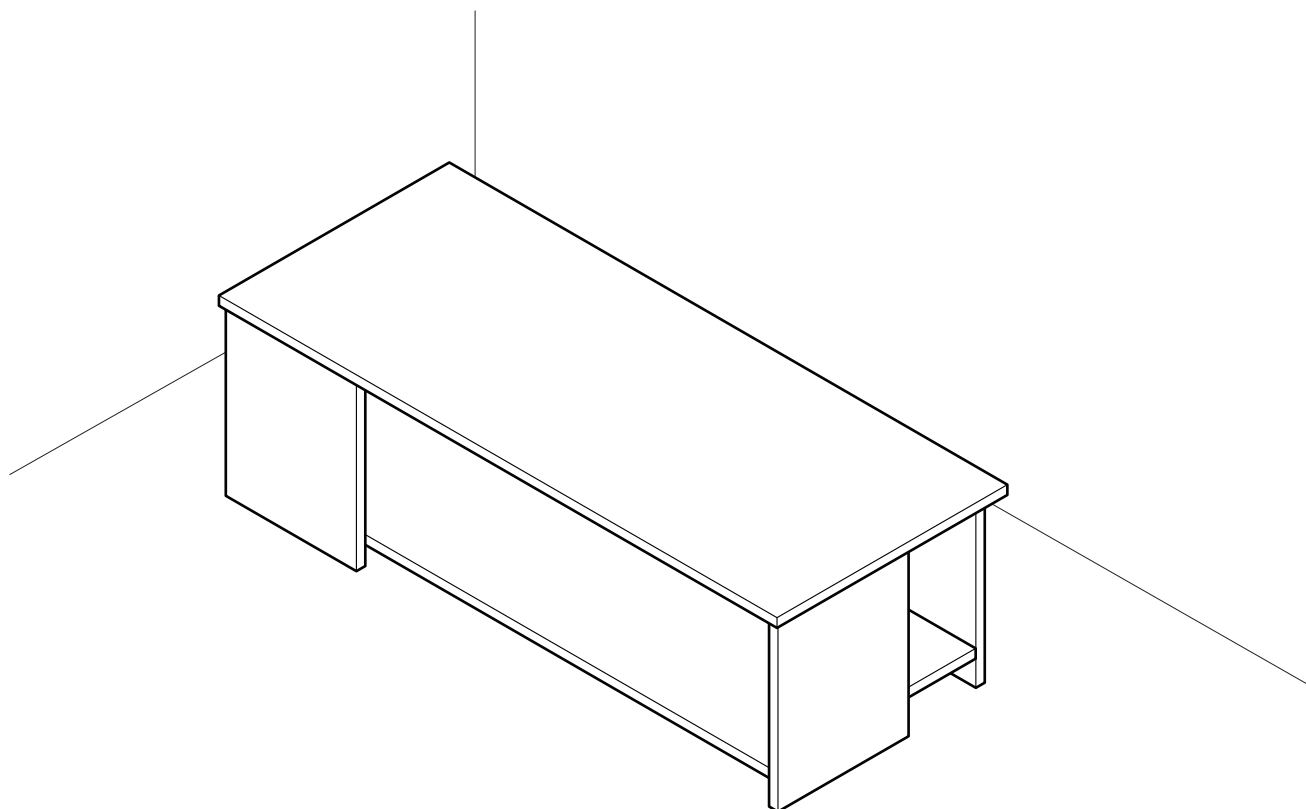 

Important Information

If you need help or have damaged or missing parts, call the **Customer Helpline:**

01709 534123

8am - 4.30pm (Monday to Thursday)

8am - 2.30pm (Fridays)

(by contacting the customer service line your statutory rights are not affected)

Please have the following information to hand:

- >> Unit Description
- >> Product Code
- >> Product Colour
- >> Place of Purchase
- >> Catalogue Ref. No.
- >> Item Code
- >> Assembly Instructions

We do have an answer machine should you contact us out of office hours, so in addition to the above information could you leave your name, address, daytime telephone number and the nature of your call on the answerphone. All calls will be actioned asap.

You can also e-mail your requests to us at:

customer.helpdesk@addspacefl.co.uk

Alternatively, you can write to us at: **Customer Service Department, Addspace Furniture Limited, Braithwell Way, Hellaby Industrial Estate, Hellaby, Rotherham, South Yorkshire, S66 8QY.**