 




Nebraska Dresser

For your new world

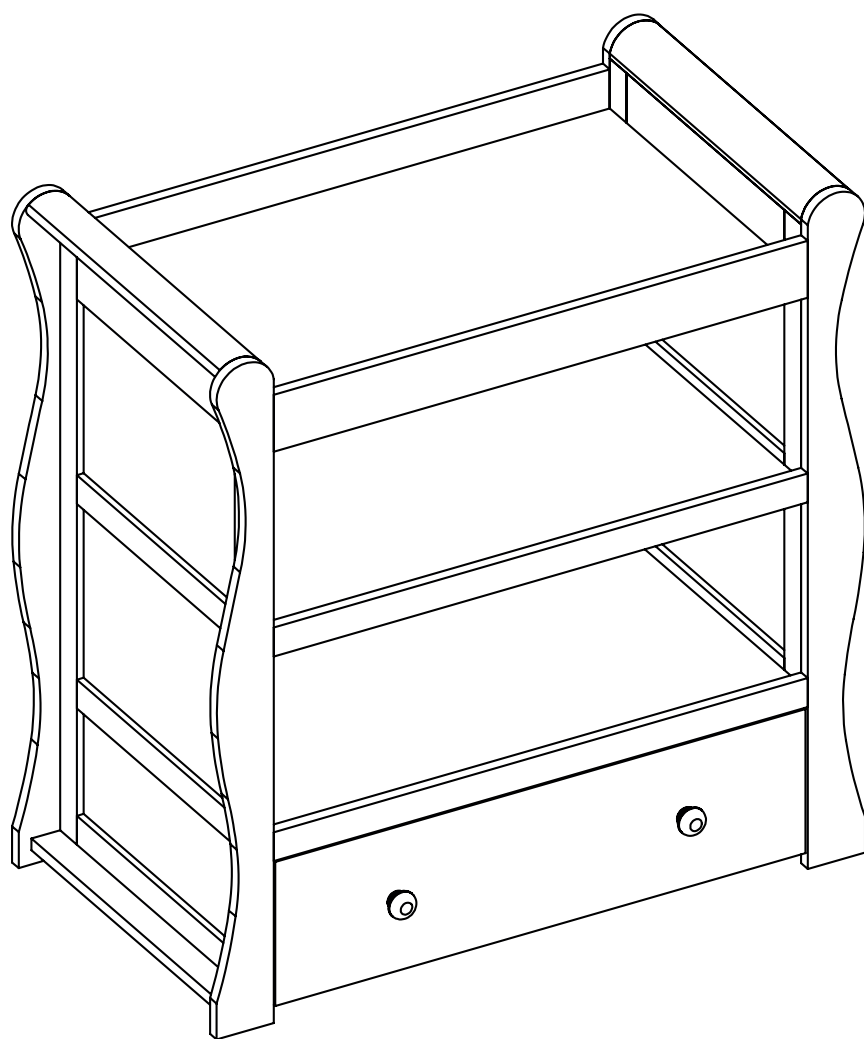

**Assembly and care
instructions**

IMPORTANT!

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Thank you for purchasing an East Coast product. It's been carefully designed and constructed to offer quality, safety and reliability for you and your baby.

If you have a query about this product or require replacement parts, please contact 01692 408802.

 
Your child's safety is your responsibility. Keep children clear during assembly as the fittings pack contains small parts which may present a choking hazard. Please read the instructions and warnings carefully before use.

Lay out the parts on a soft level surface and compare to the parts checklist. Don't throw away any packaging until you're sure that you have all the parts.

You will need the following tools to complete assembly:

Flat-headed screwdriver and cross-point screwdriver


Hardware




A x 12



 
B x 12



C x 16

 


D x 8

 


E x 4



 F x 4




G x 2

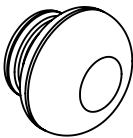 


H x 2

 Wooden Parts

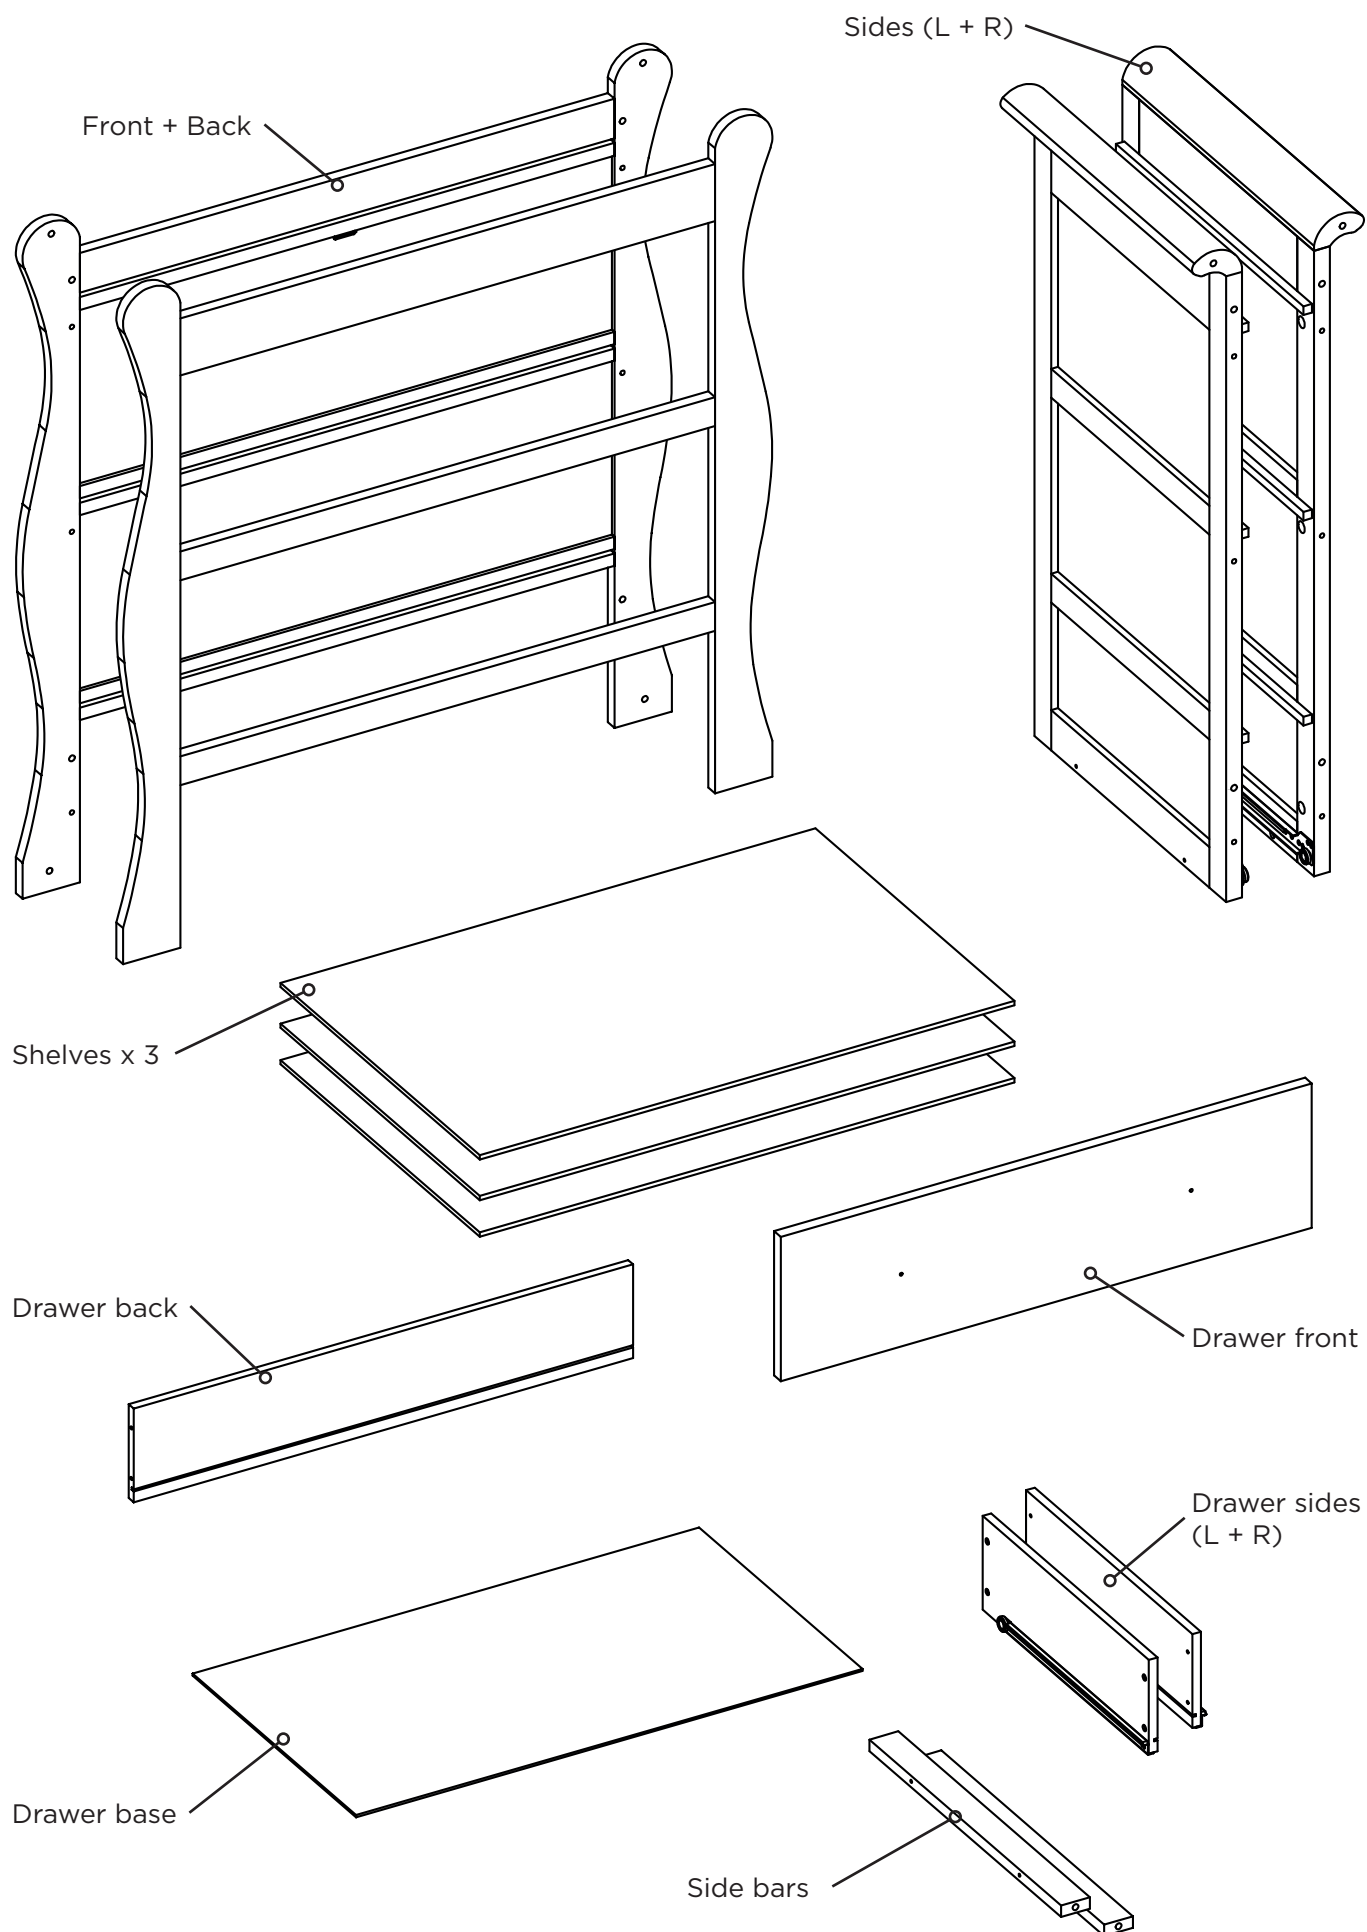



Assembly 1

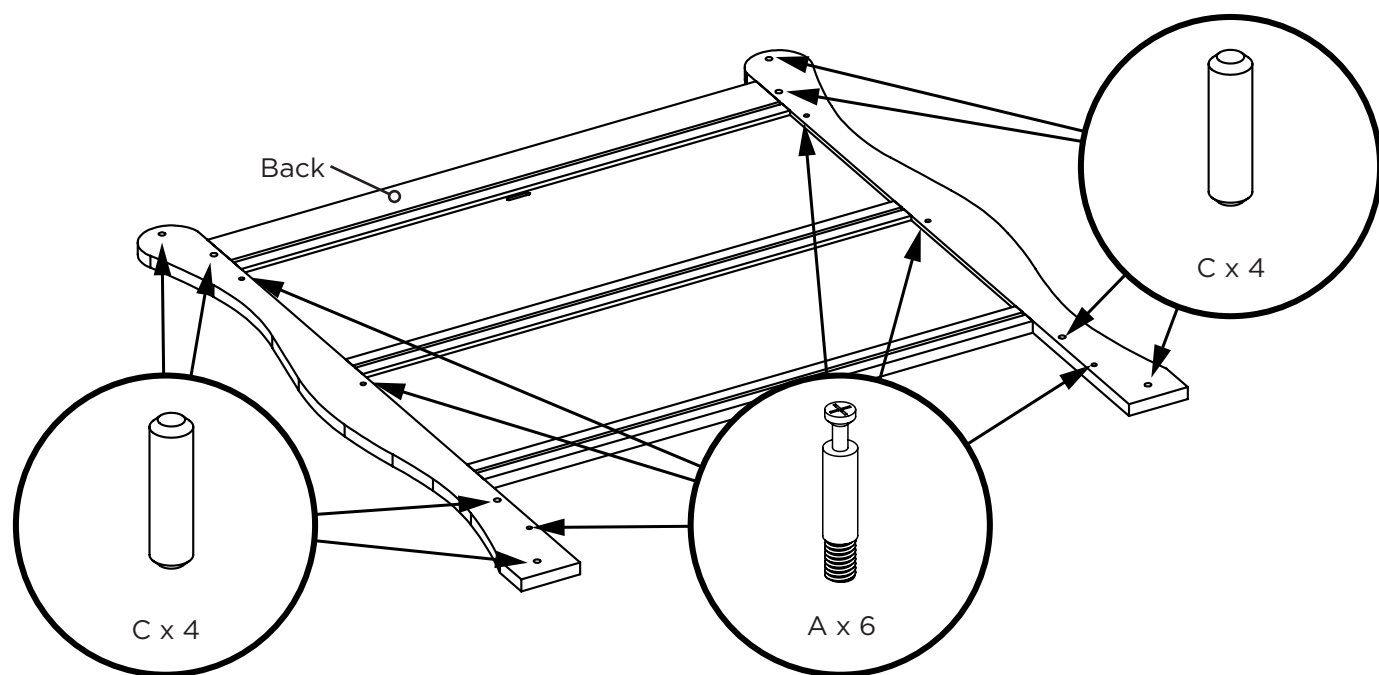 

Note: Repeat for front.


Assembly 2

  With cam pin inserted, turn cam nut clockwise to tighten.

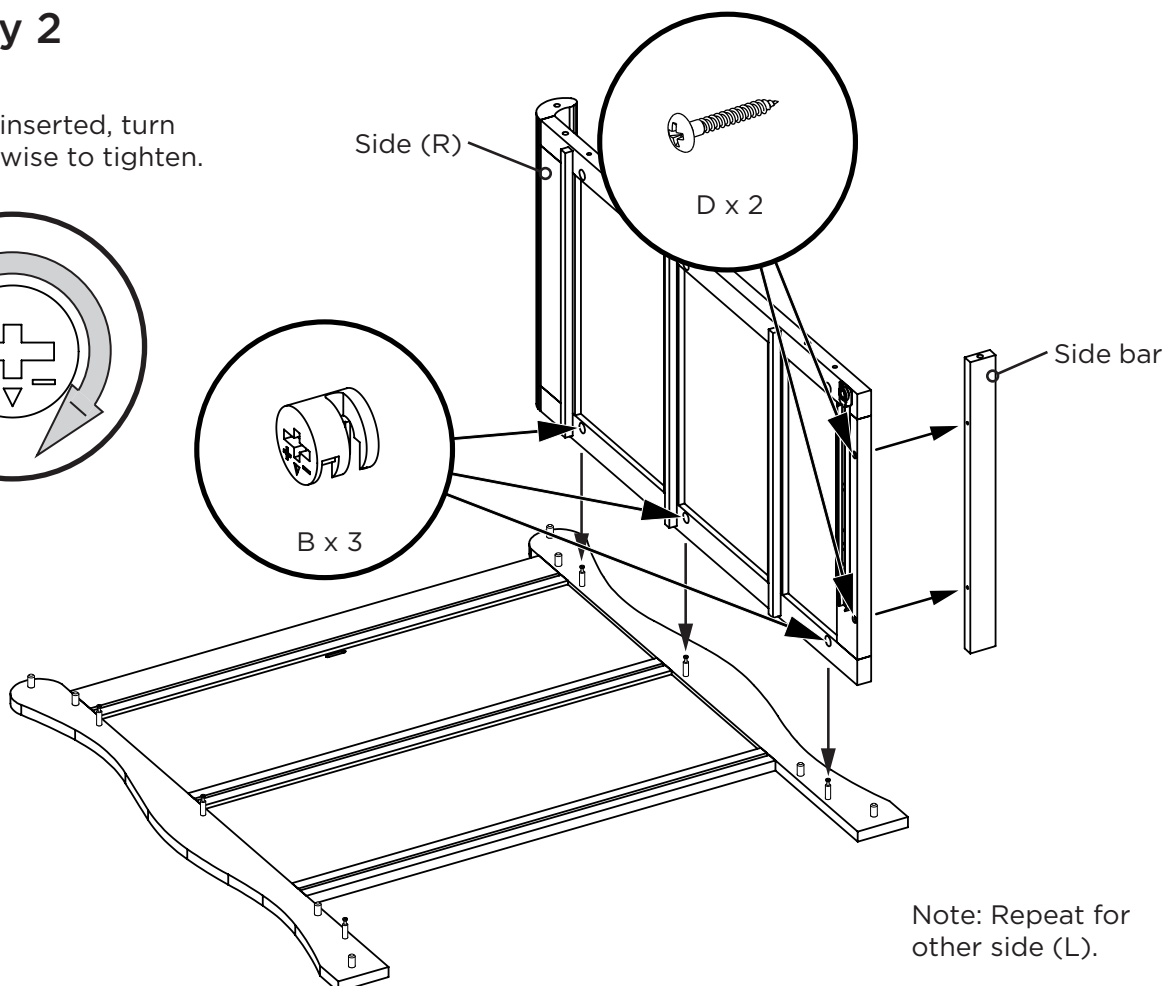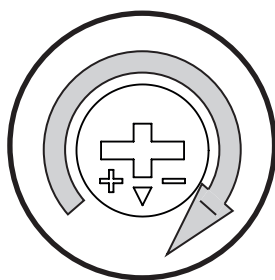



Note: Repeat for other side (L).

 Assembly 3

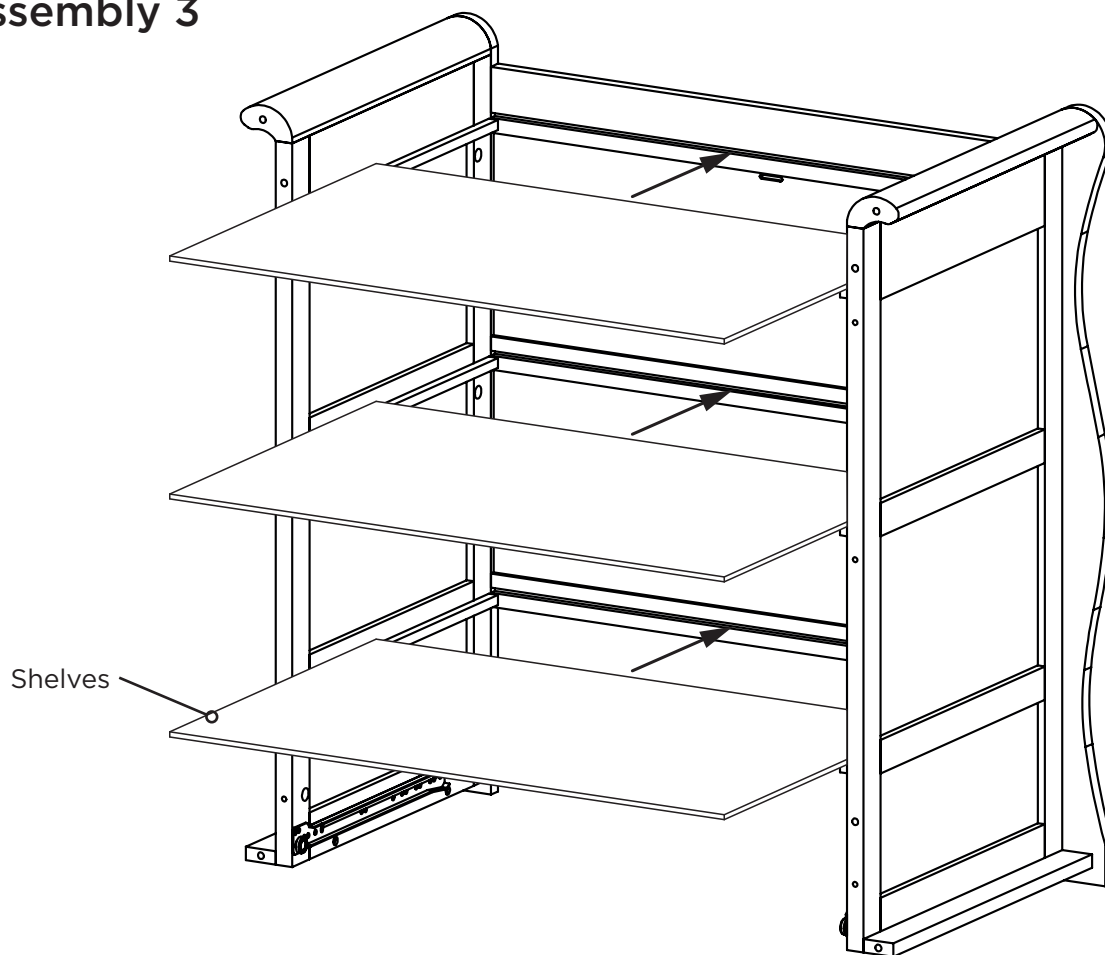


Assembly 4

  
With cam pin inserted, turn cam nut clockwise to tighten.

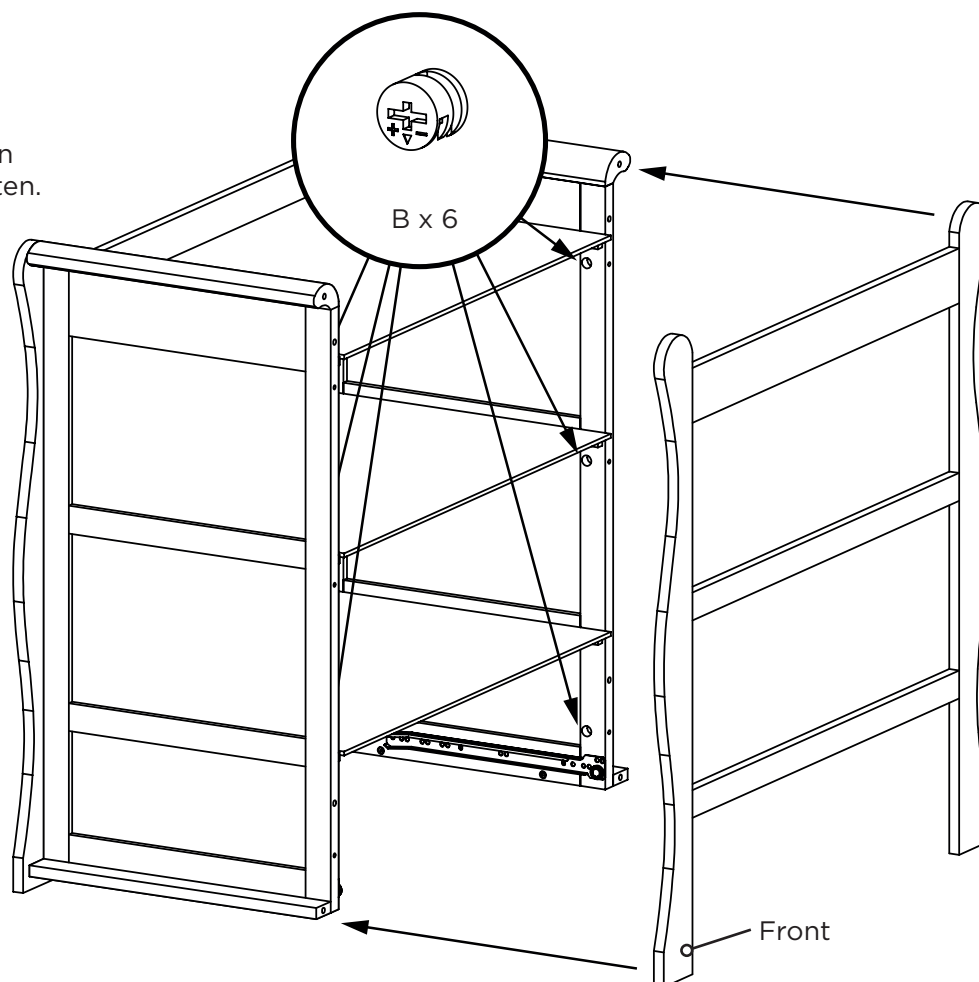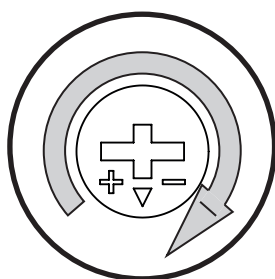

Assembly 5

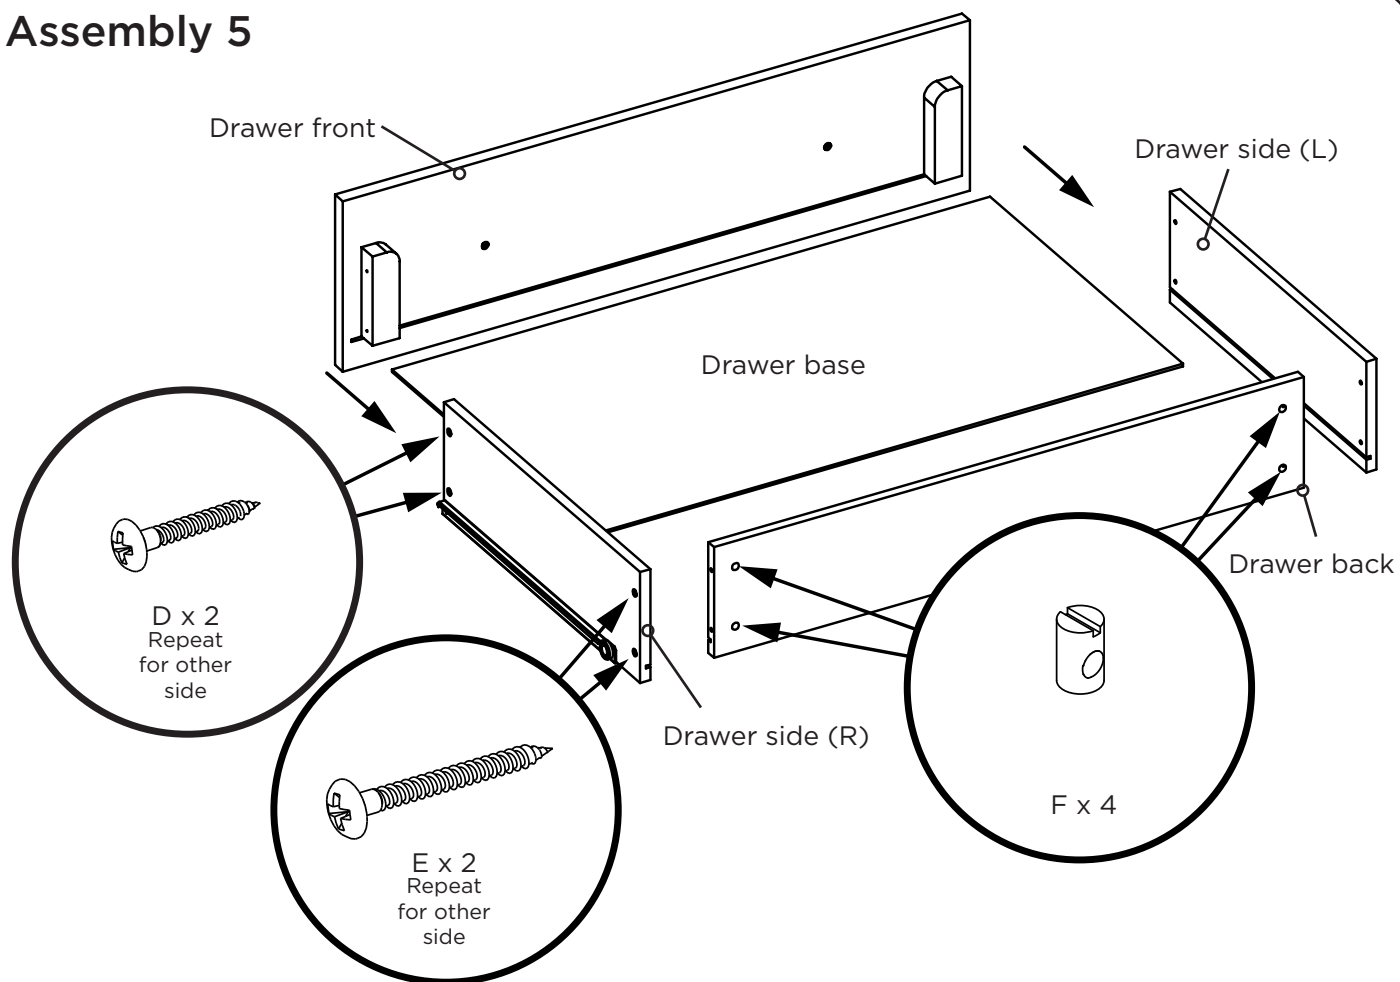 


Assembly 6

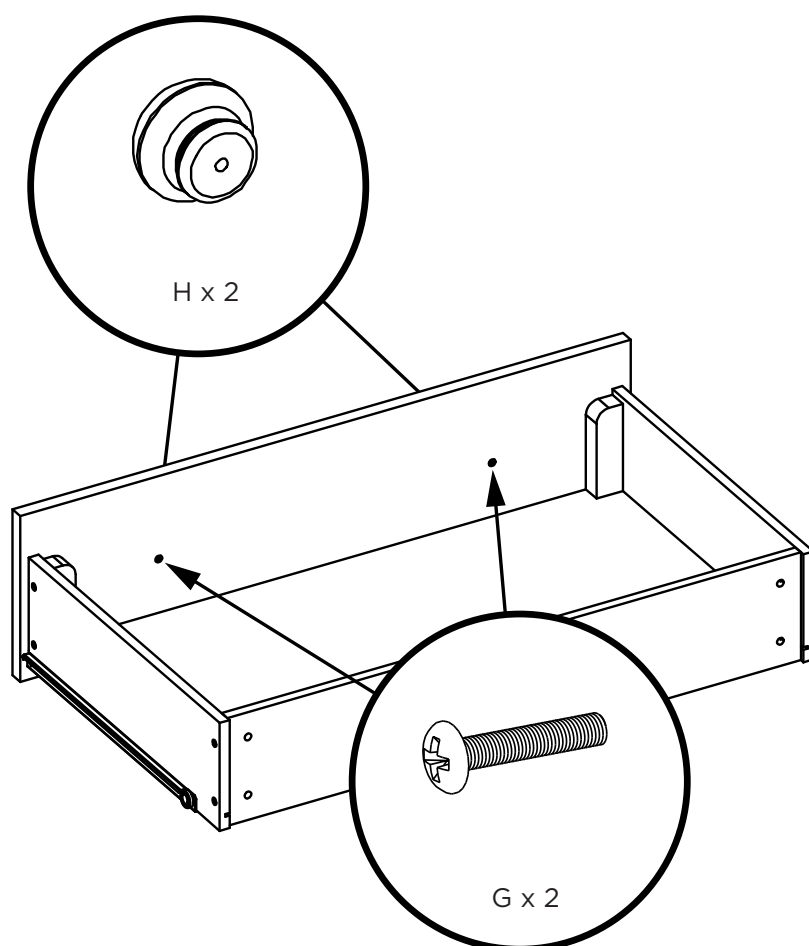 


Assembly 7

 
The dresser is supplied with a fixing kit which will secure it and help to guard against accidental tipping.
WARNING : Installation only to be carried out by a competent person.
 Check the suitability of the wall before fitting.




Washer x 2

 


Screw (short)

 

Screw (long)

 




 
Plastic wall plug
(for brick and masonry wall
use only)




Fabric strap

1. Place the dresser against the wall where it is to be fitted and mark the wall through the slot in the back.
2. Move the dresser away and using the long screw, washer and the appropriate wall fixing attach the fabric strap to the marked position.
3. Replace the dresser and thread the fabric strap through the slot in the Back Panel.
4. Attach the fabric strap to the back frame using the short screw and washer.

    
Before use, ensure that the strap is securely fixed to both the wall and the dresser.

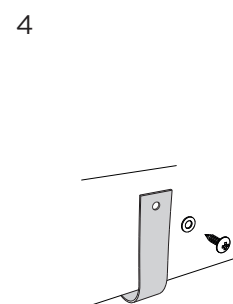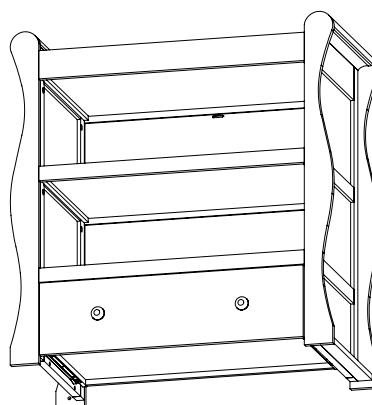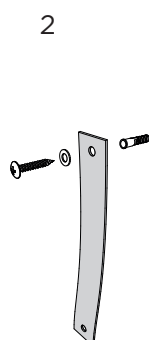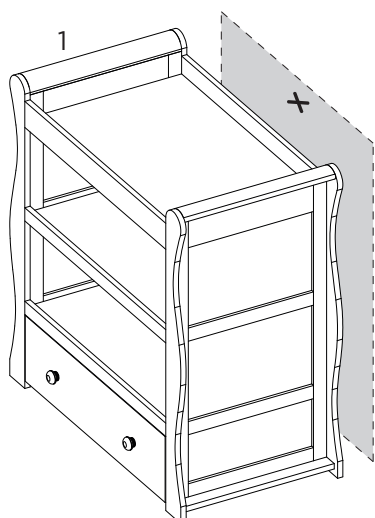

 
The type of wall fixing you will require depends on the construction of the wall.
 See below for details. If in doubt, seek professional advice.

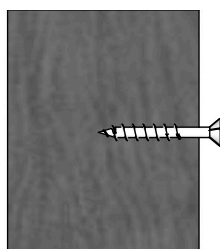

 Wood: If fixing to wood make sure that it isn't chipboard as screws can easily pull away the core structure.

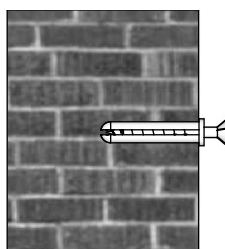

 Brick or masonry: Use the wall plug, provided you are sure that your wall is sound.



Cavity wall: Special toggle wall plugs needed. Seek expert advice.

Care and maintenance

All assembly fittings should be tightened properly and should be checked regularly and re-tightened as necessary. Take care when moving the furniture, as careless handling may cause damage.

Cleaning is simple; just wipe over with a damp cloth, and avoid using strong detergents or abrasives.

An occasional light application of a wax polish will help maintain the finish.

In use

Warning: Do not leave your child unattended.

Ensure that all fittings are tightened properly. Loose screws could allow a child to trap part of their body or clothing, posing a strangulation risk.

Be aware of the risks of open fires and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.

Suitable for use with a flat changing mat up to 76 x 47 cm which does not compromise the effective height of the changer barriers.

The changing area is suitable for use up to 12 months old or 11kg in weight.

Do not use the dresser if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.



East Coast Nursery Ltd, Robertson House
North Walsham, Norfolk, NR28 OBX, UK

For customer care or enquiries:
Call: +44 (0)1692 408802
Email: nursery@east-coast.co.uk