


### HALO CORNER TV UNIT

Assembly Instructions - Please keep for future reference Cat No XK025

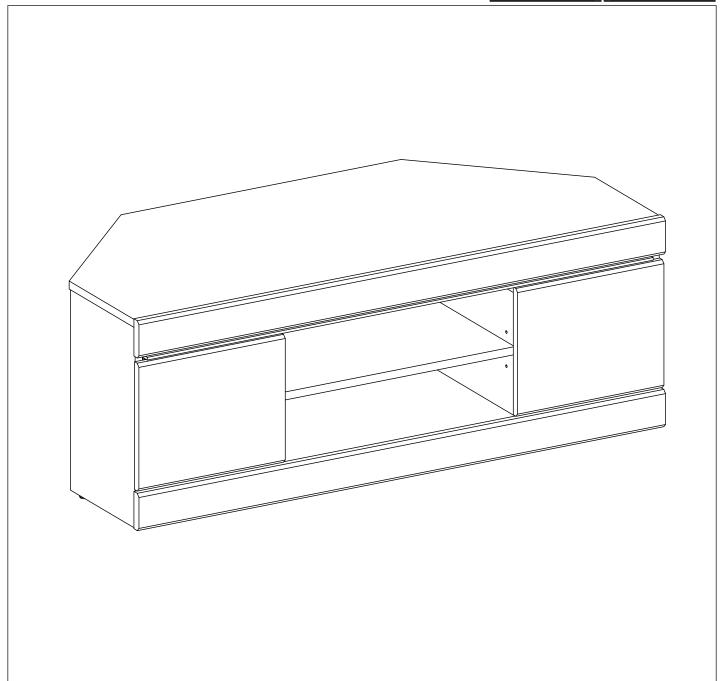

Dimensions	No. people	Assembly Time
Width: 107.2cm Depth: 49.8cm		1.5 Hour (approx.)
Height: 39 9cm		(approx.)

### **Important -** Please read these instructions fully before starting assembly



### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 4 and 5.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.

 We do not recommend the use of power



drill/drivers for inserting screws, as this could damage the unit. Only use

hand screwdrivers.

 Dispose of all packaging carefully and responsibly.


### **Care and Maintenance**

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive clean
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
  Take to your local authority waste disposal centre.

## If you have damaged or missing components, call the JD Williams Costumer Helpline on 0871 231 2000

If you are unhappy with the product and wish to return it, please follow the retailer's returns procedure.

## **Exploded View**

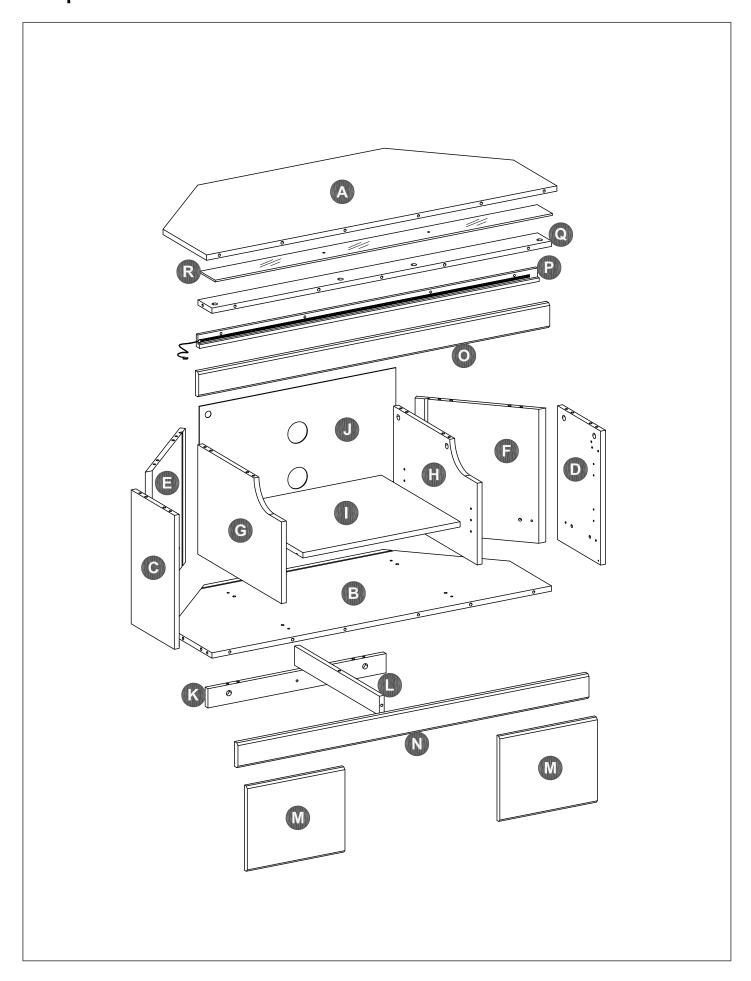

## Components - Panels

### Please check that you have all the components listed below before constructing your items.

Part No	Description	Qty				
Α	Top Panel	1				
В	Bottom Panel	1				
С	Side Panel - L	1				
D	Side Panel - R	1				
E	Rear Panel - L	1				
F	Rear Panel - R	1				
G	Divider Panel - L	1				
Н	Divider Panel - R	1				
I	Adjustable Shelf	1				
J	Back Panel	1				
K	Rear Bottom Support	1				
L	Middle Bottom Support	1				
M	Door	2				
N	Front Bottom Support	1				
0	Front Panel	1				
Р	LED Panel Support	1				
Q	Panel Support	1				
R	Glass LED Support					

## **Components - Fixings**

### Please check that you have all the components listed below before constructing your items.

**Note**: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

### \*Hardware packed separately according to the code.

(A)	Minifix Cam	(B)	Minifix Bolt	(C)	Minifix Cover	(D)	Dowel M8 x 32mm
	37 units		37 units		33 units		32 units
(E)	Screw M4 x 12mm	(F)	Screw M10 x 33.5mm	(G)	Screw M4 x 19mm	(H)	Backply Stopper
		, ,		, ,		, ,	
	4 units		9 units		8 units		8 units
(I)	Cable Holder	(J)	Shelf Support	(K)	Screw M4 x 10mm	(L)	Ring Plastic
				, ,	<b>O</b>		
	2 units		4 units		8 units		2 units
(M)	Corner Bracket	(N)	Glass Shelf Clip	(O)	Hinges	(P)	Adaptor
		, ,		, ,			
	2 units		4 units		4 units		1 units
(Q)	Screw M4 x 15mm	(R)	Buffer				
	(danamaa()	, ,					
	2 units		4 units				


#### **Tools Required**





### Ruler - Use this to measure your screws (mm)


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


## **Assembly Instructions**

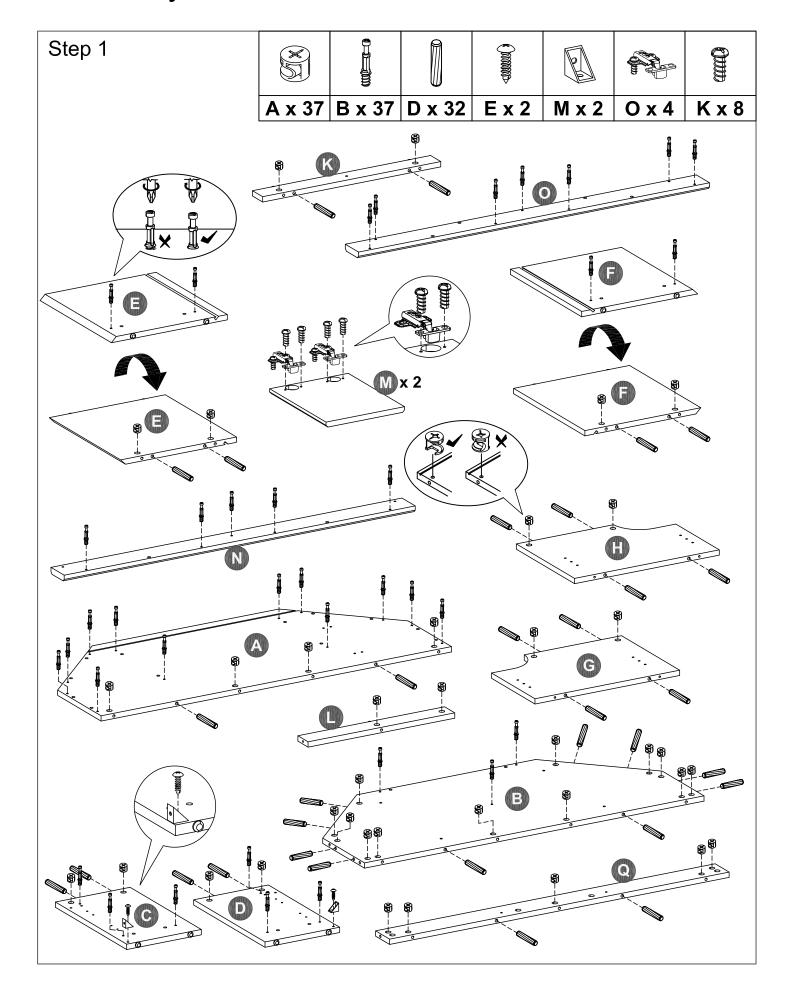


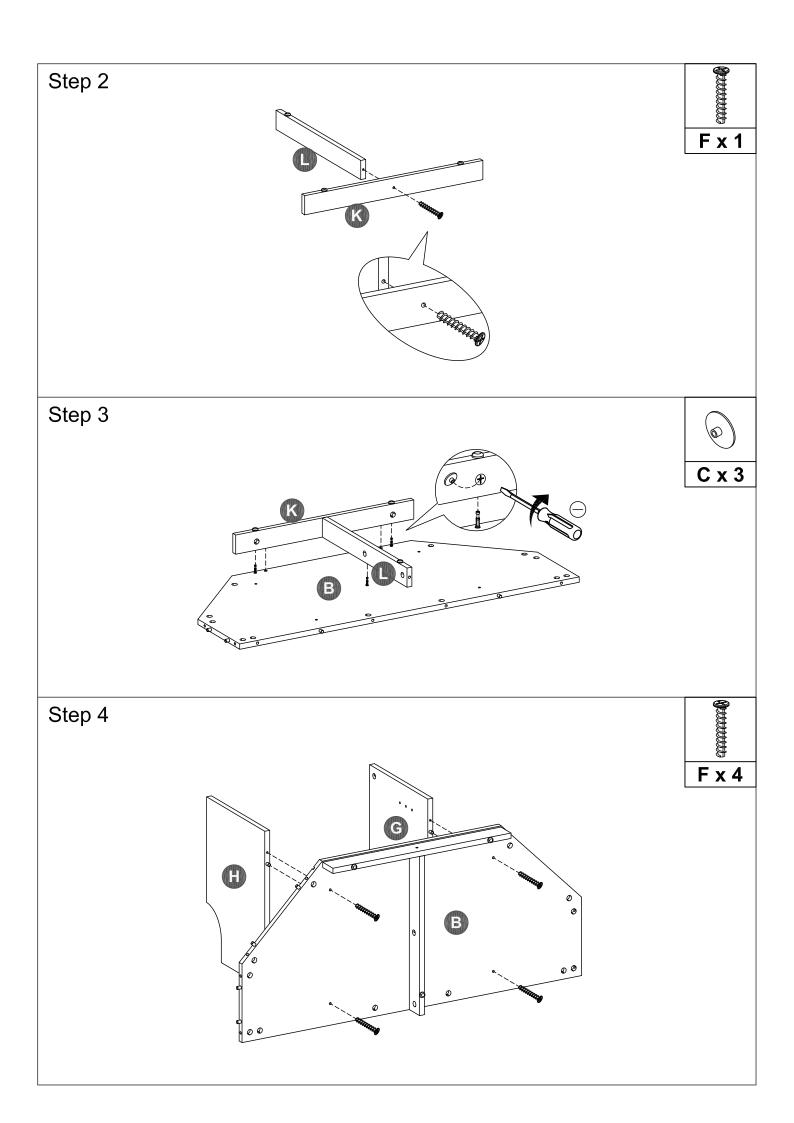

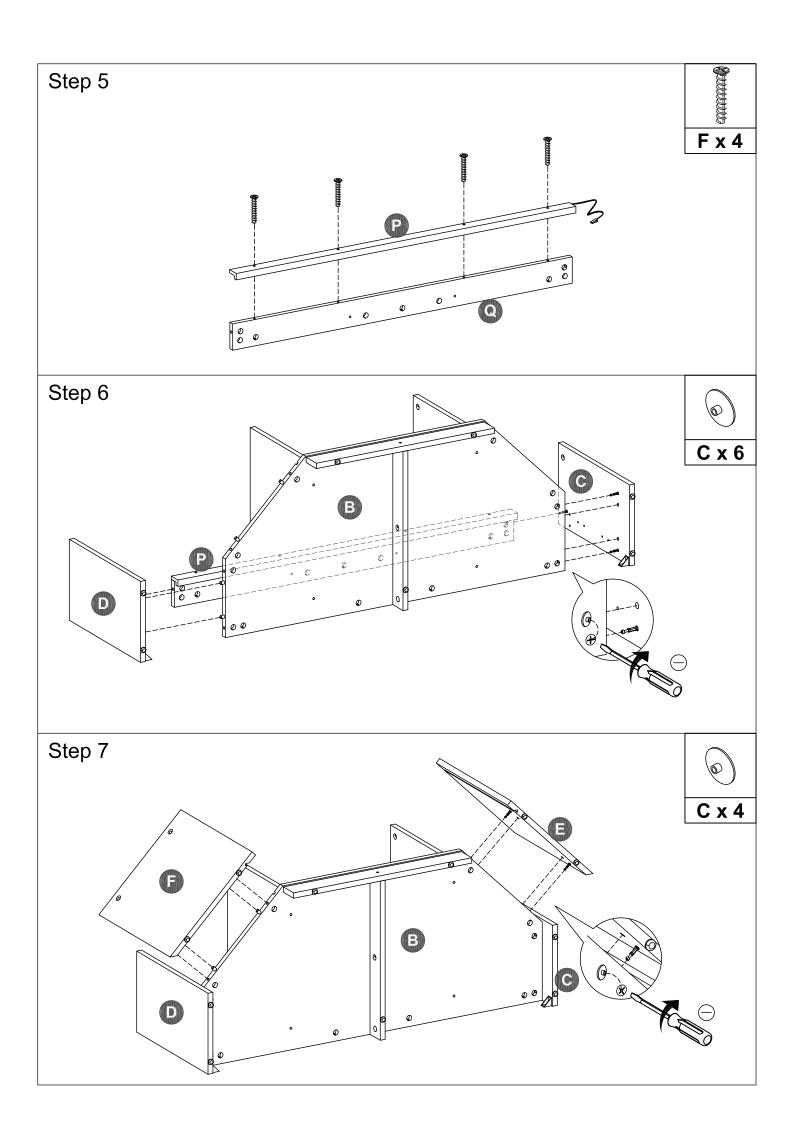

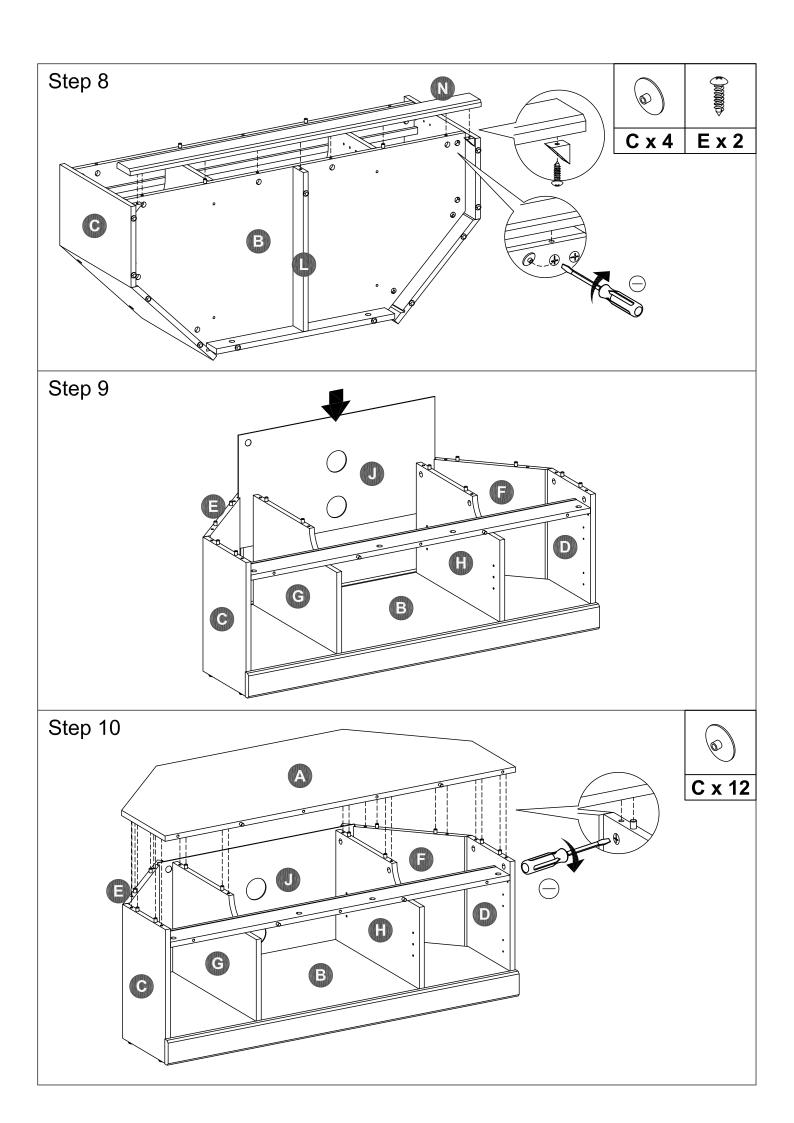

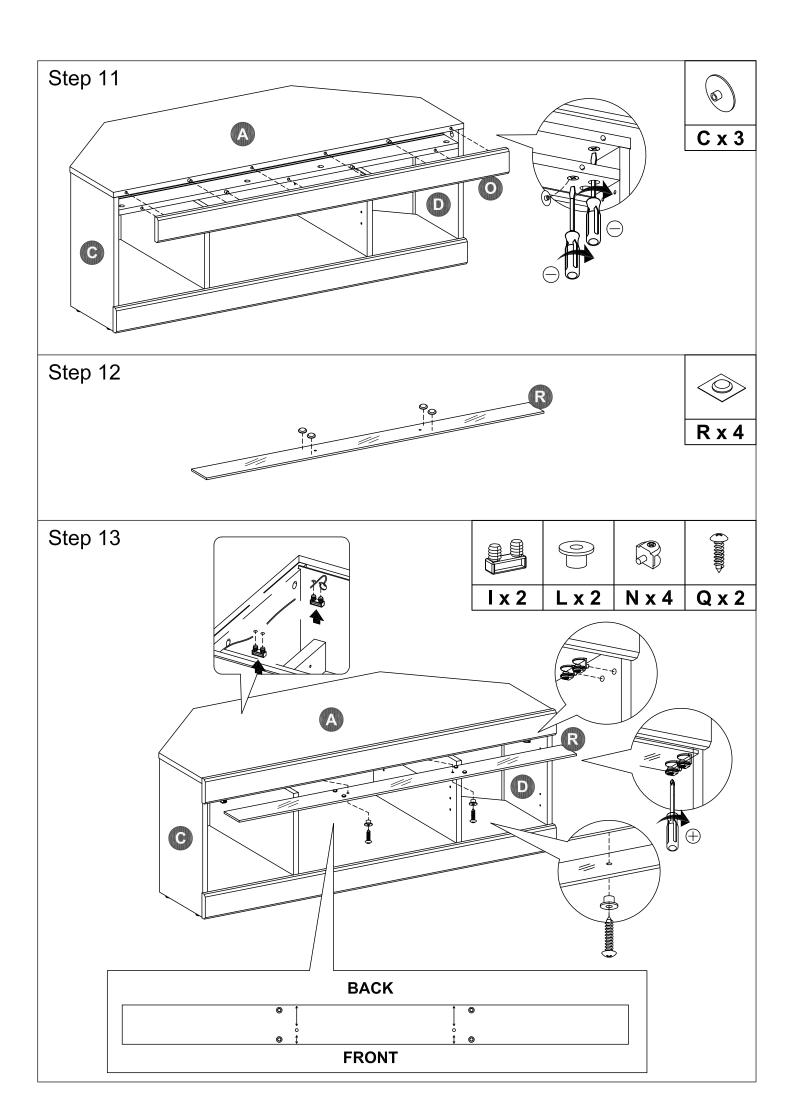

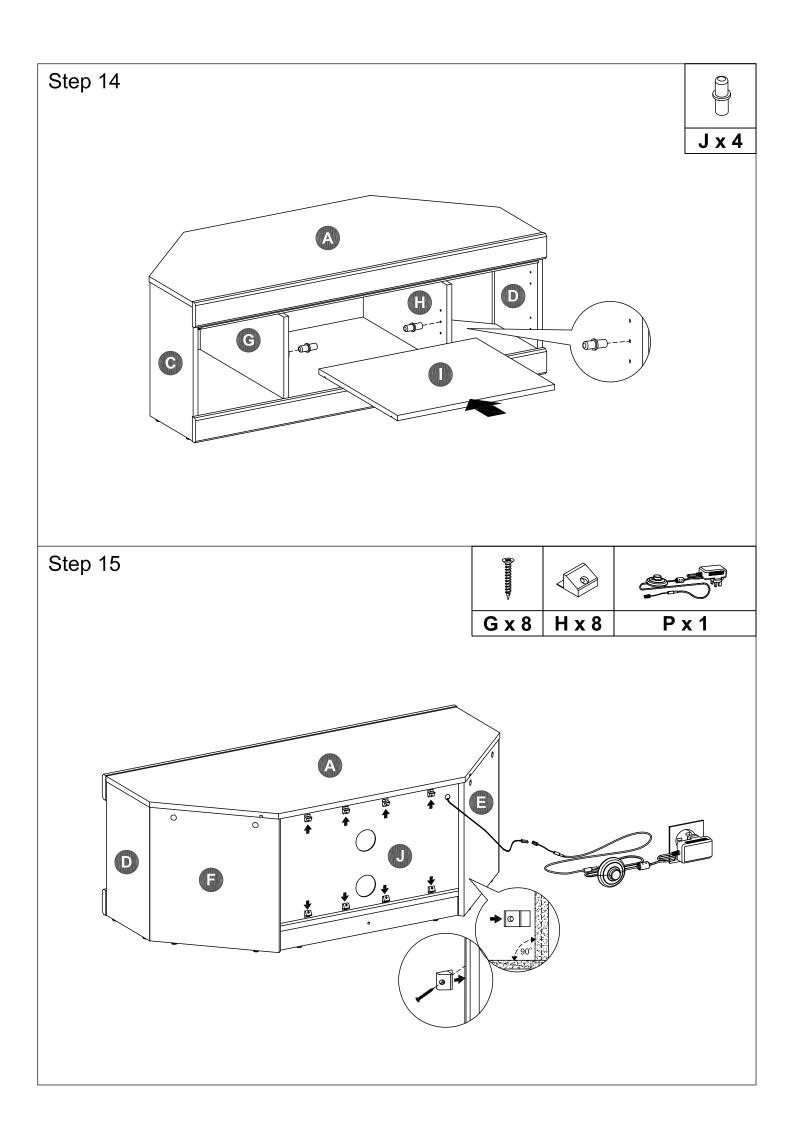

# Step 16 STEP 1 C M STEP 2 Α В A. Lateral B. Vertical C. Front-to-Back **Adjustment** adjustment by the slackening by screw adjusting via slot in the the hinge-arm mounting plate mounting screw Step 17

