

true smooth
by *BaByliss*



BIKINI TRIM
WET/DRY BIKINI TRIMMING SYSTEM

Model 8772BU

BIKINI TRIM

WET/DRY BIKINI TRIMMING SYSTEM

The TrueSmooth Bikini Trim can be used dry or in the shower to safely and gently trim to length and shape the bikini area.

Precision trimmer with 2 comb guides, 2mm and 4mm for trimming to different lengths.

FEATURES

- Precision trimmer
- 2 comb guides: 2mm and 4mm
- Battery operated (requires 2 x AAA batteries)

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. This bag is not a toy.

- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY INFORMATION

WARNING!

- Do not immerse into water or other liquids.
- Special care is required when using the appliance close to sensitive areas. Use gentle pressure only.
- Do not place appliance on any surface while it is operating.
- Do not leave the appliance unattended when switched on.
- Allow appliance to cool before storing away.
- Always inspect the appliance before use for noticeable signs of damage. Do not use the appliance if it has been dropped or if it shows noticeable damage. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Return the appliance to the nearest service facility for examination, electrical or mechanical adjustment or repair. No repair should be attempted by the consumer.
- This appliance complies with Directives 2004/10/EEC (Electromagnetic Compatibility) and 2006/95/CE (Electrical Safety of Domestic Appliances)

INSTRUCTIONS FOR USE

The precision trimmer is designed for accurate trimming and shaping and comes with two comb guides for a choice of trimming lengths.

Preparation for Use

- Always inspect the appliance to ensure the precision trimmer head is free from hair and running smoothly. Check also for signs of damage and that the tips of the two blades are parallel. Failure to do this can result in injury.
- Do not use any, lotions, creams before using the trimmer.

Trimming


- Attach the appropriate comb guide. To attach the comb guide make sure that the appliance is switched off, put the comb guide over the blades of the trimmer and push down on the lip at the back of the comb guide until it clicks into place.
- We advise that you start trimming using the longest comb guide first. Moving onto shorter guides as required.
- Switch the appliance on.
- Gently trim the hair against the direction of the hair growth.
- To remove the comb guide, ensure that the appliance is switched off. Lift the lip at the back of the comb guide upwards and away from the trimmer head.

Shaping

- For more detailed trimming and shaping remove the comb guide from the trimmer head and very carefully trim the desired area, using light pressure only.
- Switch the appliance off after use, clean and store away.
- Never switch the trimmer off whilst in the hair.

CLEANING & MAINTENANCE

- For optimum performance you must clean the trimmer after each use.
- Switch the appliance off.
- Remove the trimmer head from the power handle (Fig. 1).

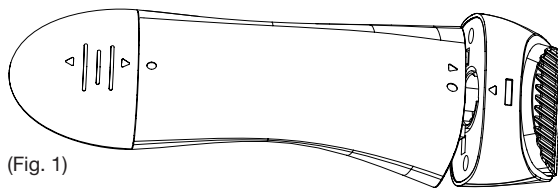

(Fig. 1)


- Gently blow any hairs from the trimmer head and quickly rinse under running water.
- Comb guides can also be rinsed under running water.
- Allow the trimmer head to dry thoroughly before reassembling or storing away.

NOTE: Do not attempt to repair or replace the trimmer blades. In the event that the blades become blunt or damaged, contact the Conair Customer Care Line. (Refer to UK After Sales Service section for further information).

IMPORTANT! The True Smooth Bikini Trim is designed especially for shaping and trimming the bikini area, however, care must be taken not to apply too much pressure during use to avoid injury.

CHANGING THE BATTERIES

The True Smooth Bikini Trim requires 2 x AAA batteries (1,5V). To insert or replace batteries, remove the lower casing of the power handle to reveal the battery compartment. This is done by gripping the upper part of the power handle in one hand and pulling the lower part in a downward direction (Fig. 2). Insert the batteries as indicated on the inside of the battery compartment. If the appliance remains unused for a while or if the batteries are dead, remove them from the appliance. This will increase the life of the battery. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel cadmium or NickelMetal Hybride) batteries.

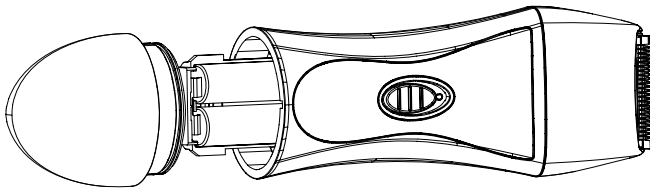

(Fig. 2)

UK GUARANTEE

This True Smooth appliance is guaranteed for consumer use for 2 years. This 2 year guarantee will cover defects found due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. The guarantee will be void if the damage has been caused by a fall, alteration or repair by any unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd. reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of fault.

