
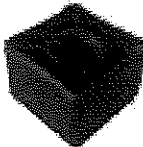








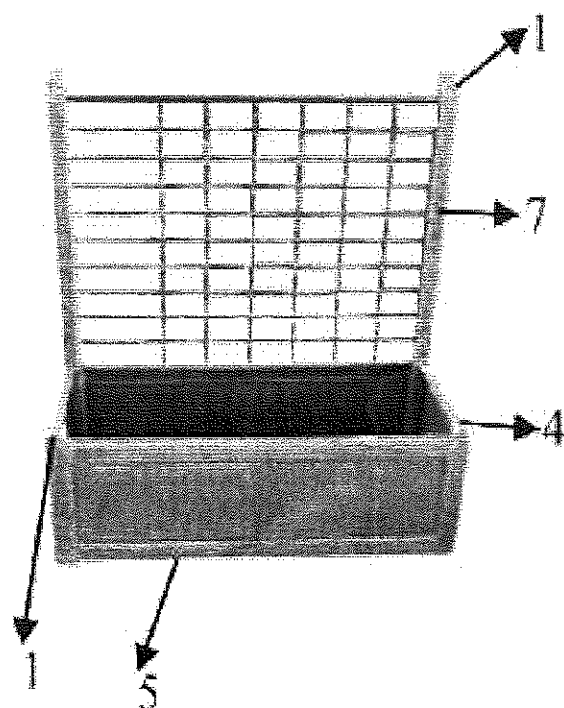
Wide Trellis Planter

Assembly Instructions – Please keep for future reference


PARTS LIST:

1  4 PCS	2  2 PCS	3  2 PCS	4  2 PCS
5  2 PCS	6  1 PC	7  1 PC	8  2 PCS

SET UP:



1. Connect the 2 long boards with fasteners[5] with the 2 short boards with holes[4] to make them as one pot.
2. Insert the 2 big connectors [3] into the mid of the 2 metal poles[8]. Insert the 2 metal poles[8] into the pot. Then slide the big connectors[3] down so they fit into the top of the pot corners.
3. Insert the Trellis Panel[7] onto the 2 metal poles[8] with the wide base rail at the bottom.
4. Put the plastic sheet[6] into the pot. Insert the dome-connectors[1] into the top of the pot and top of the large board[7].
5. The planter is ready for use.

Dimensions	No. people	Assembly Time	OW #
Width: 100 cm		15 mins (approx.)	660448&66049
Depth: 42 cm			
Height: 109 cm			

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the JDW Customer Helpline: 0871 231 2000