


## FLORIDA - STUDY DESK WITH STOOL

Assembly Instructions - Please keep for future reference

Cat No

DR079

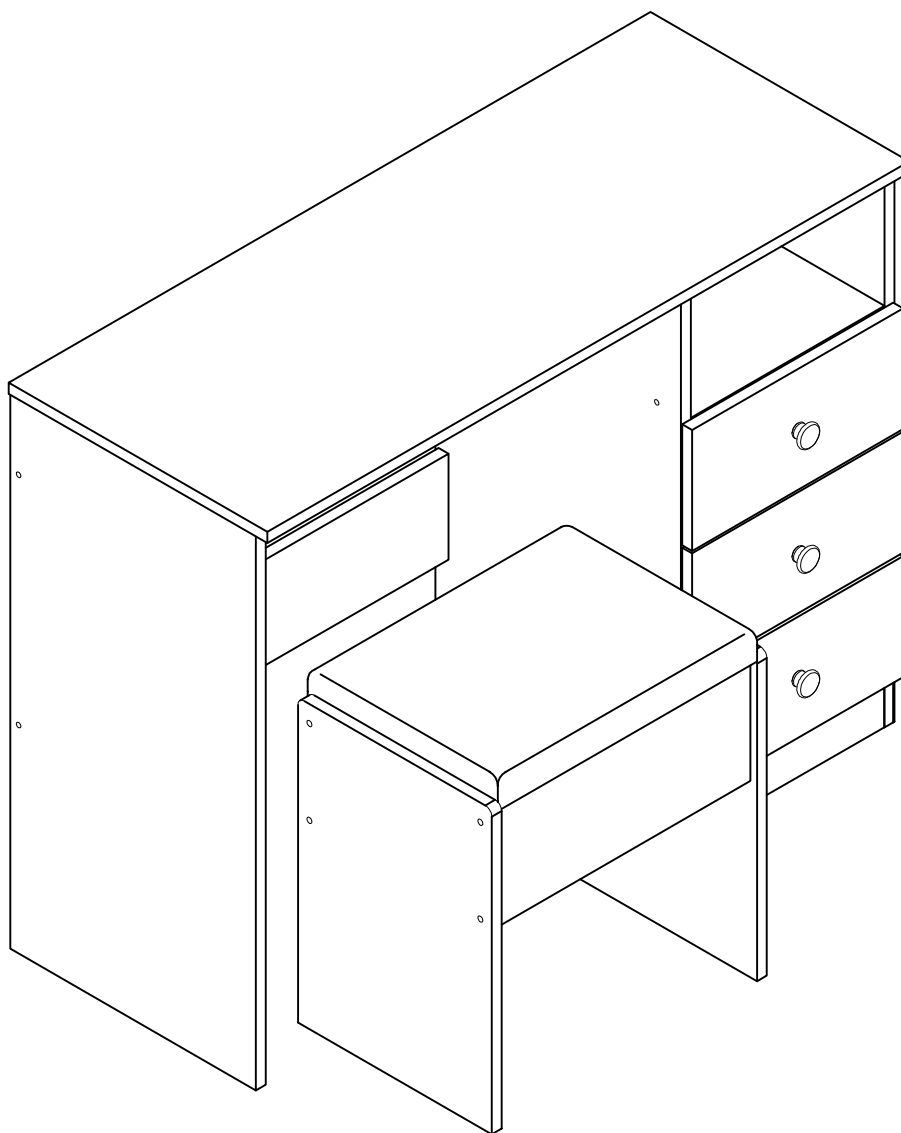

| Dimensions  | No. people  | Assembly Time          |
|---|---|------------------------|
| Width: 98/42.8cm<br>Depth: 39.8/29.7cm<br>Height: 75.6/47cm |  | 1.5 Hours<br>(approx.) |

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



## Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the  
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,  
please follow the retailer's returns procedure.**



## Warning

**Important** - In order to help prevent overturning, this product must be used with the wall anti-tip strap/device provided.

To help prevent product toppling over please follow the below steps :


- Use the anti-tip strap/device provided.
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawer.
- Do not place heavy items on the top of furniture, unless the furniture has been designated for this purpose.

Please note that the only anti-tip strap/devices and screw are provided, you will need to provide wall plugs and screws applicable for your wall type.


**PLEASE DO NOT REMOVE THE PERMANENT SAFETY LABEL FROM YOUR FURNITURE !**

### Permanent Label Assembly Location

1. Wardrobe/Cabinet without Drawer :  
Inside back panel visible/below the shelf.

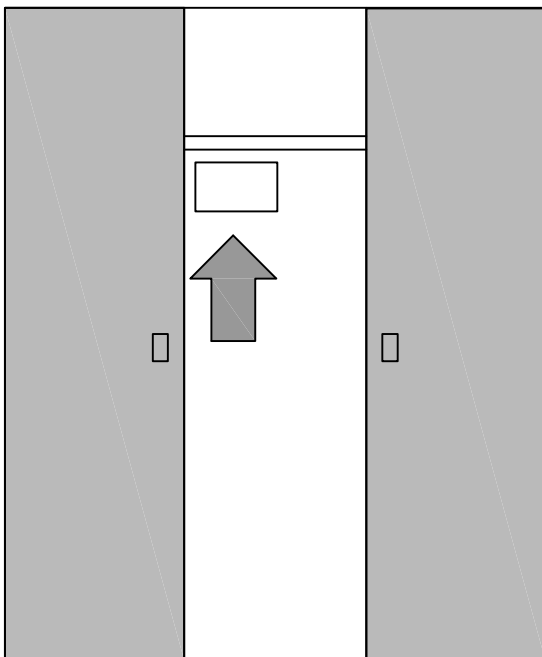


2. Chest of Drawer/sideboard/Unit with Drawer :  
Top drawer on the inside side of drawer wrap.

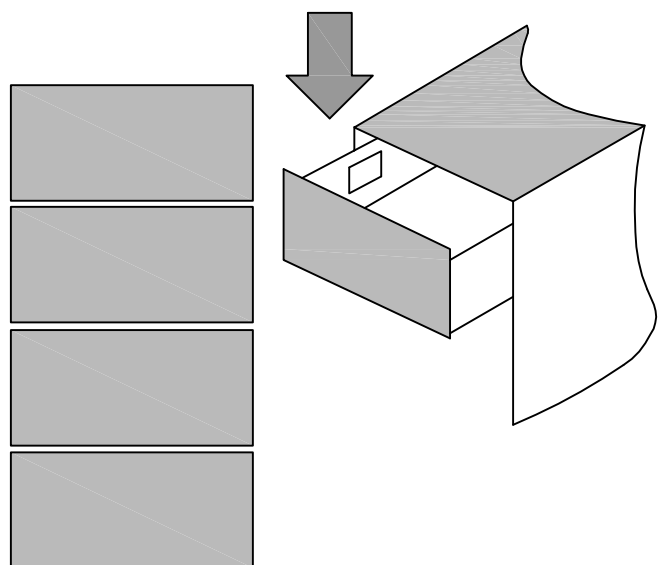

*Note: For uncommon furniture design, the location of safety permanent label may differ.*

# Exploded View

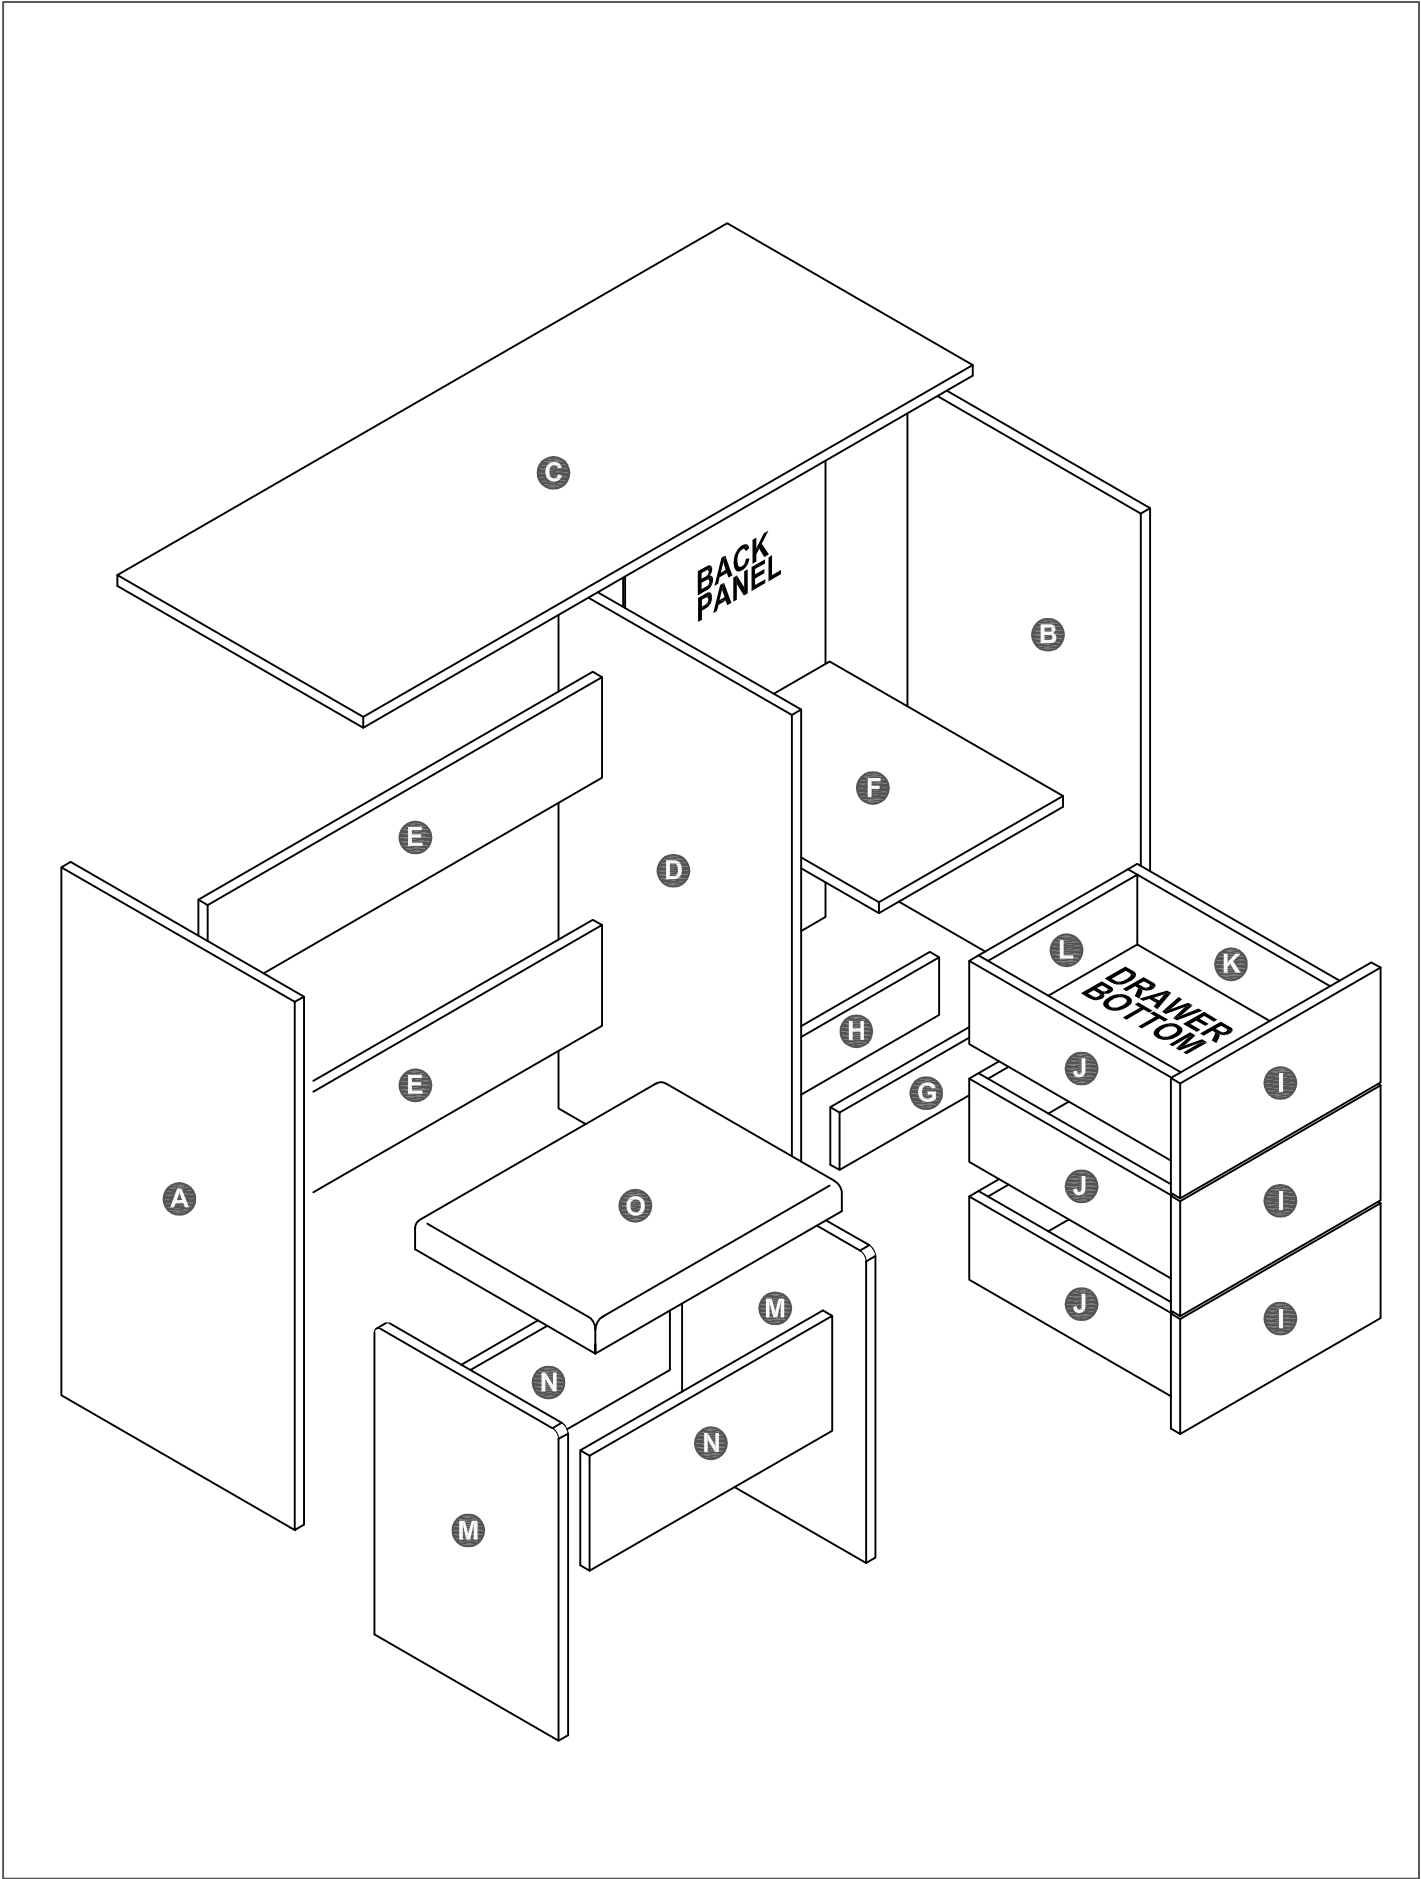

# Components - Panels

Please check that you have all the components listed below before constructing your items.



















| Part No | Description          | Qty |
|---------|----------------------|-----|
| A       | Side Panel - L       | 1   |
| B       | Side Panel - R       | 1   |
| C       | Top Panel            | 1   |
| D       | Center Panel         | 1   |
| E       | Back Support         | 2   |
| F       | Fix Shelf            | 1   |
| G       | Front Bottom Support | 1   |
| H       | Back Bottom Support  | 1   |
| I       | Drawer Front         | 3   |
| J       | Drawer Side - L      | 3   |
| K       | Drawer Side - R      | 3   |
| L       | Drawer Back          | 3   |
| M       | Stool Side Panel     | 2   |
| N       | Stool Support Bar    | 2   |
| O       | Stool Seat           | 1   |
|         | Drawer Bottom        | 3   |
|         | Back Panel           | 1   |

# Components - Fixings


Please check that you have all the components listed below before constructing your items.

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


**\*Hardware packed separately according to the code.**

|  |   |   |   |
|--|---|---|---|
| <b>(A)</b> Unitar M6.3x40mm<br><br>24 units   | <b>(B)</b> Screw M4x38mm<br><br>12 units | <b>(C)</b> Minifix Bolt<br><br>12 units         | <b>(D)</b> Dowel D8x30mm<br><br>27 units     |
| <b>(E)</b> Screw M4x25mm<br><br>3 unit        | <b>(F)</b> CSK M3.5 x 25mm<br><br>1 unit | <b>(G)</b> Screw M3.5x15mm<br><br>20 units      | <b>(H)</b> Screw M6x8mm<br><br>12 units      |
| <b>(I)</b> Minifix Cam<br><br>12 units        | <b>(J)</b> Wooden Handle<br><br>3 unit   | <b>(K)</b> L-Bracket 2mm<br><br>4 units         | <b>(L)</b> Nail Pin<br><br>14 units          |
| <b>(M)</b> Nail Leg<br><br>10 units           | <b>(N)</b> Seal Sticker<br><br>20 units | <b>(O)</b> Safety Strap + Washer<br><br>1 unit | <b>(P)</b> Drawer Slide (14")<br><br>3 sets |
| <b>(Q)</b> Drawer Slide (14")<br><br>3 sets | <b>(R)</b> M4<br><br>1 unit            |   |   |

## Tools Required




**Ruler -** Use this to measure your screws (mm)

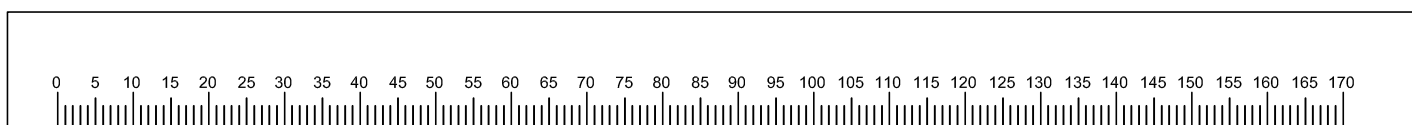


# Assembly Instructions


## Step 1

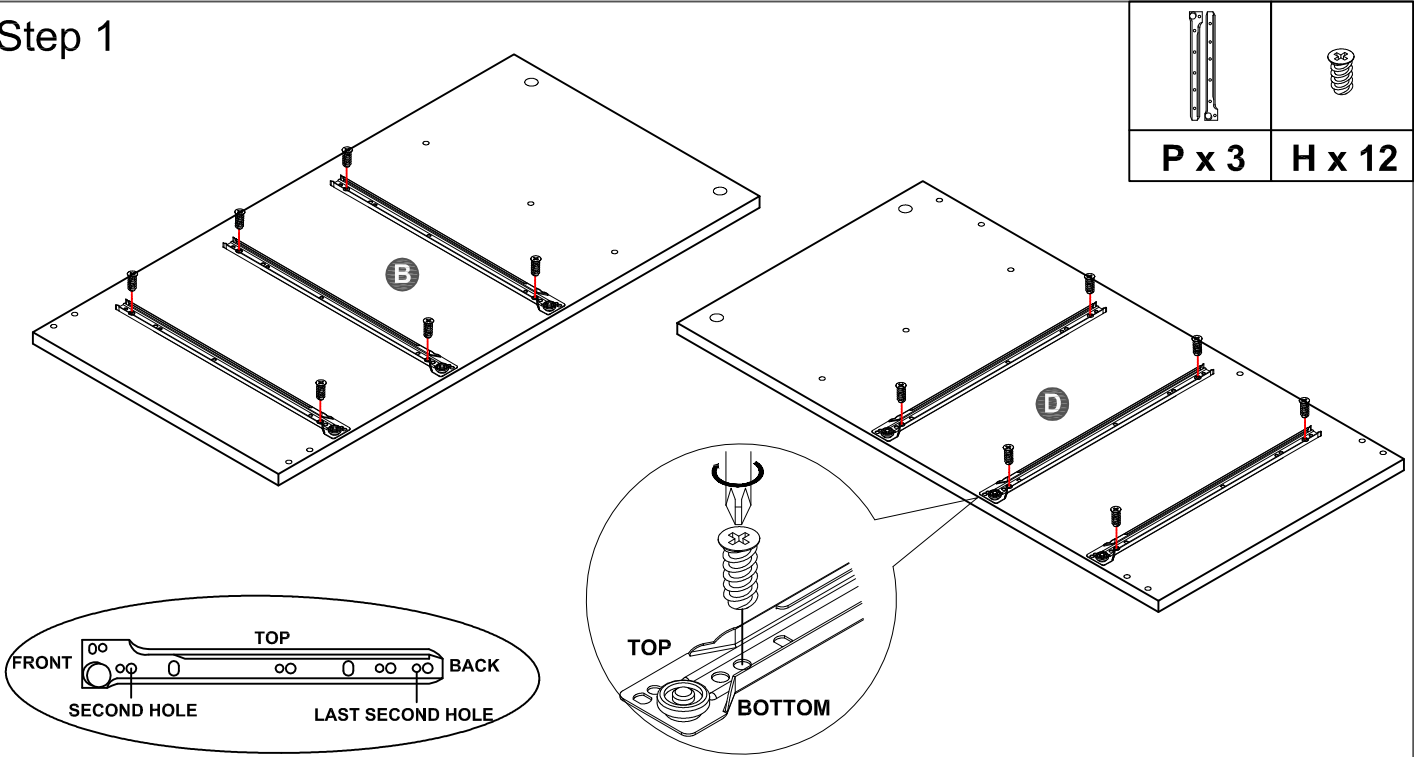


## Step 2

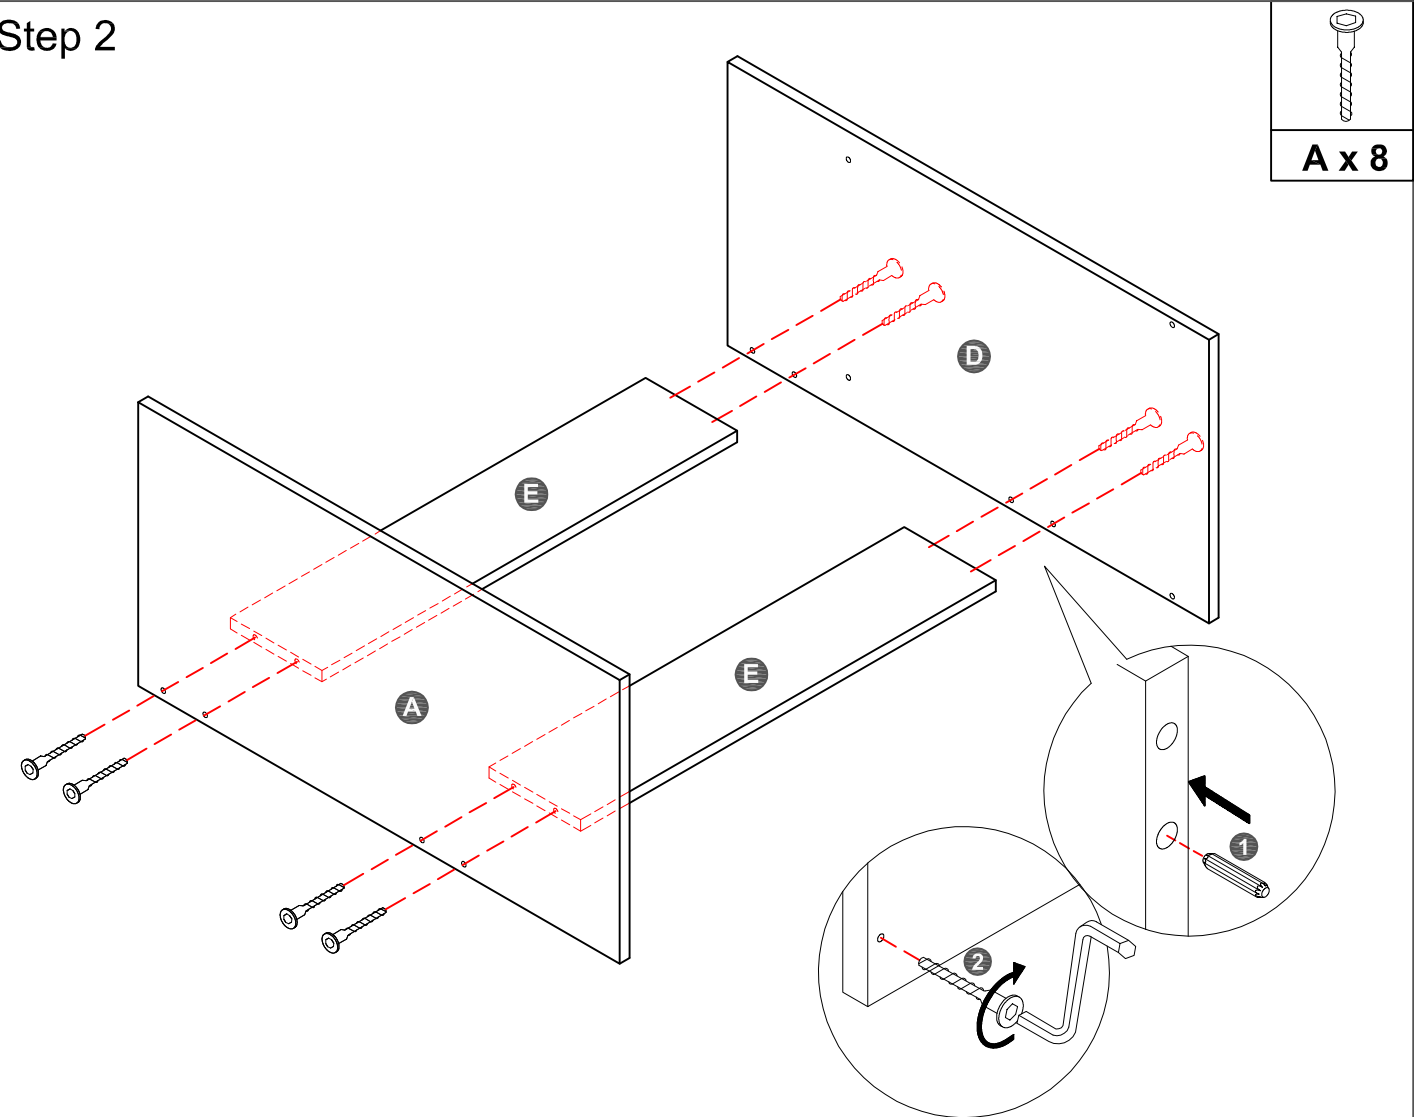


## Step 3

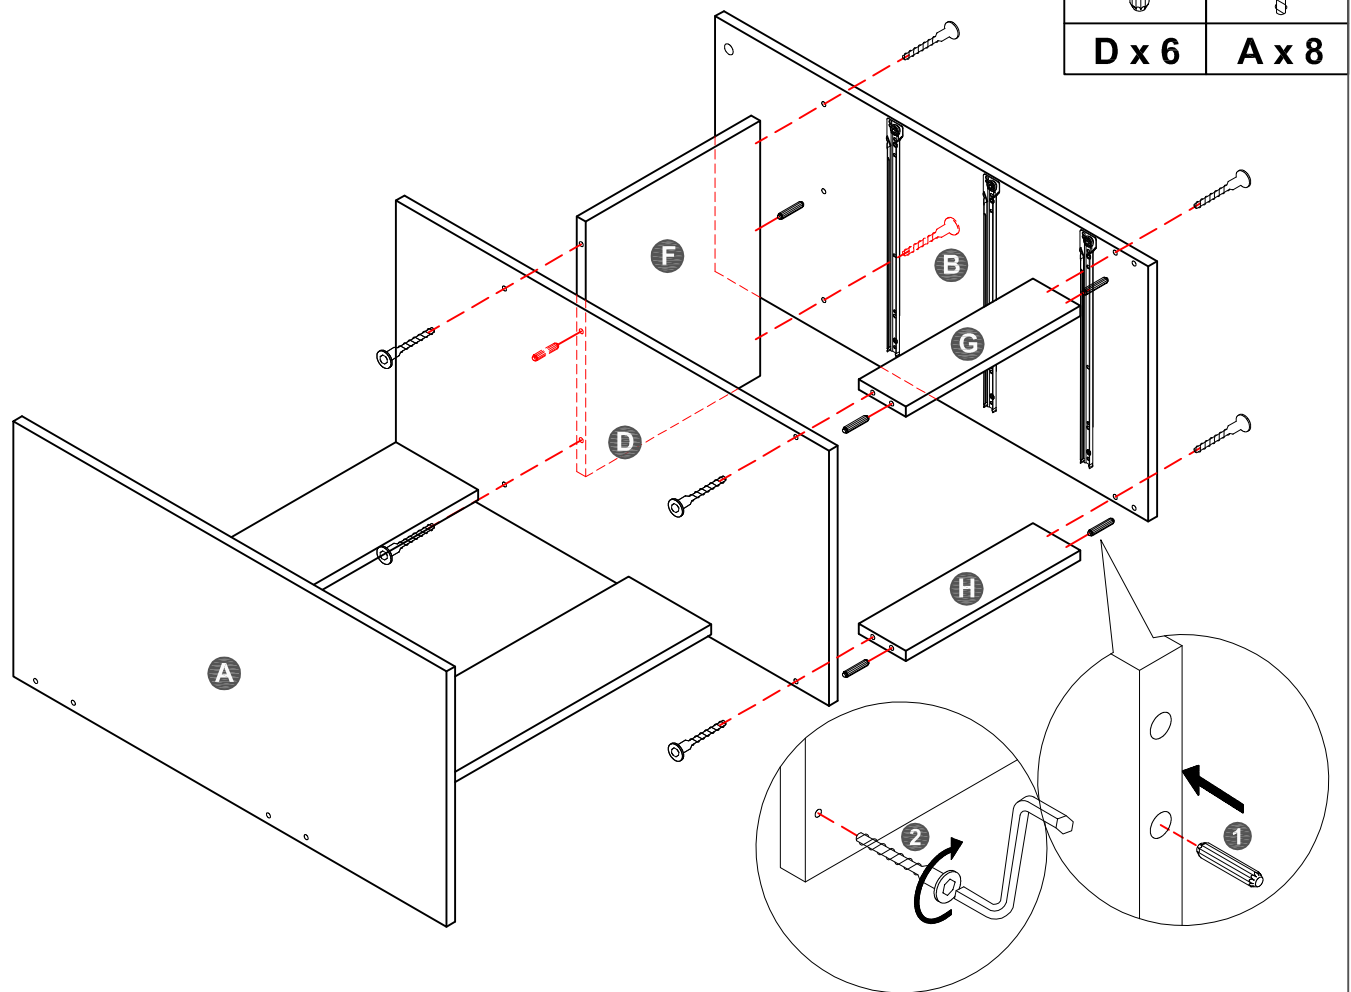


## Step 4

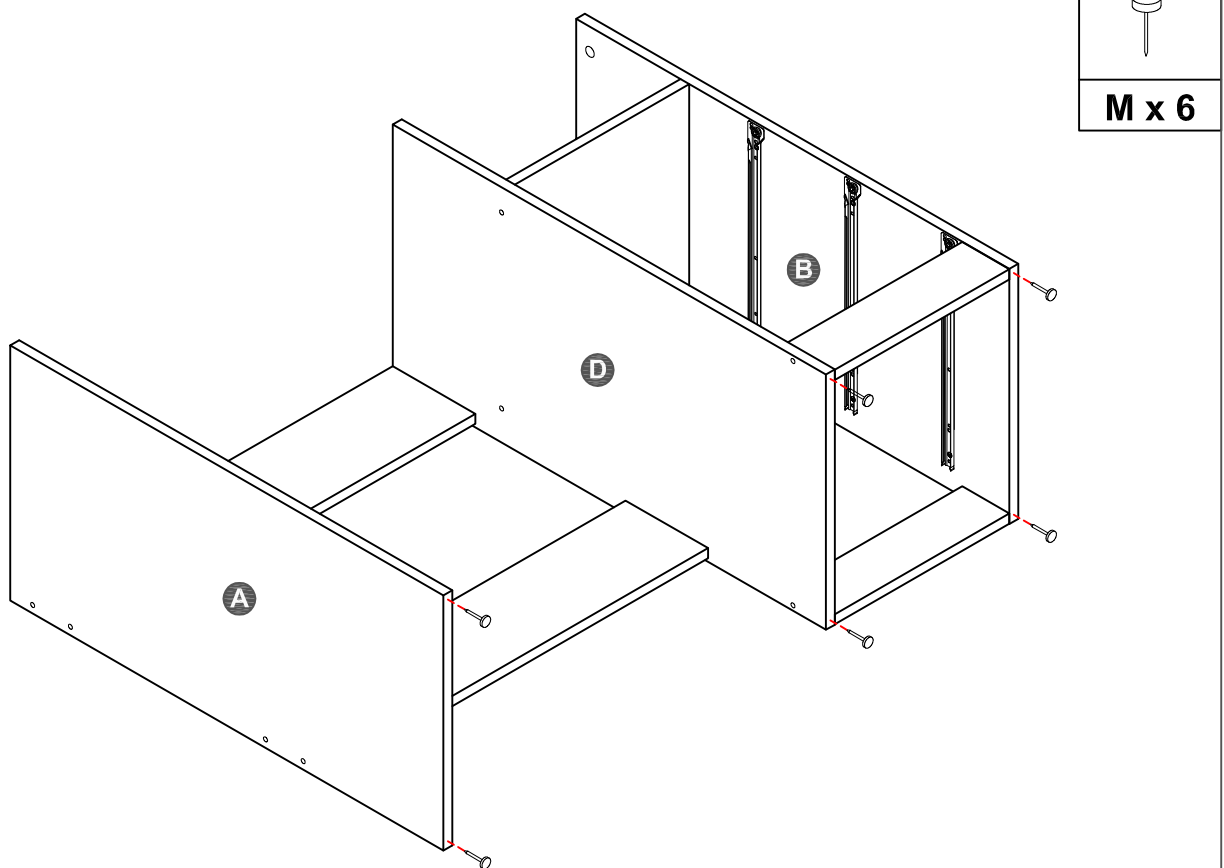


## Step 5

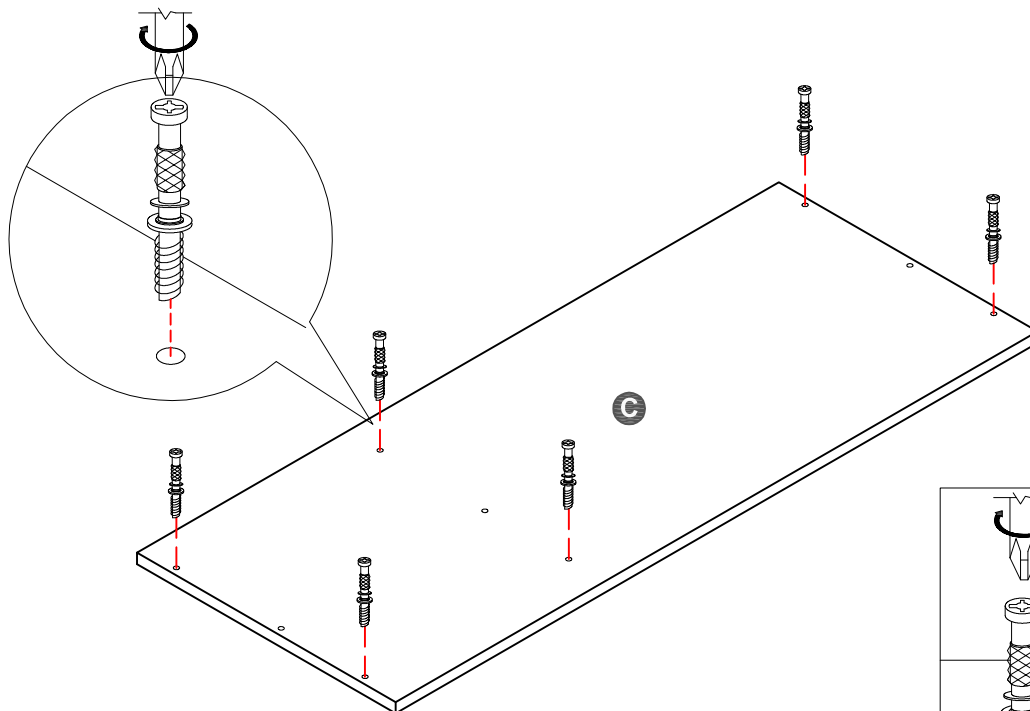

**C x 6**

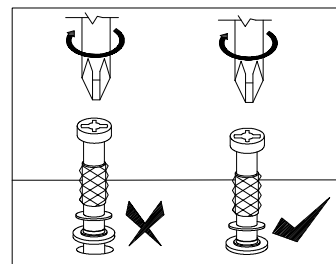


## Step 6

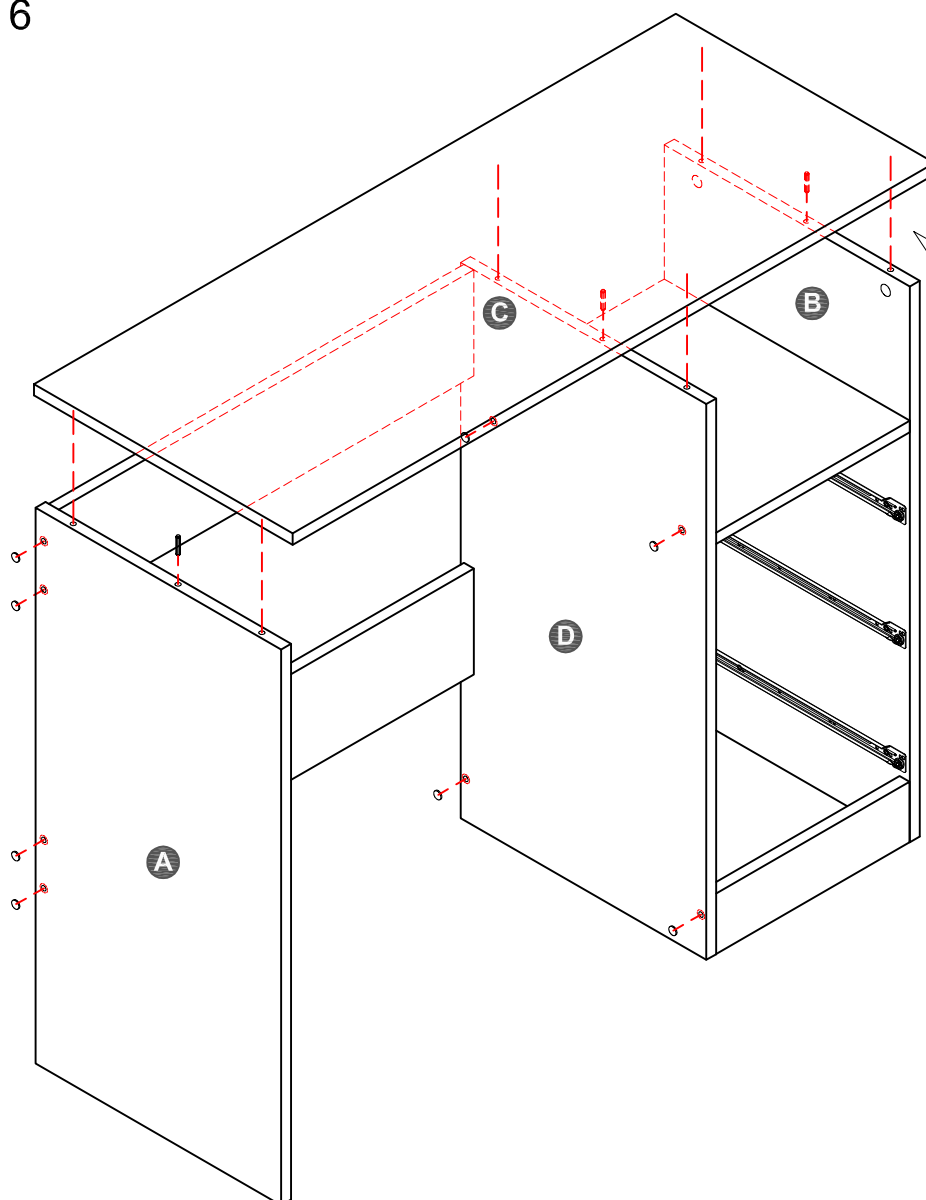

**N x 8**






**D x 3**

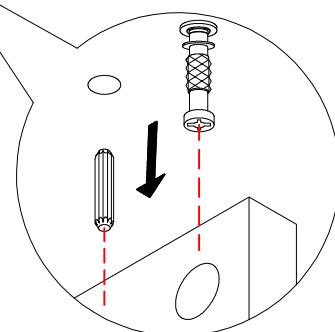

## Step 7



1 x 6

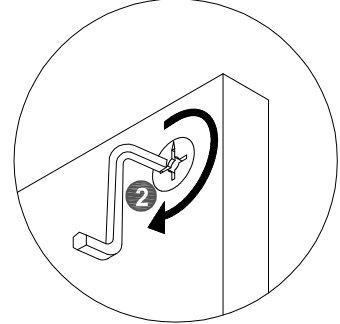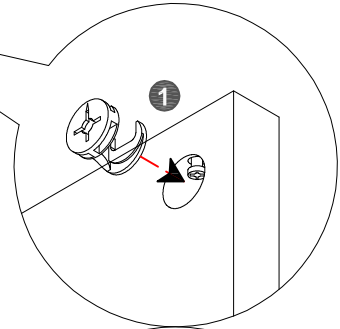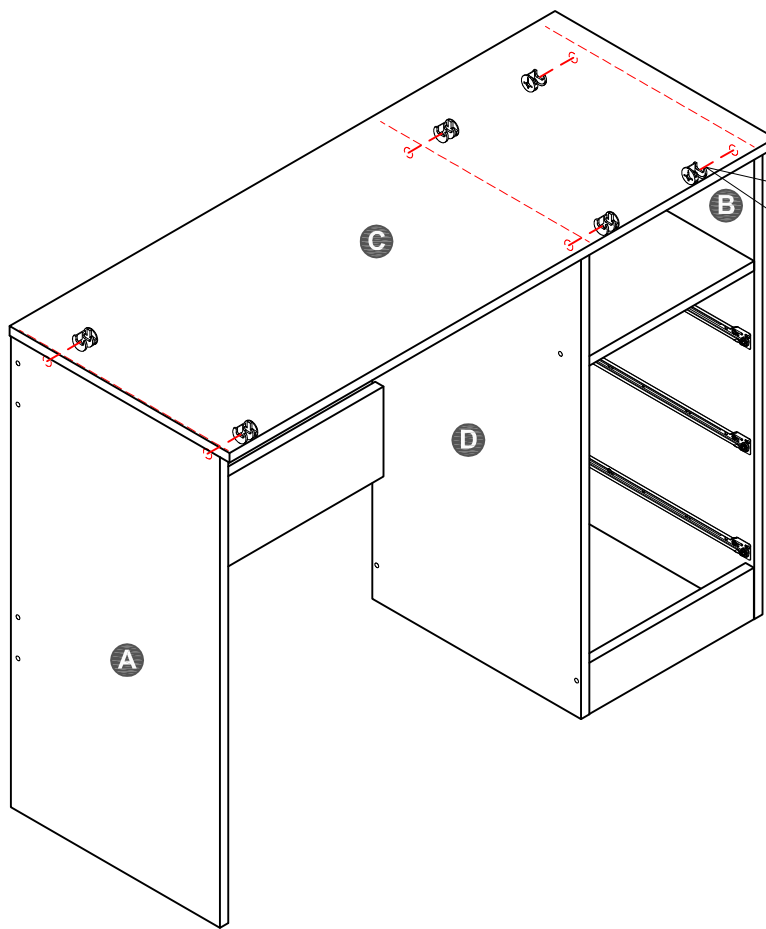


## Step 8




N x 4





L x 14

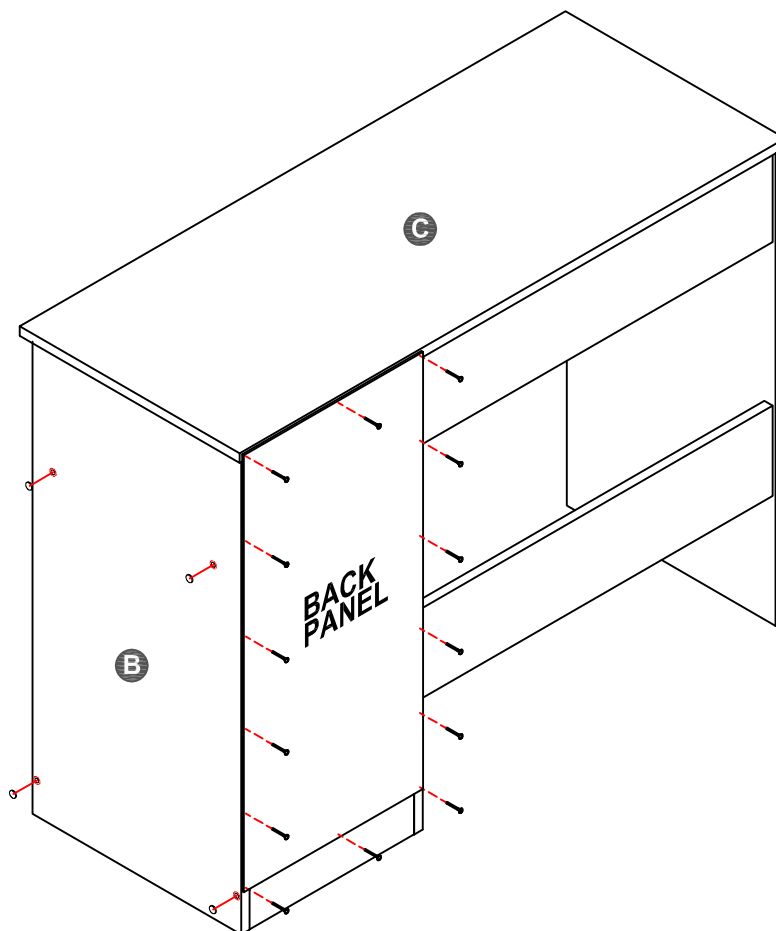

PLEASE ENSURE THAT EACH OF THE FOUR CORNERS OF THE CABINET IS SQUARE.

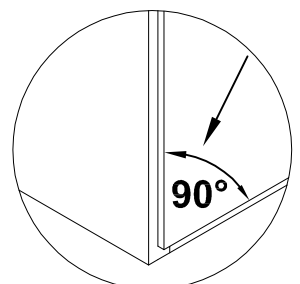


## Step 9

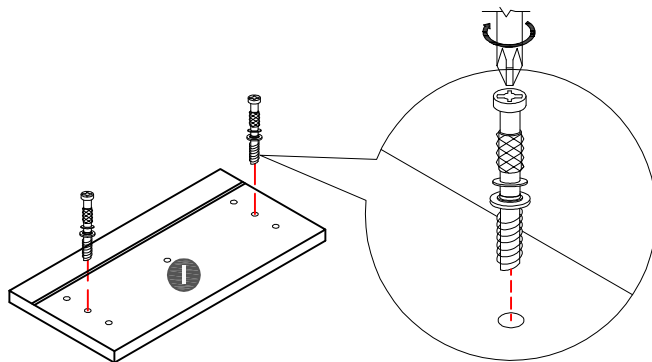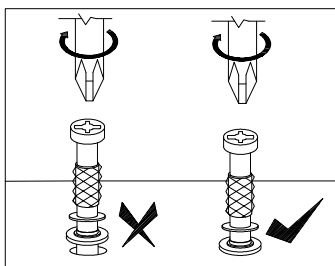

**C x 6**


**(x3)**

## Step 10

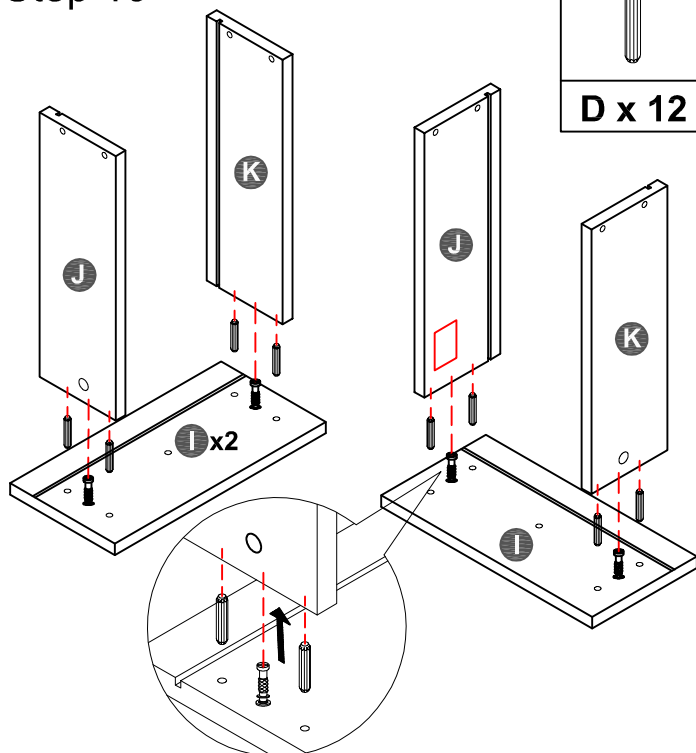

**D x 12**


## Step 11

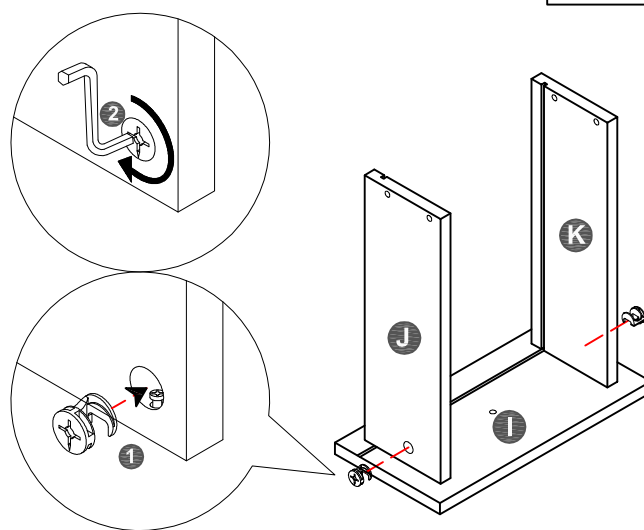

**I x 6**

**(x3)**


## Step 12

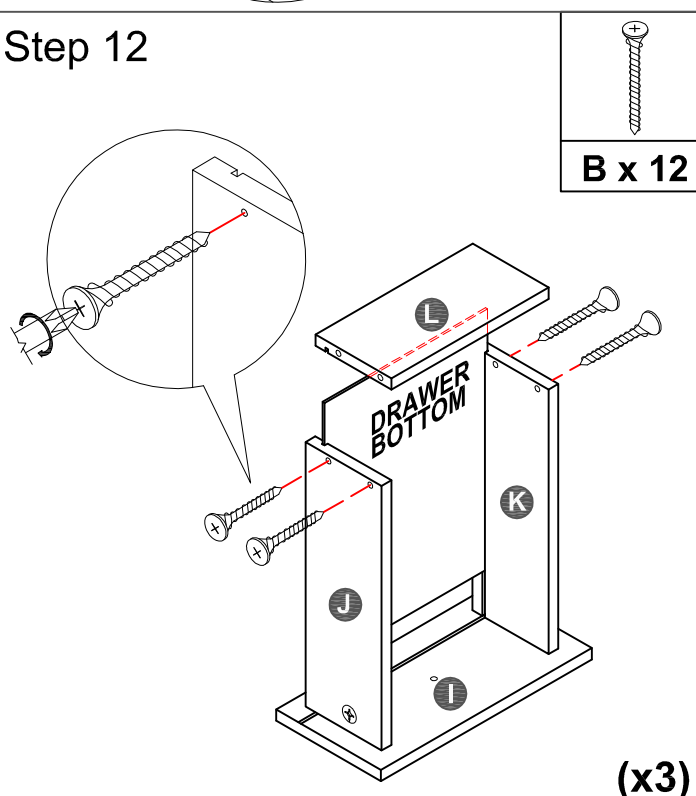

**B x 12**

**(x3)**

## Step 13

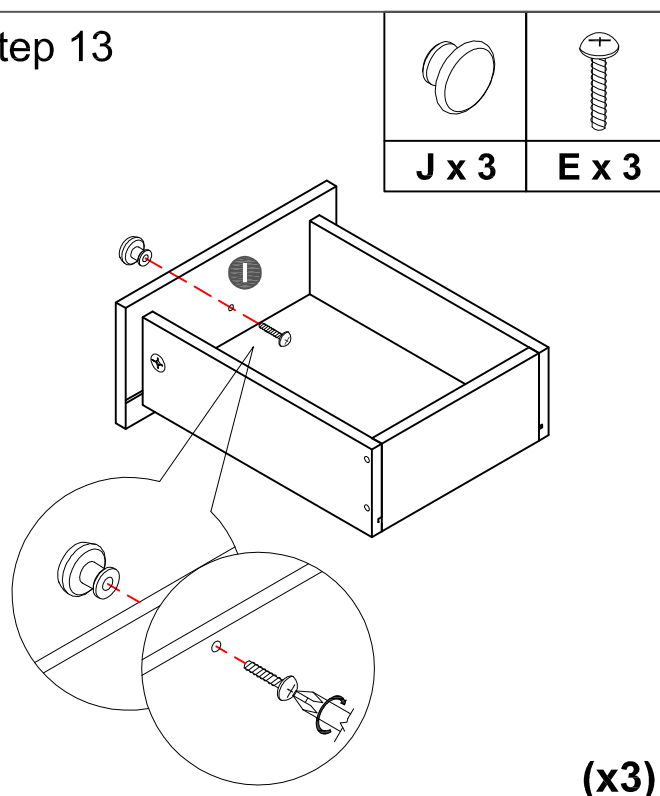


**J x 3**


**E x 3**

**(x3)**


## Step 14

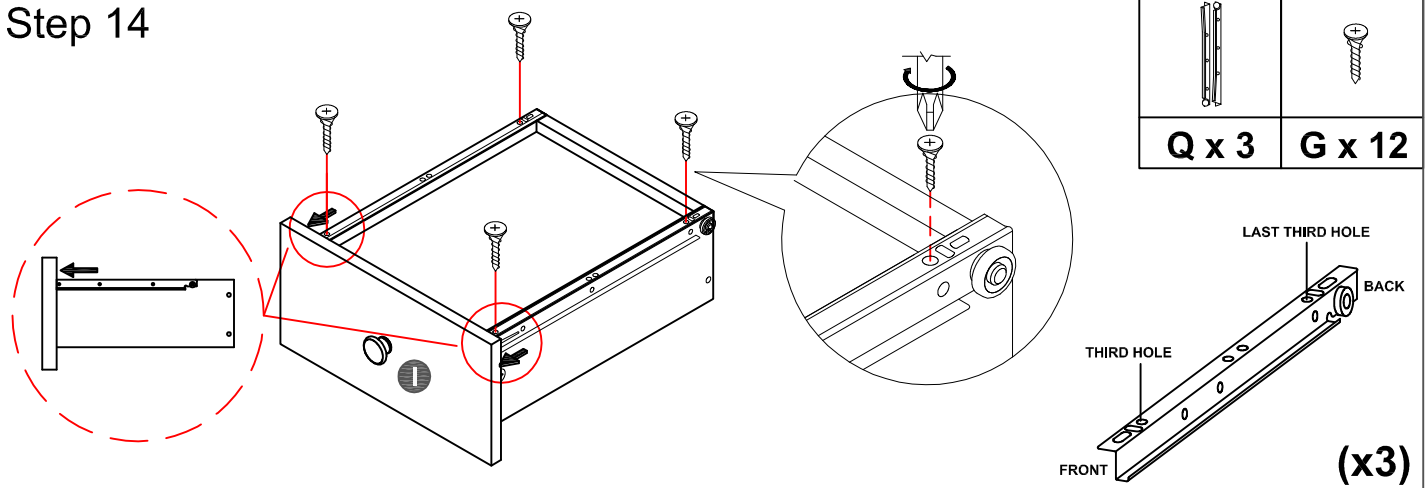


## Step 15

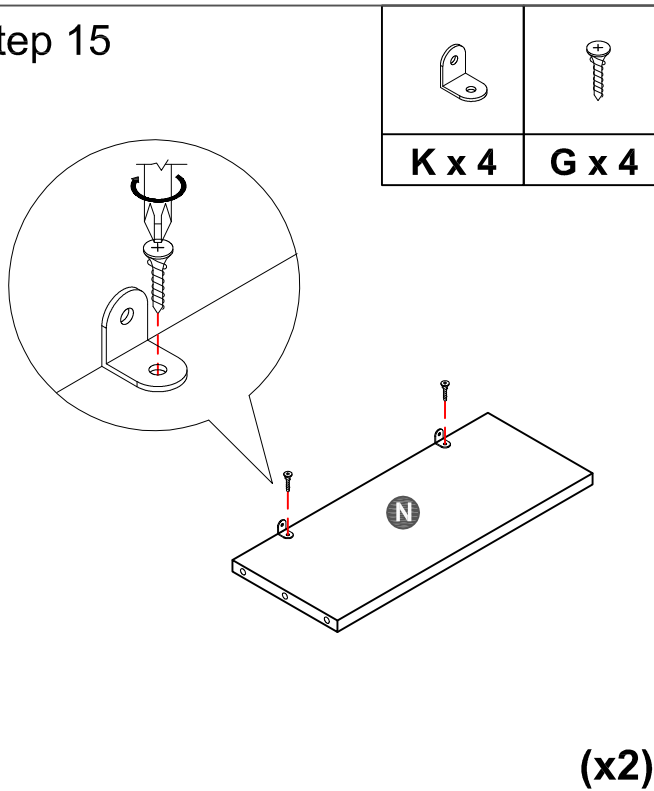


## Step 16

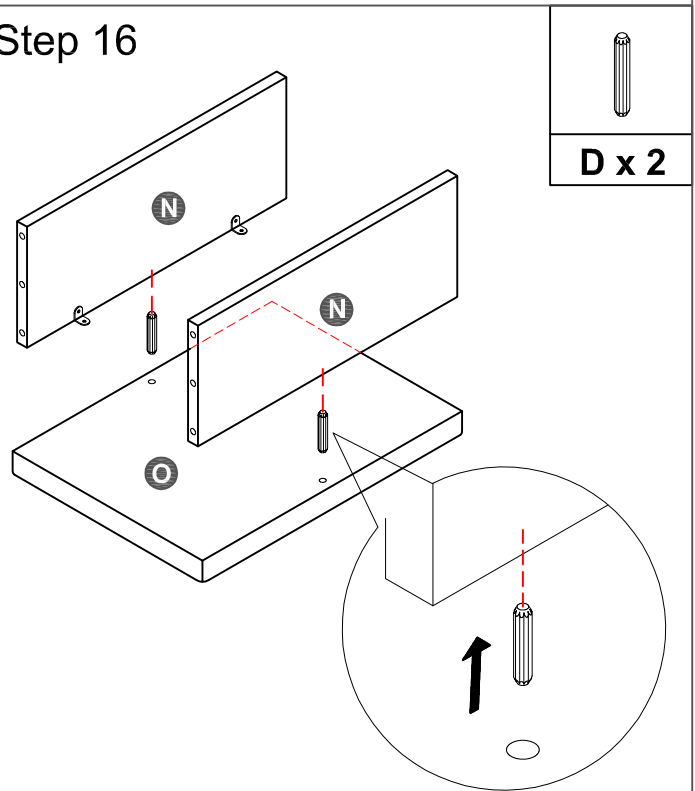

## Step 17

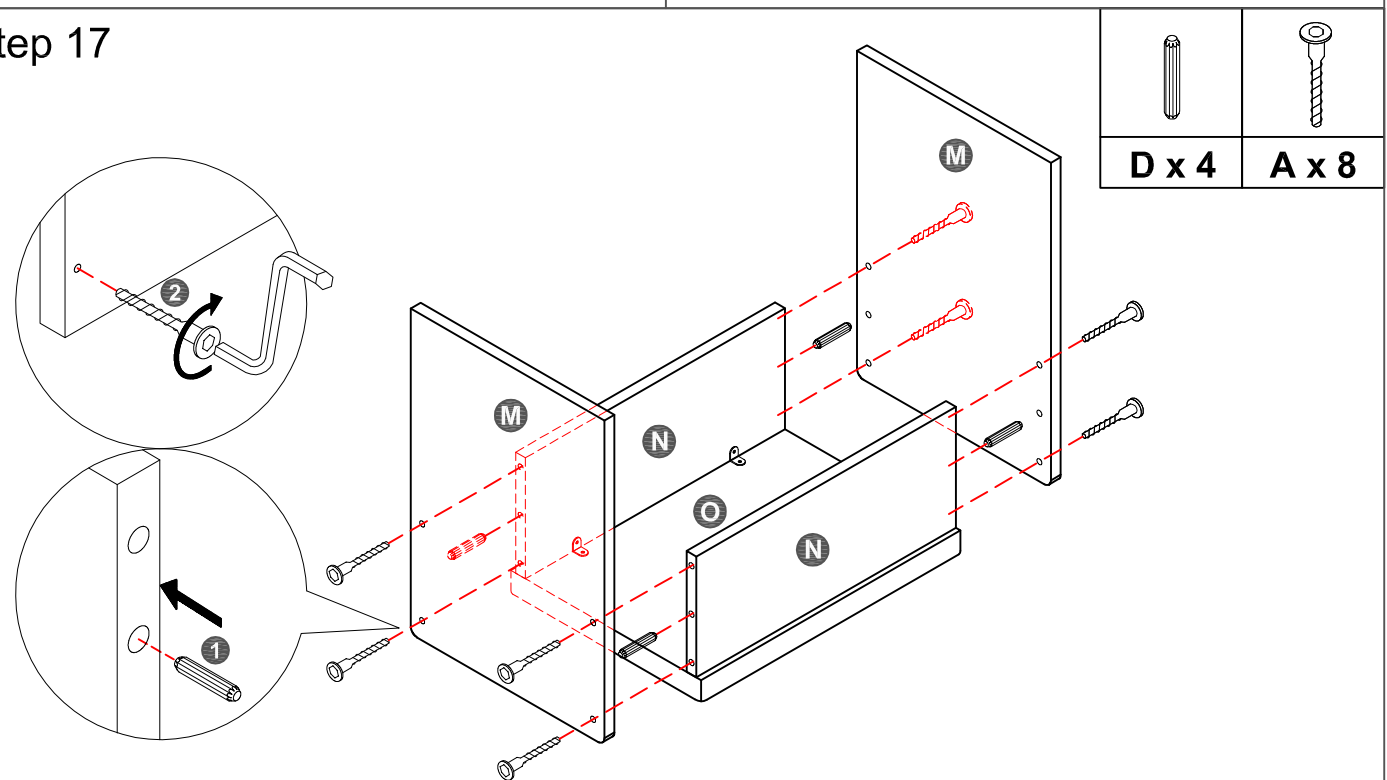


## Step 18

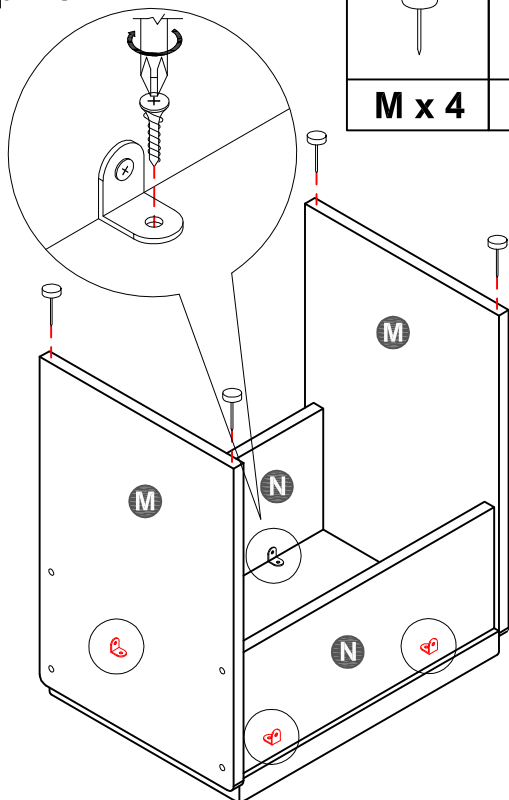

M x 4


G x 4

## Step 19

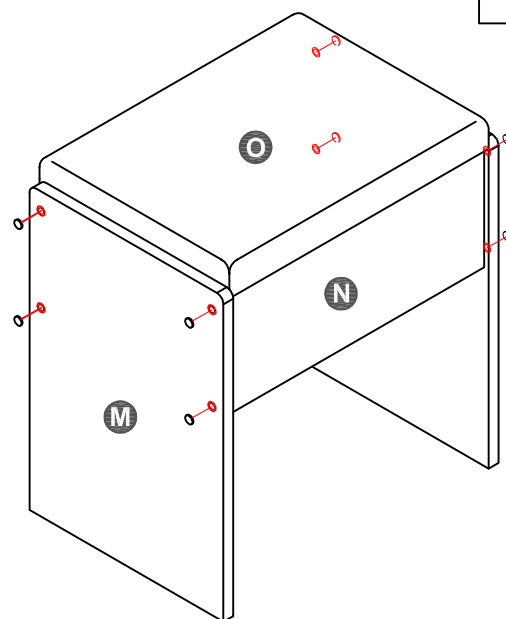


N x 8

## Step 20

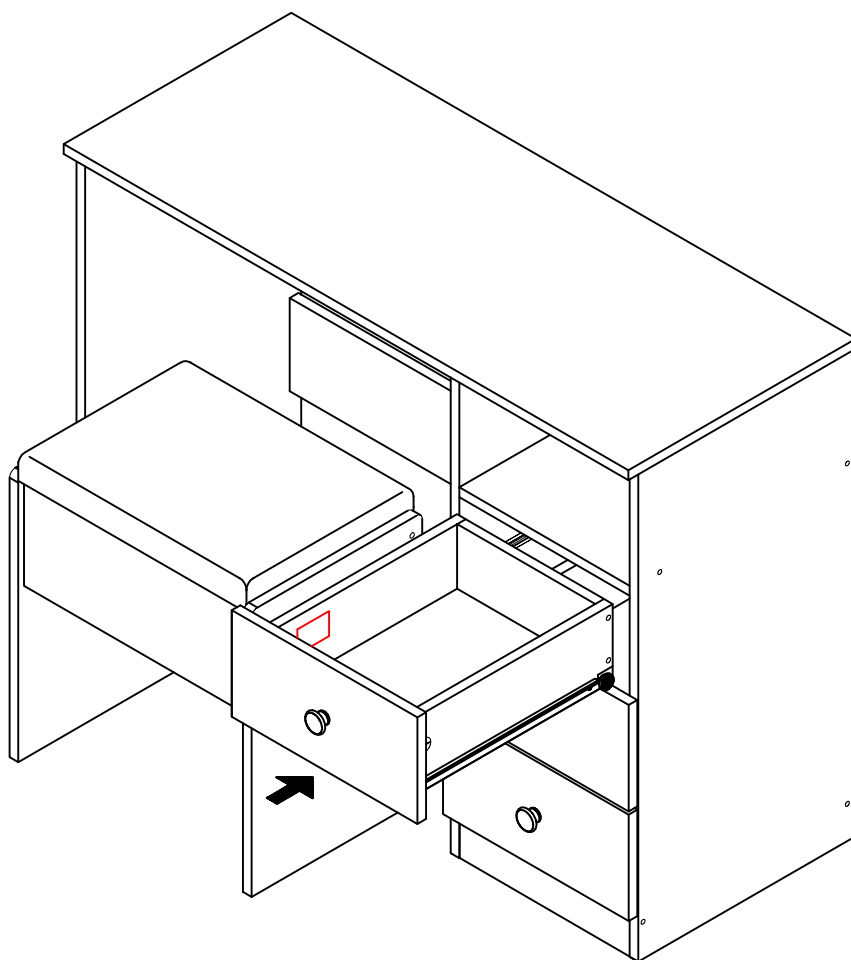


PLEASE ENSURE DRAWER THAT HAVE WARNING LABEL ON DRAWER SIDE - L IS INSTALL AS TOP DRAWER.

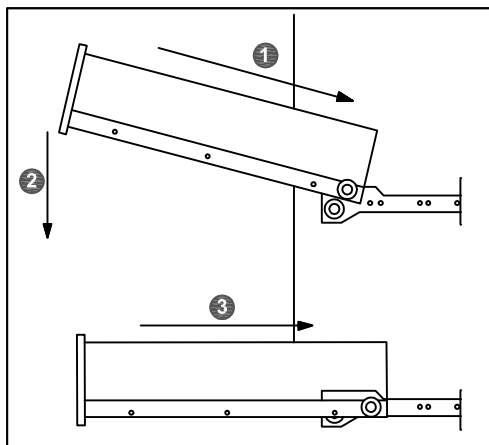

# FITTING OF ANTI-TIP SAFETY STRAP


## STEP 1:

**Pull the screw in the top panel hole of your furniture**

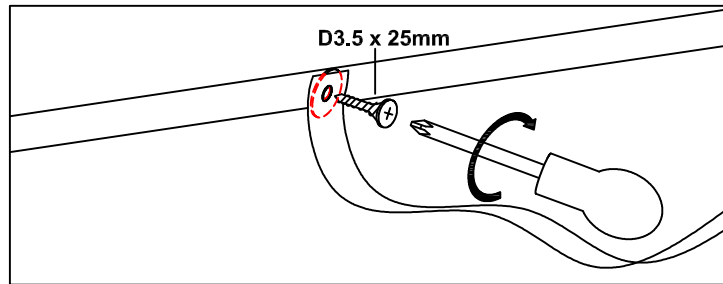


## STEP 2:

**Make a hole on the wall and pull the wall plug in**

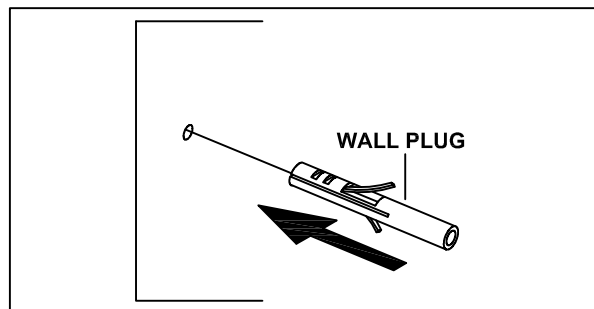

## STEP 3:

**Pull the screw in the wall hole**

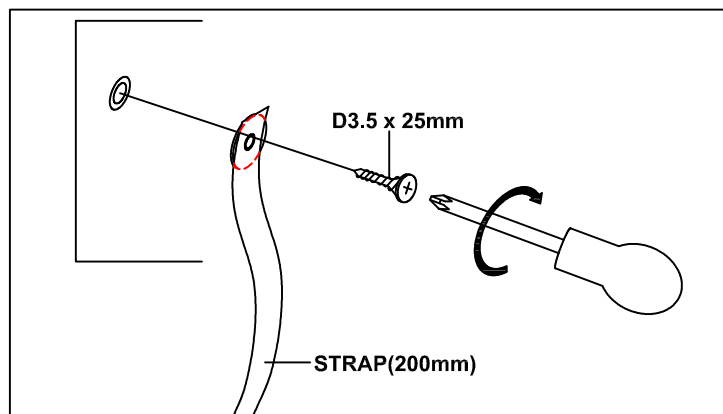

**NOTE :** Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

## HARDWARE LIST



**STRAP(200mm)-1Pc**



**D3.5 x 25mm-1Pc**