


PRINCESS WARDROBE

Assembly Instructions - Please keep for future reference

Cat No

GU861

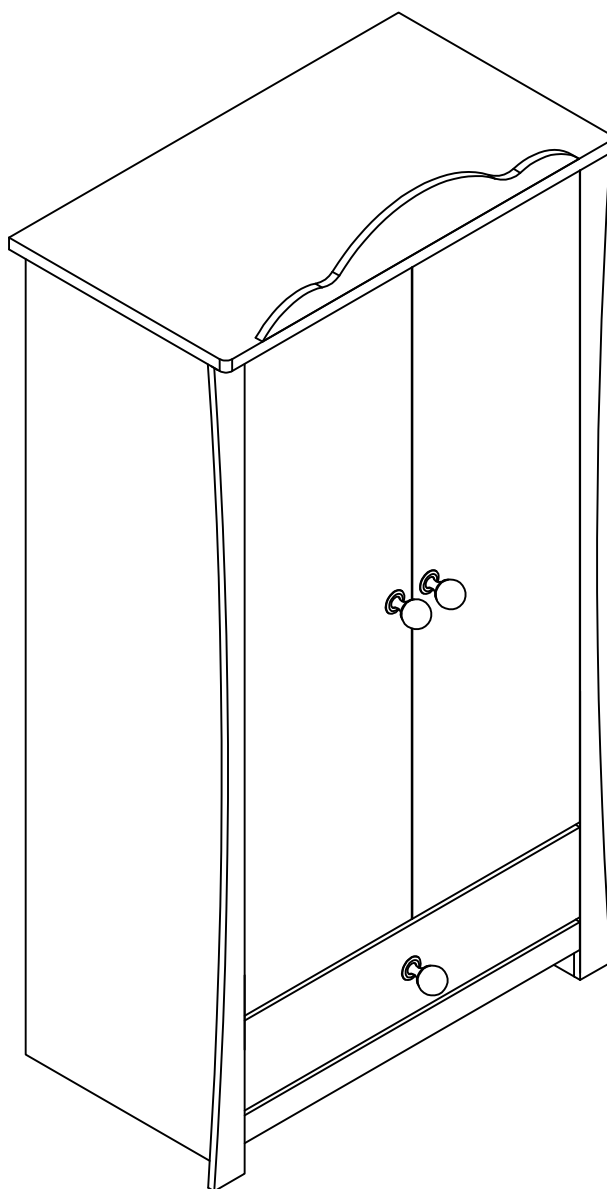

Dimensions	No. people	Assembly Time
Width: 95.0cm Depth: 51.5cm Height: 183.5cm		1 Hour (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**

Exploded View

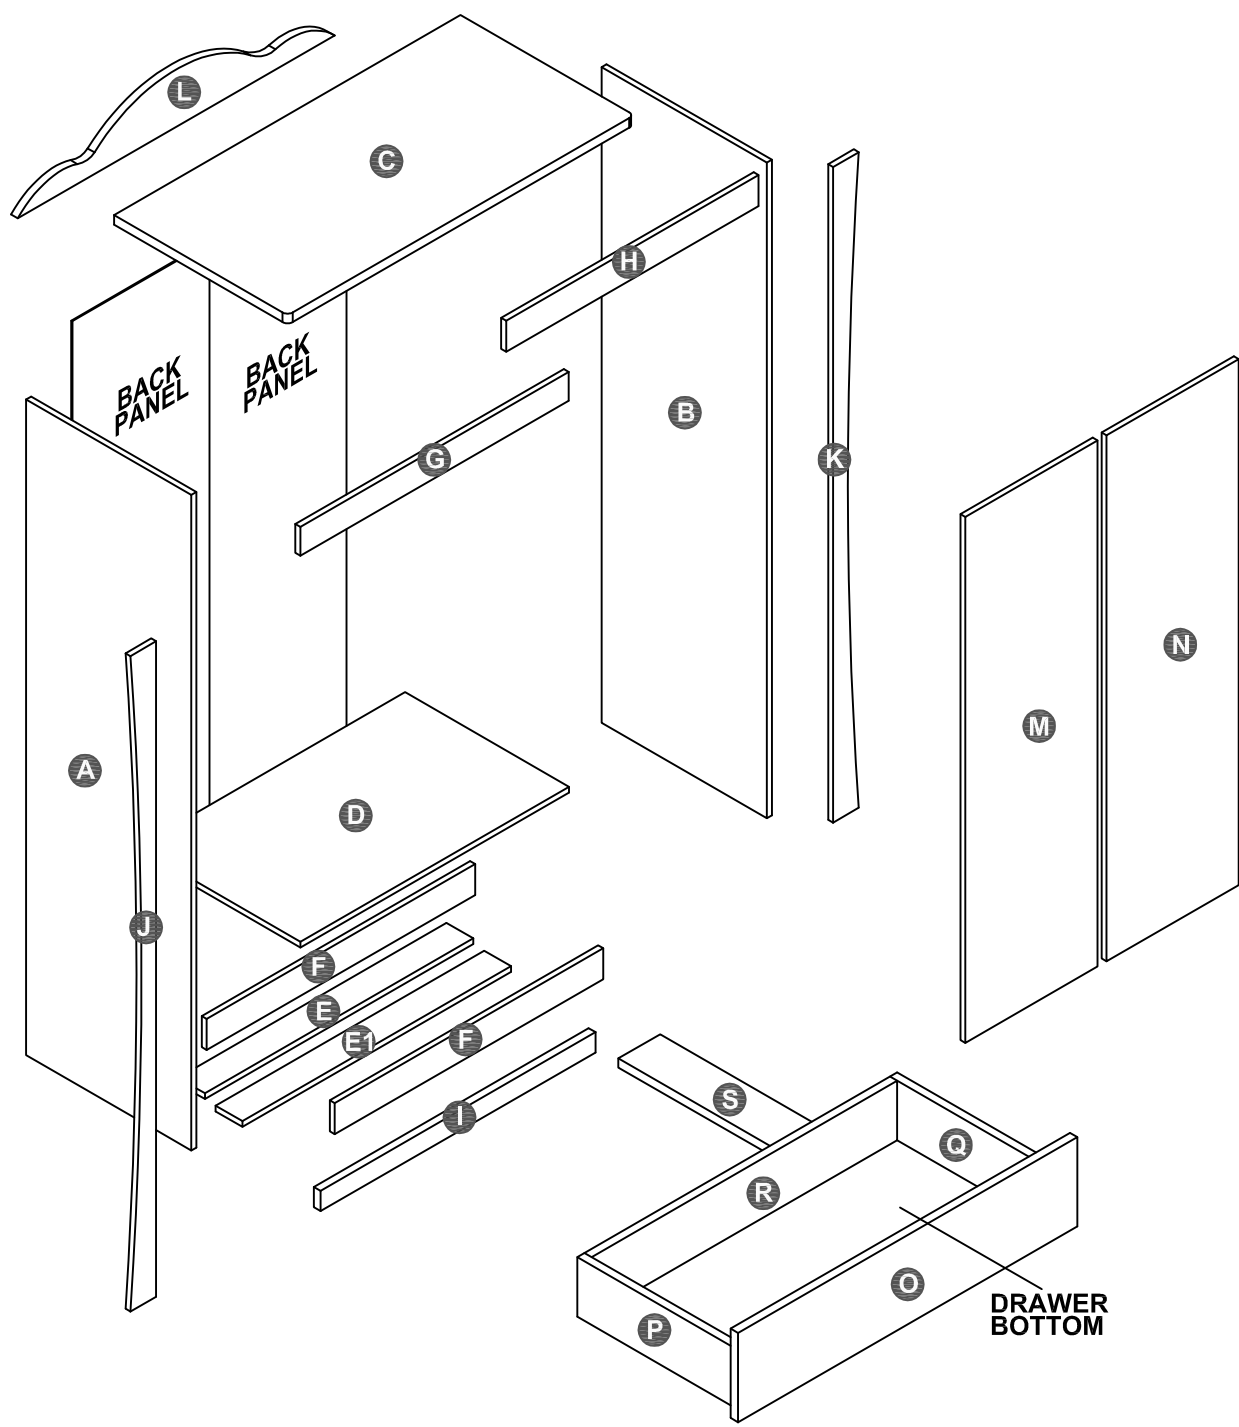

Components - Panels

Please check that you have all the components listed below before constructing your items.























Part No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Top Panel	1
D	Fix Shelf	1
E	Bottom Bar Back	1
E1	Bottom Bar Front	1
F	Bottom Support	2
G	Back Support	1
H	Rein Force Bar	1
I	Front Bottom Bar	1
J	Side Bar - L	1
K	Side Bar - R	1
L	Top Profile	1
M	Door - L	1
N	Door - R	1
O	Drawer Front	1
P	Drawer Side - L	1
Q	Drawer Side - R	1
R	Drawer Back	1
S	Drawer Support	1
	Drawer Bottom	1
	Back Panel	2

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


***Hardware packed separately according to the code.**

(A)	CSK M4 x 38mm	(B)	Minifix Bolt	(C)	CSK M3.5 x 25mm	(D)	Screw M4 x 22mm
							
	4 units		28 units		1 unit		3 units
(E)	Dowel D8 x 30mm	(F)	CSK M3.1 x 20mm	(G)	CSK M3.5 x 15mm	(H)	Screw M10 x 1/2"
							
	34 units		16 units		10 units		24 units
(I)	Nail Leg	(J)	Minifix Cam	(K)	L-Bracket 2mm	(L)	Screw M6 x 8mm
							
	4 units		28 units		3 units		4 units
(M)	Safety Strap + Washer	(N)	Metal Hanger 796mm	(O)	Drawer Slide 14"	(P)	Drawer Slide 14"
							
	1 unit		1 unit		1 unit		1 unit
(Q)	Plastic U-Bracket	(R)	Hinges (7/8")	(S)	Backply Stopper	(T)	Allenkey M4
							
	2 units		6 units		16 units		1 unit
(U)	Handle Pink	(U)	Handle Clear				
							
	3 units		3 units				

Tools Required





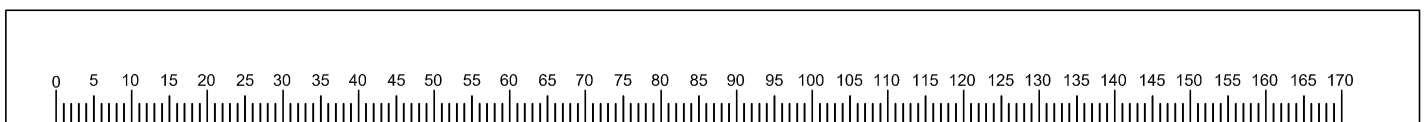



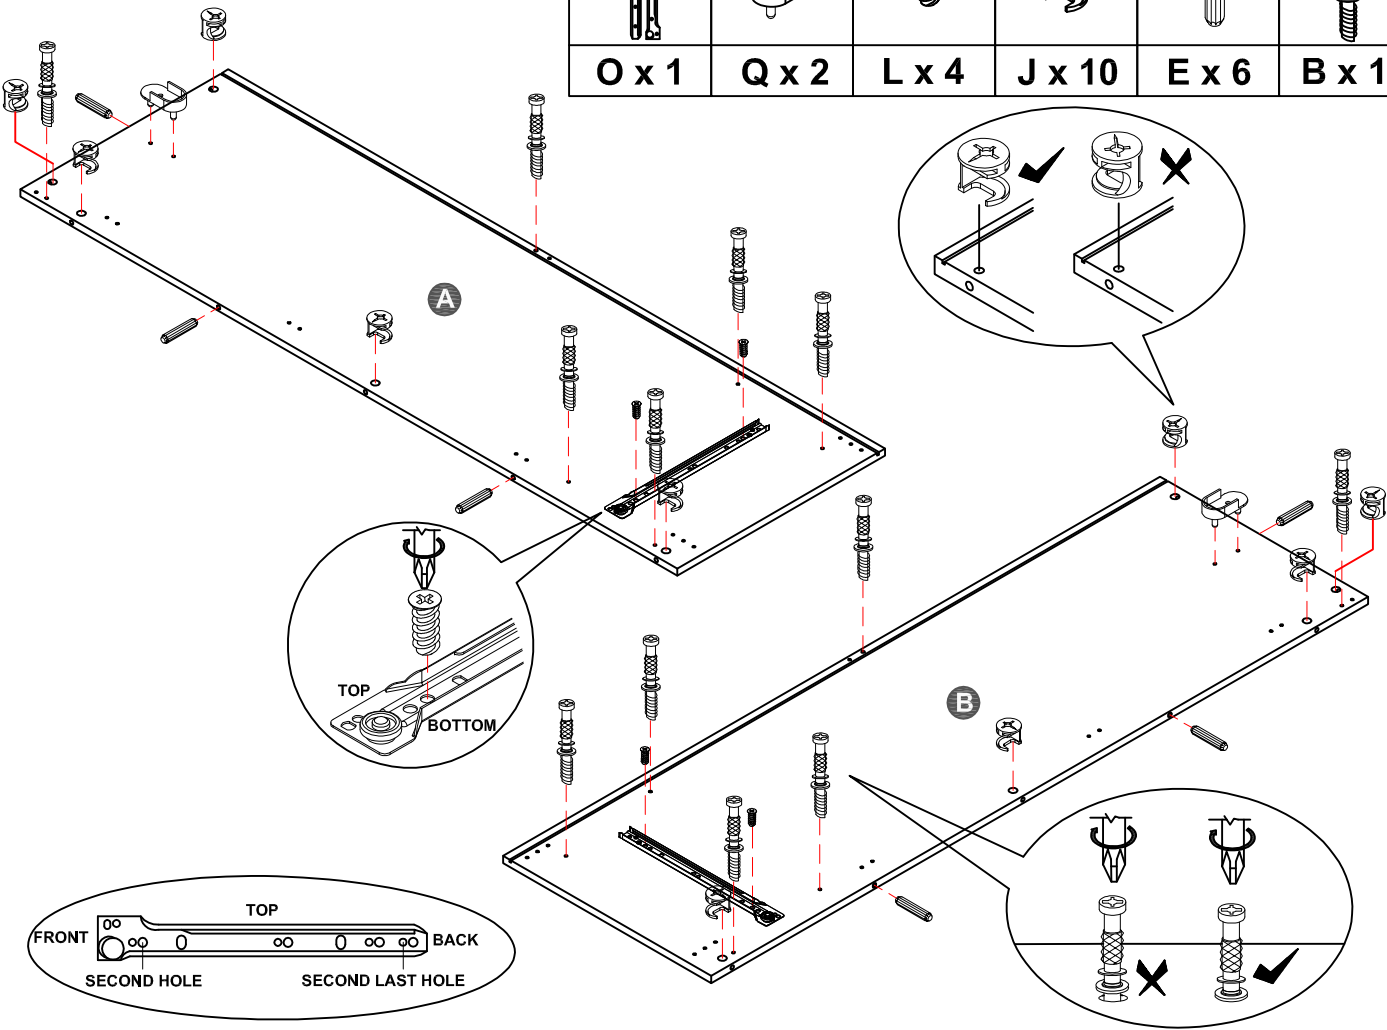
Ruler - Use this to measure your screws (mm)







Assembly Instructions


Step 1

					
O x 1	Q x 2	L x 4	J x 10	E x 6	B x 12




Step 2


			
K x 3	J x 14	G x 3	E x 19

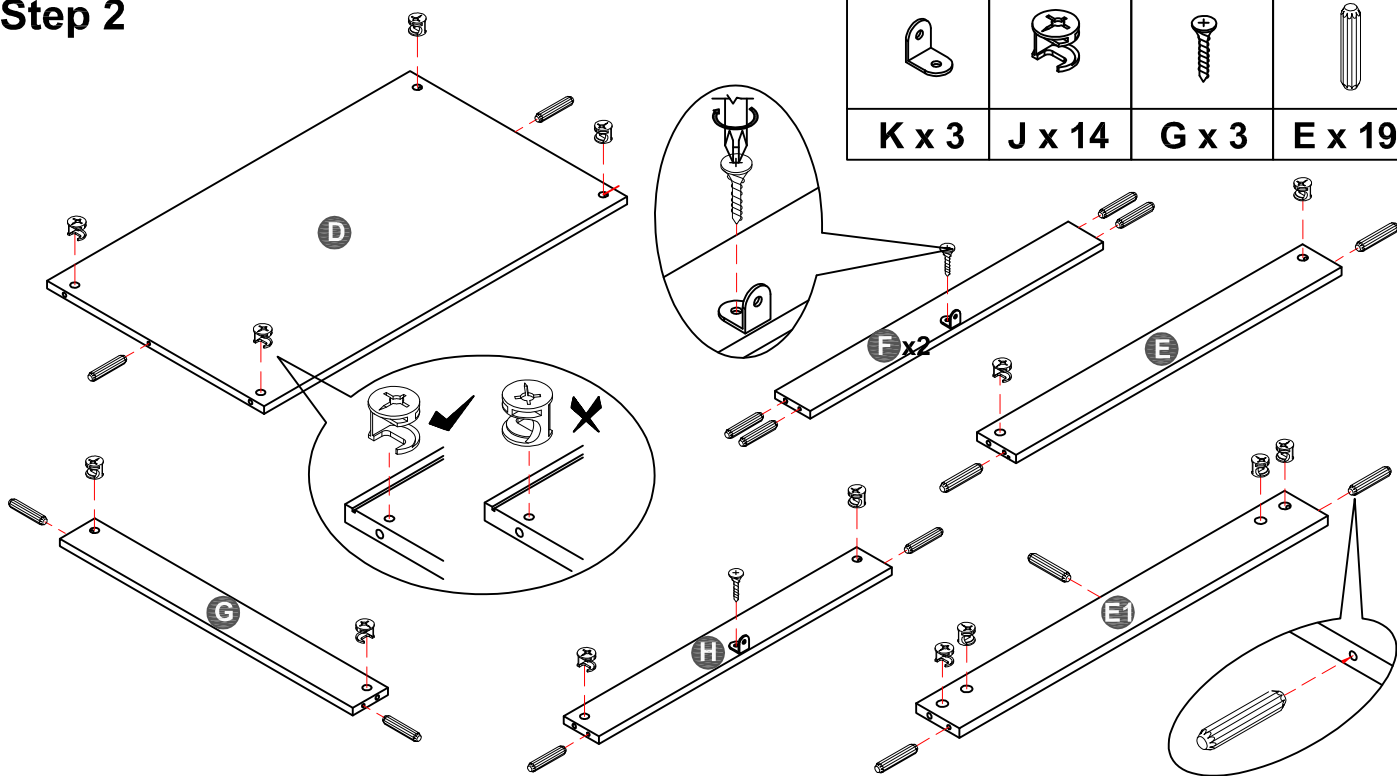


Step 3

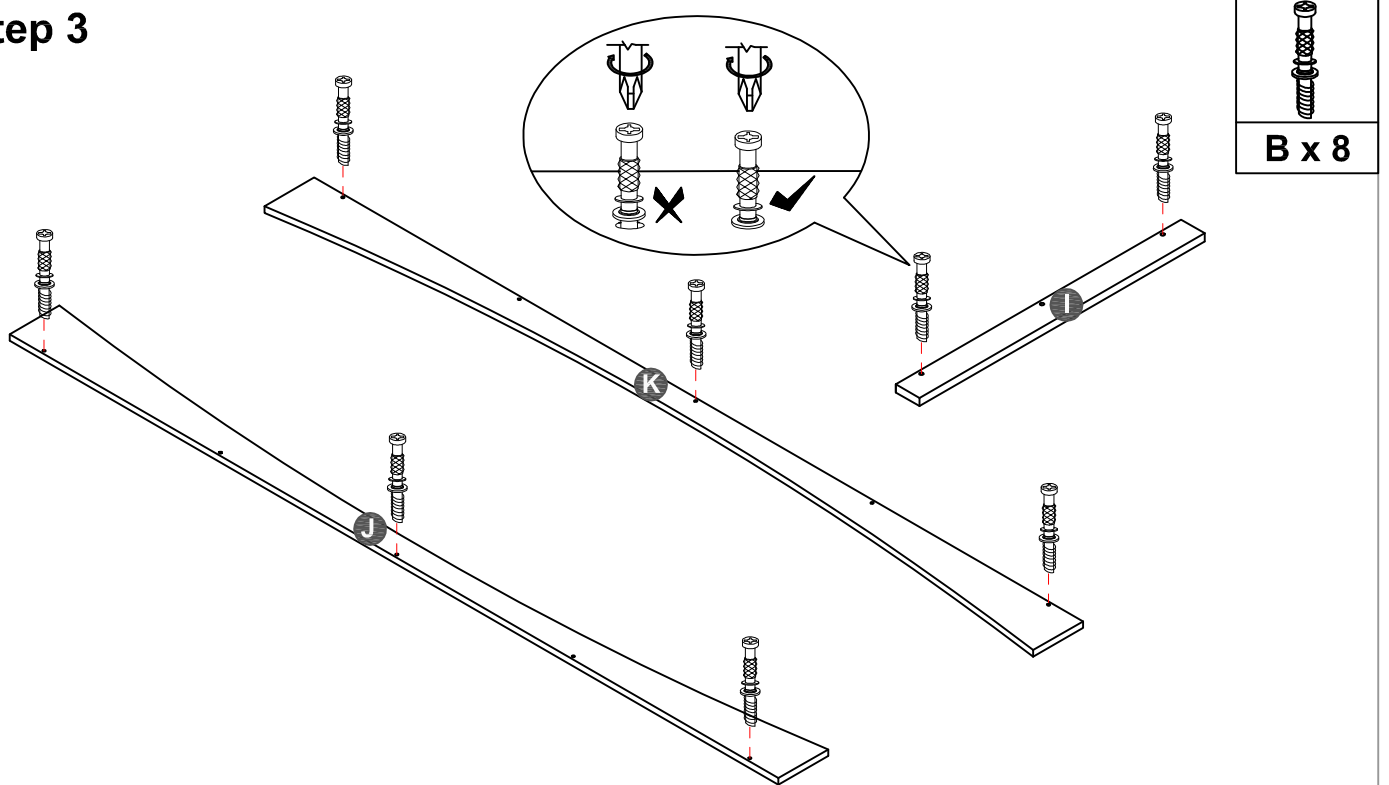


Step 4

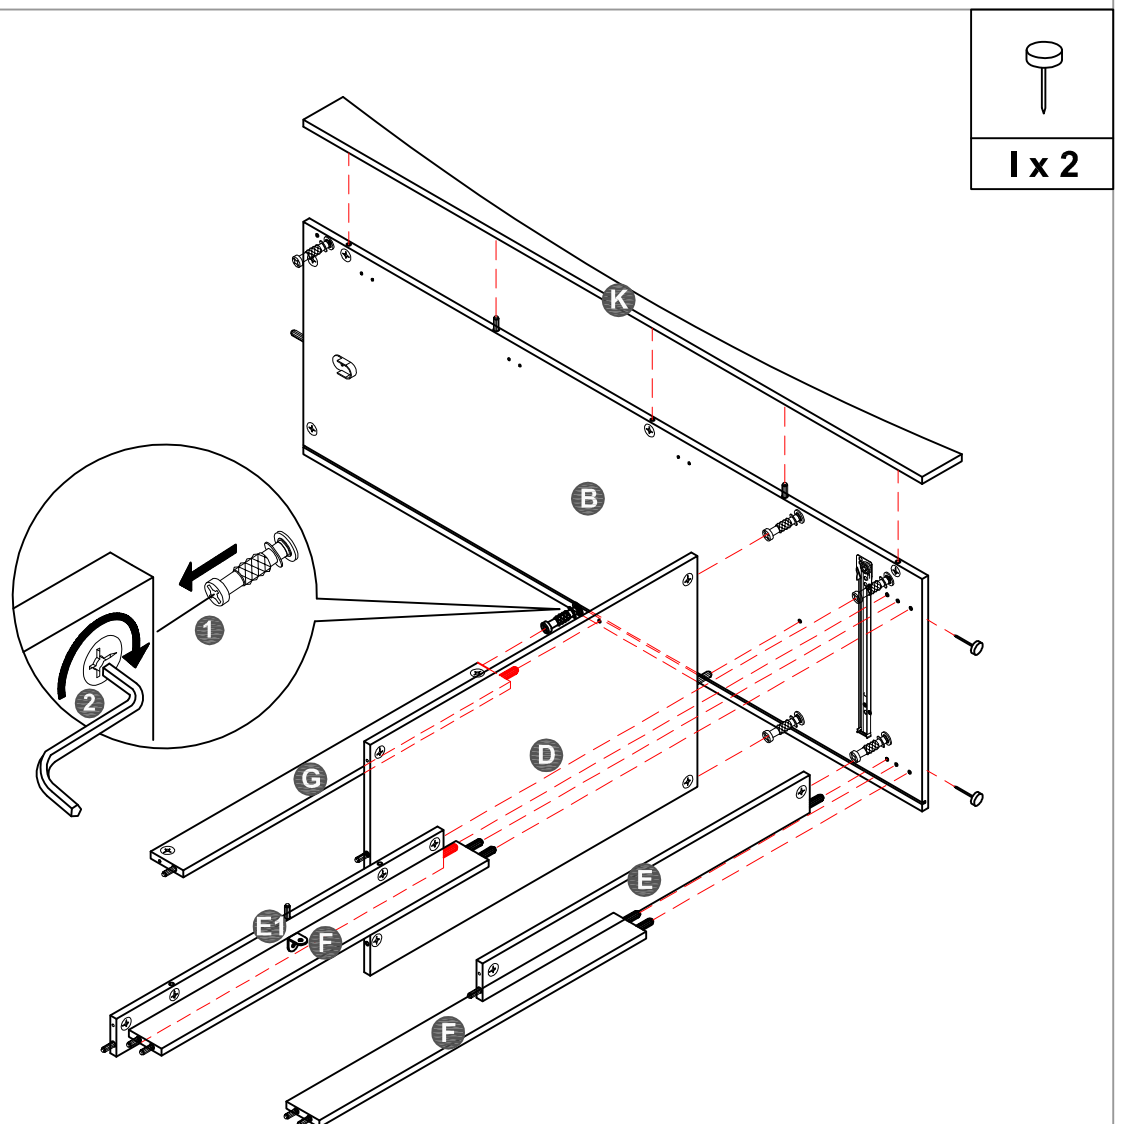


Step 5

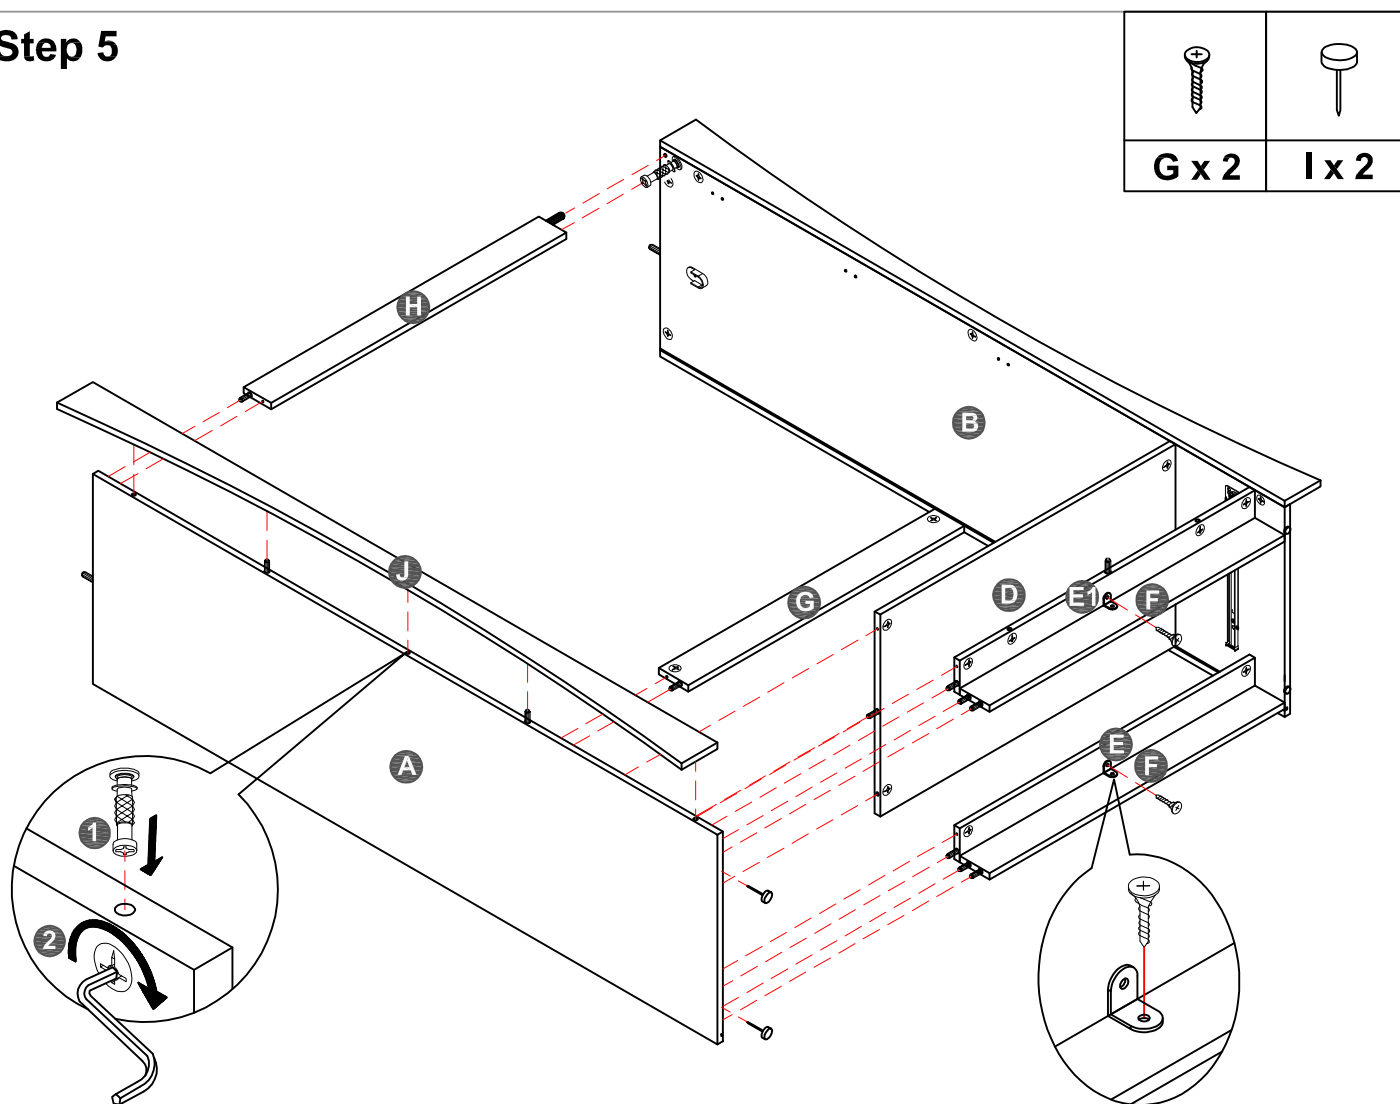


Step 6

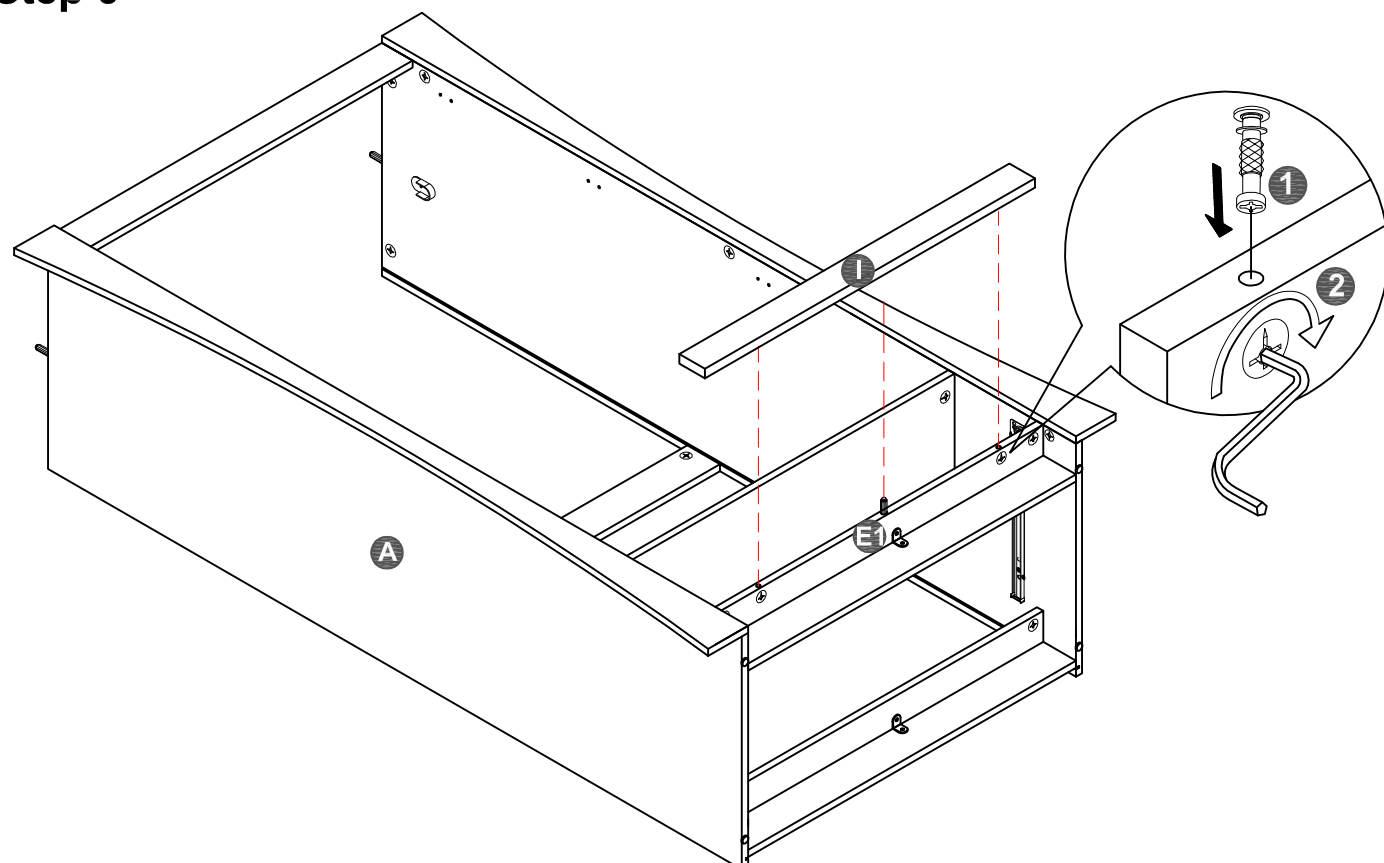


Step 7

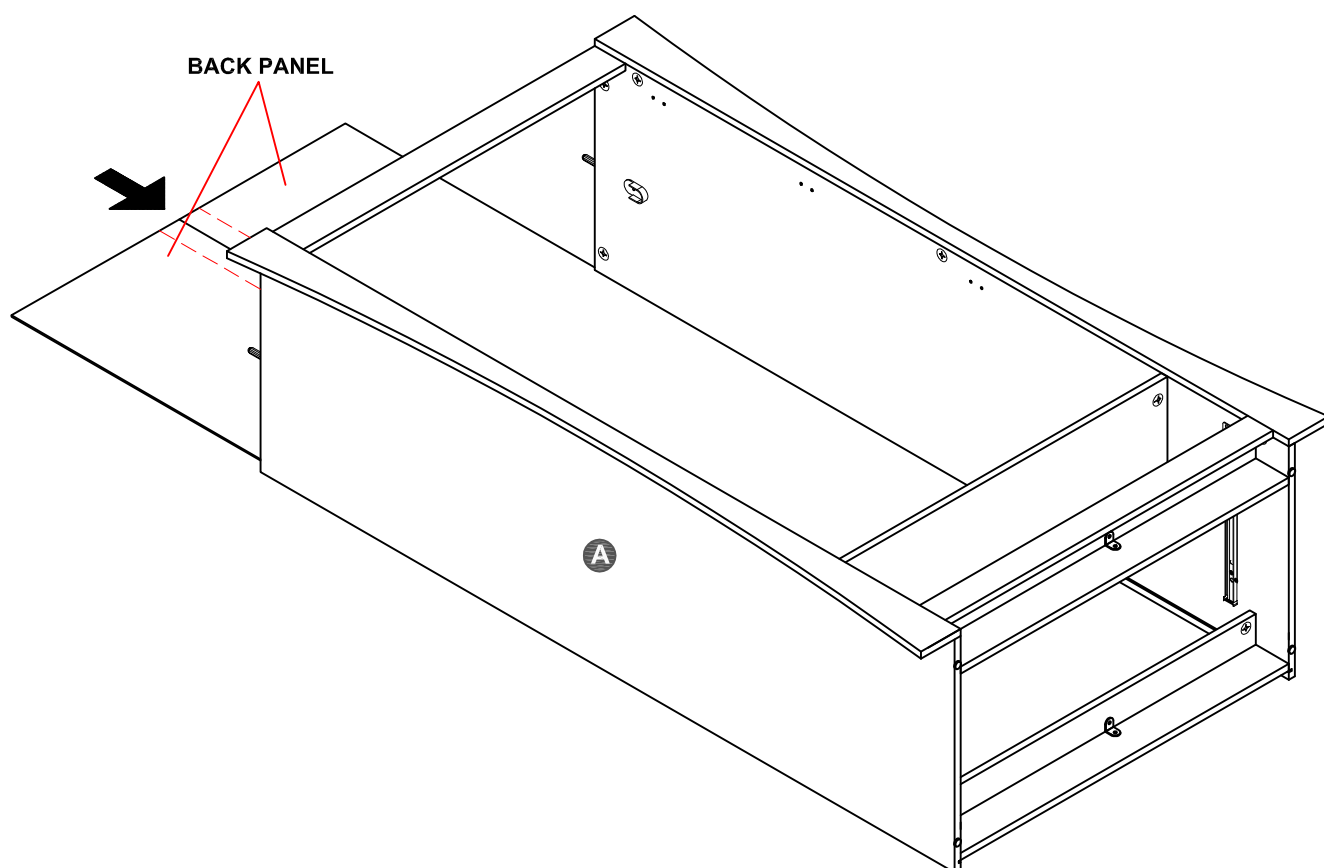


Step 8

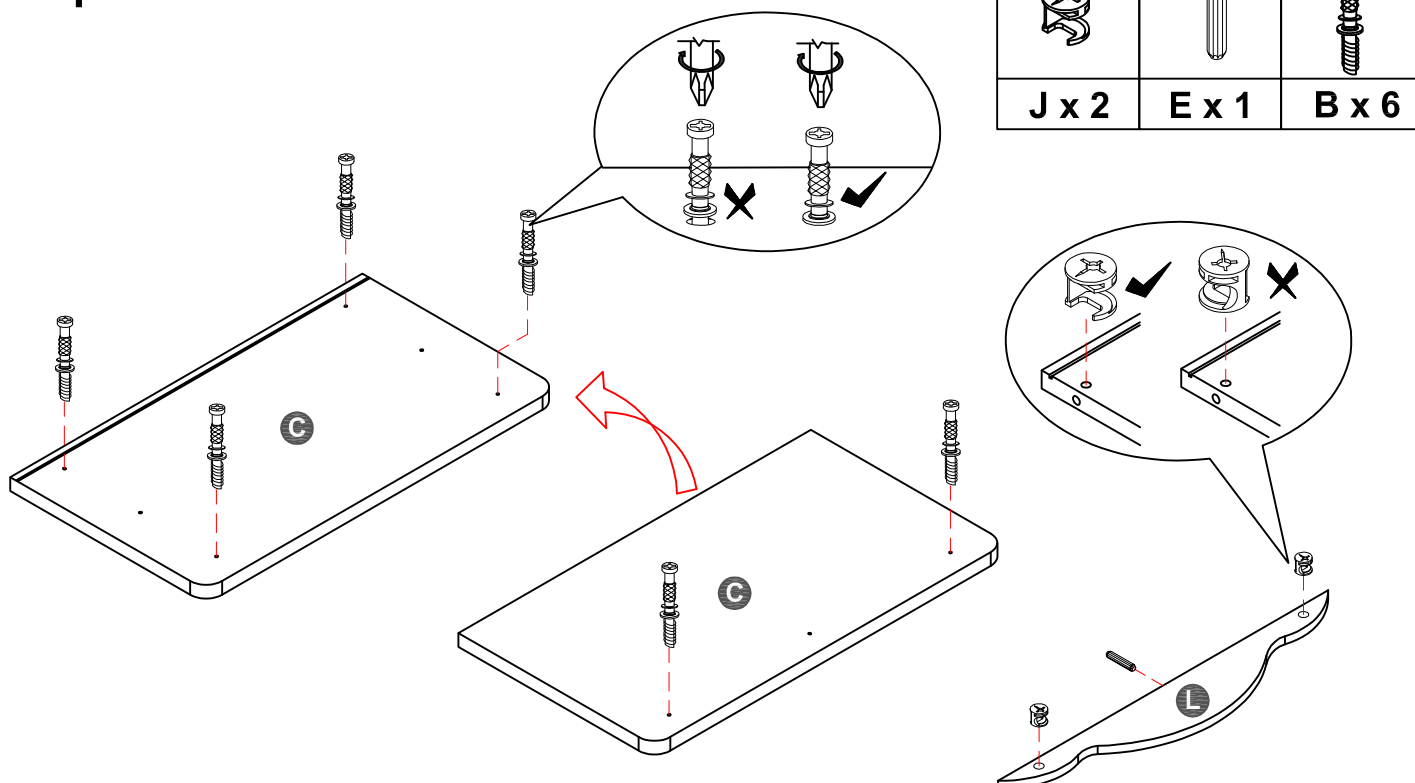

Step 9

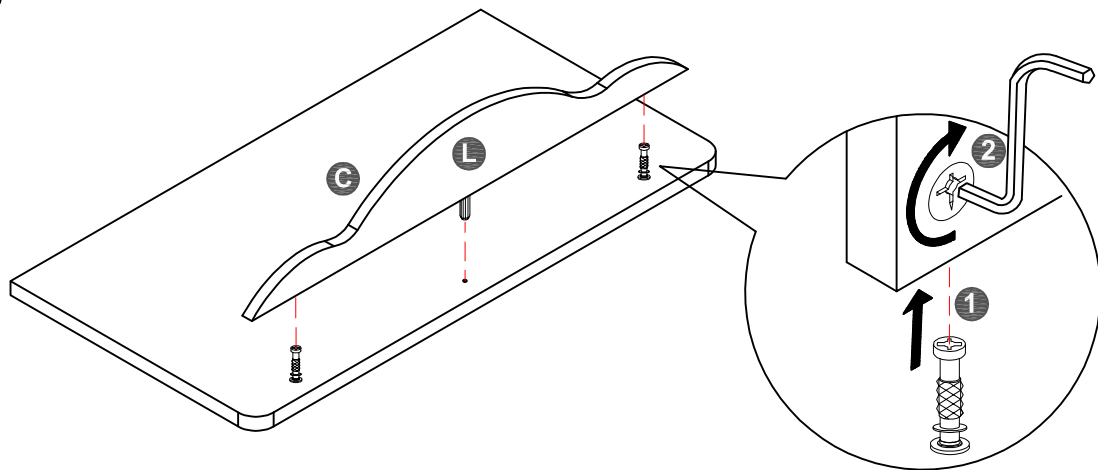


Step 10

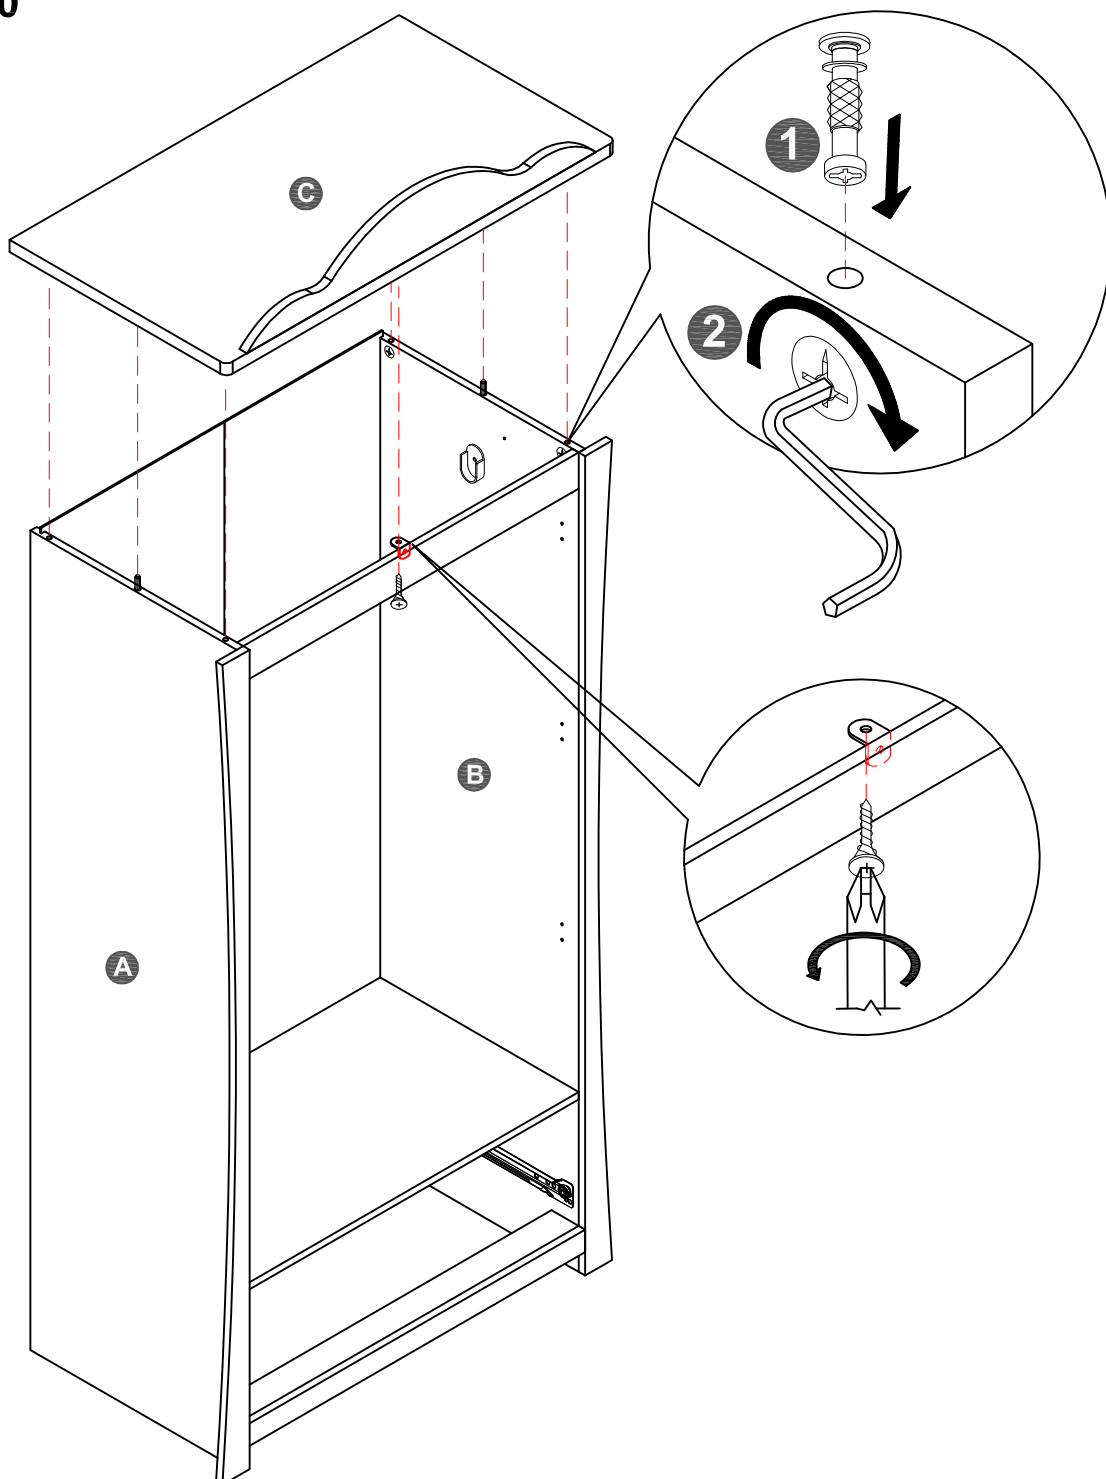


G x 1


Step 11

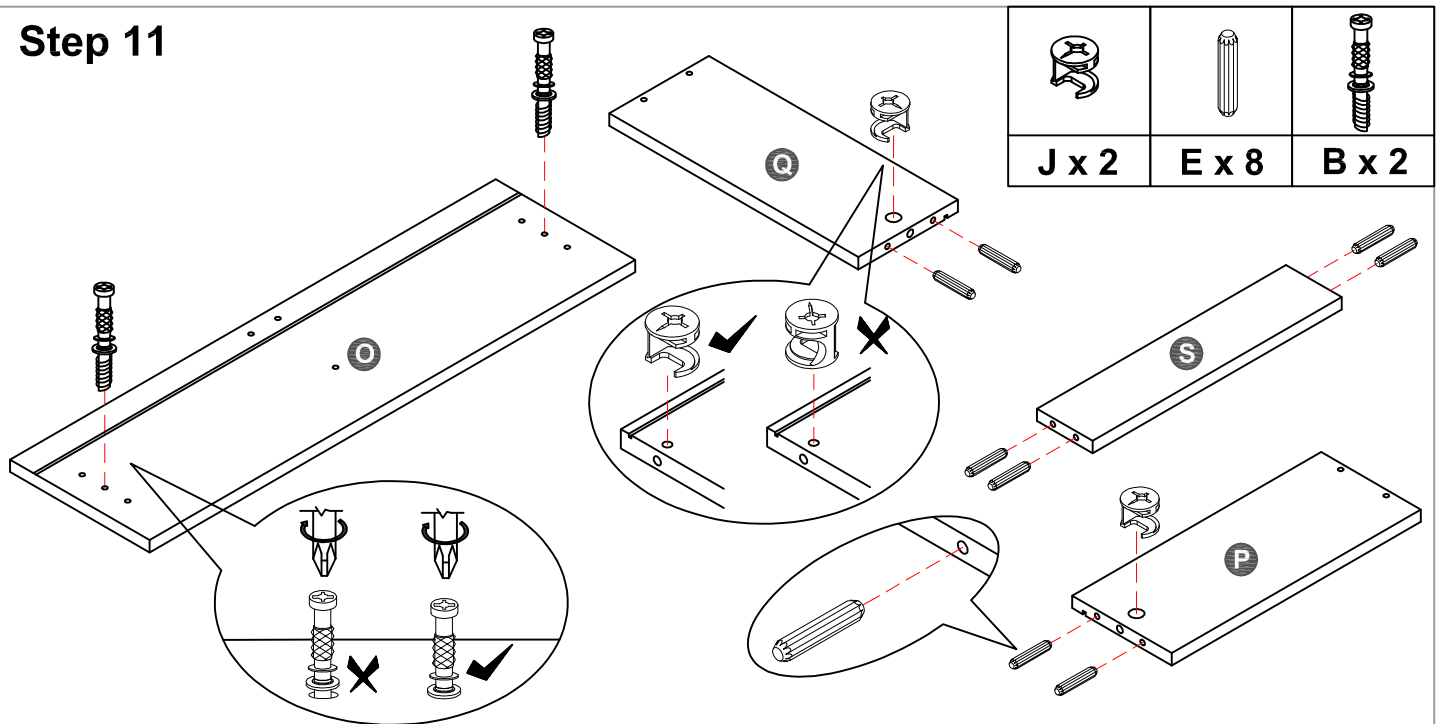


Step 12

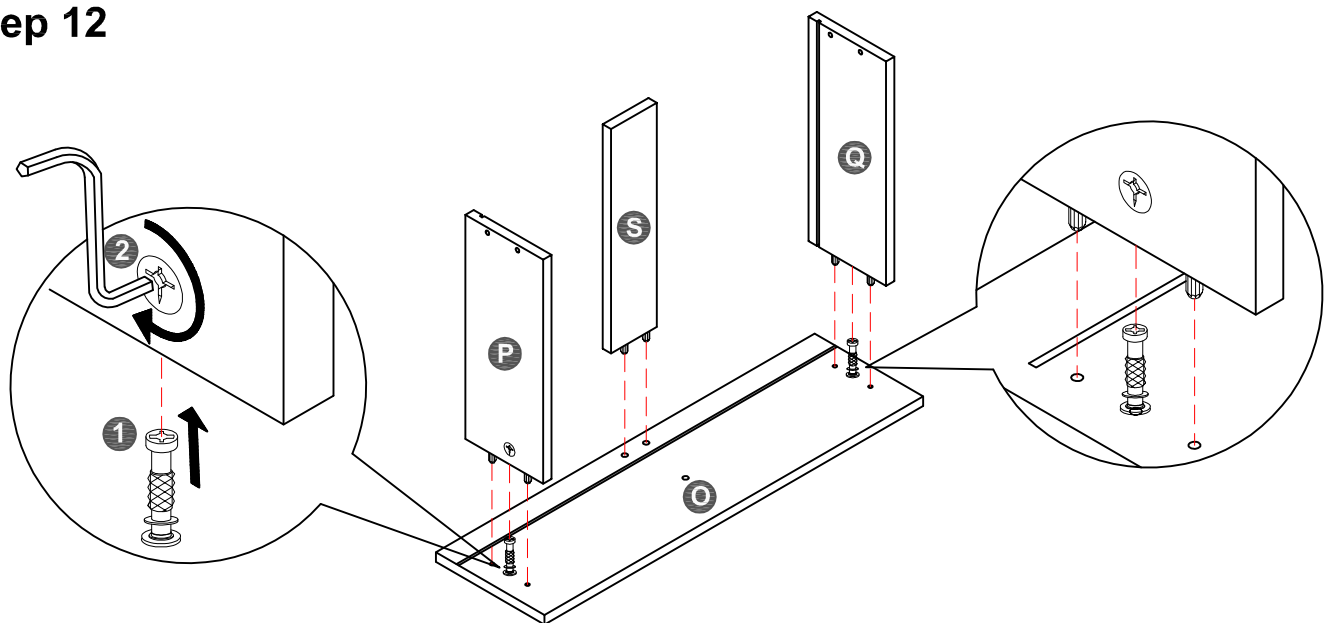

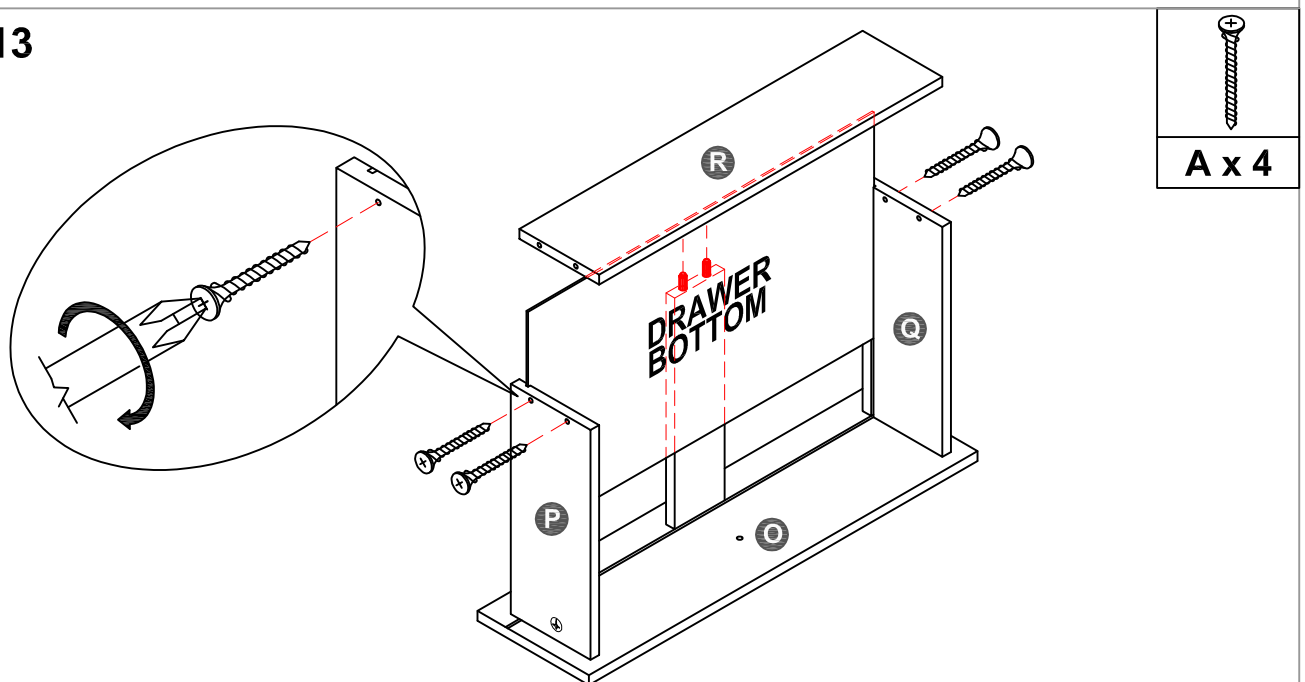

Step 13




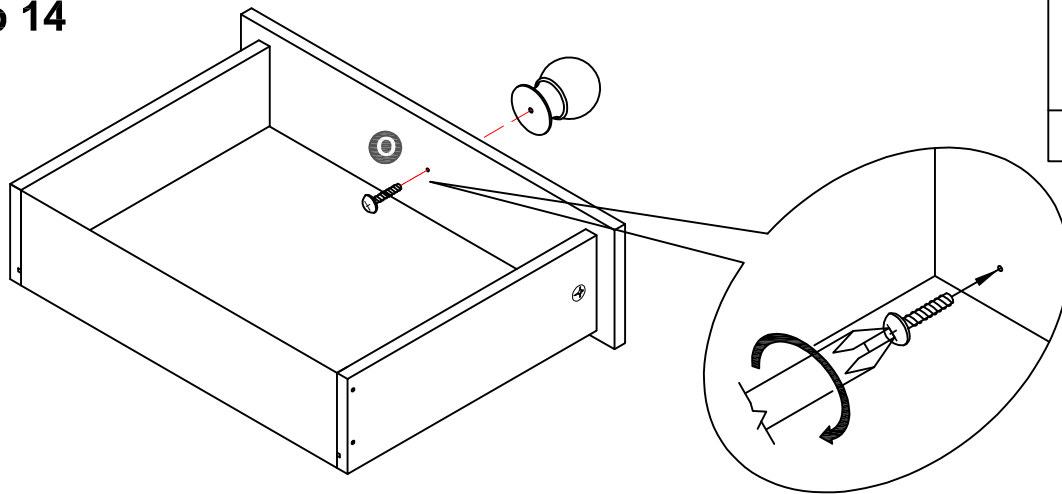

Step 14




	
U x 1	D x 1

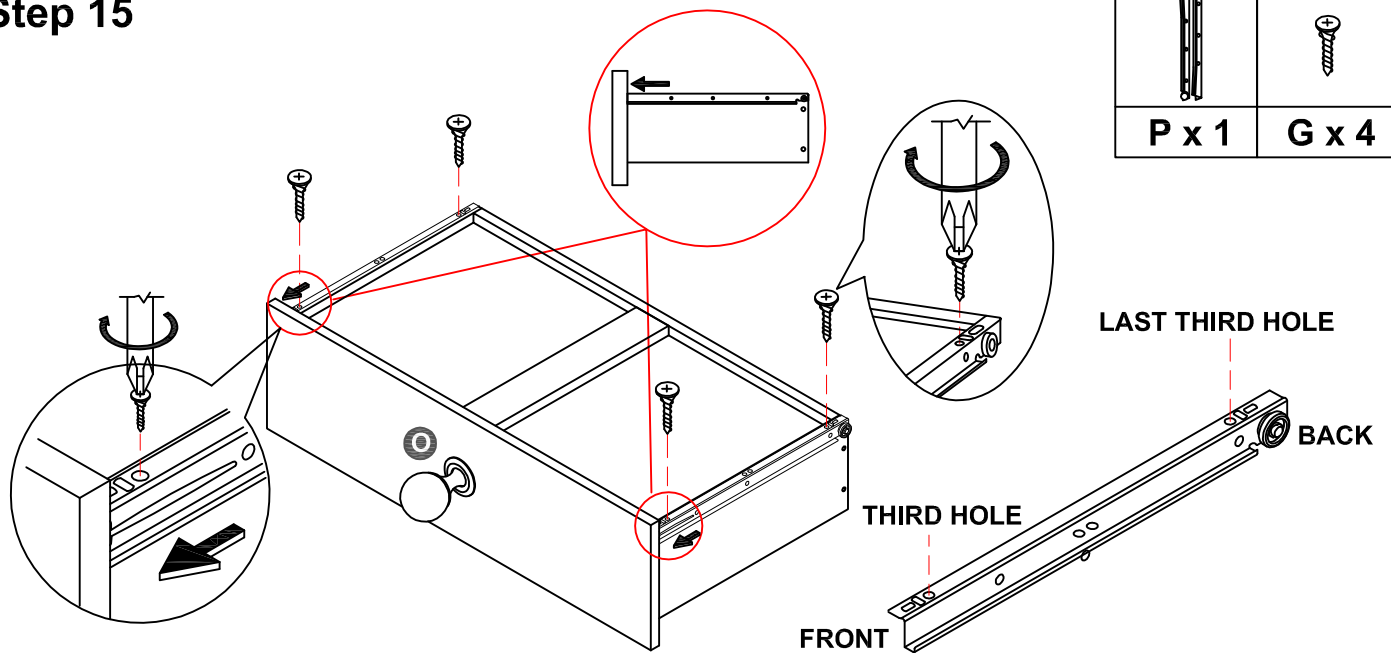

Step 15







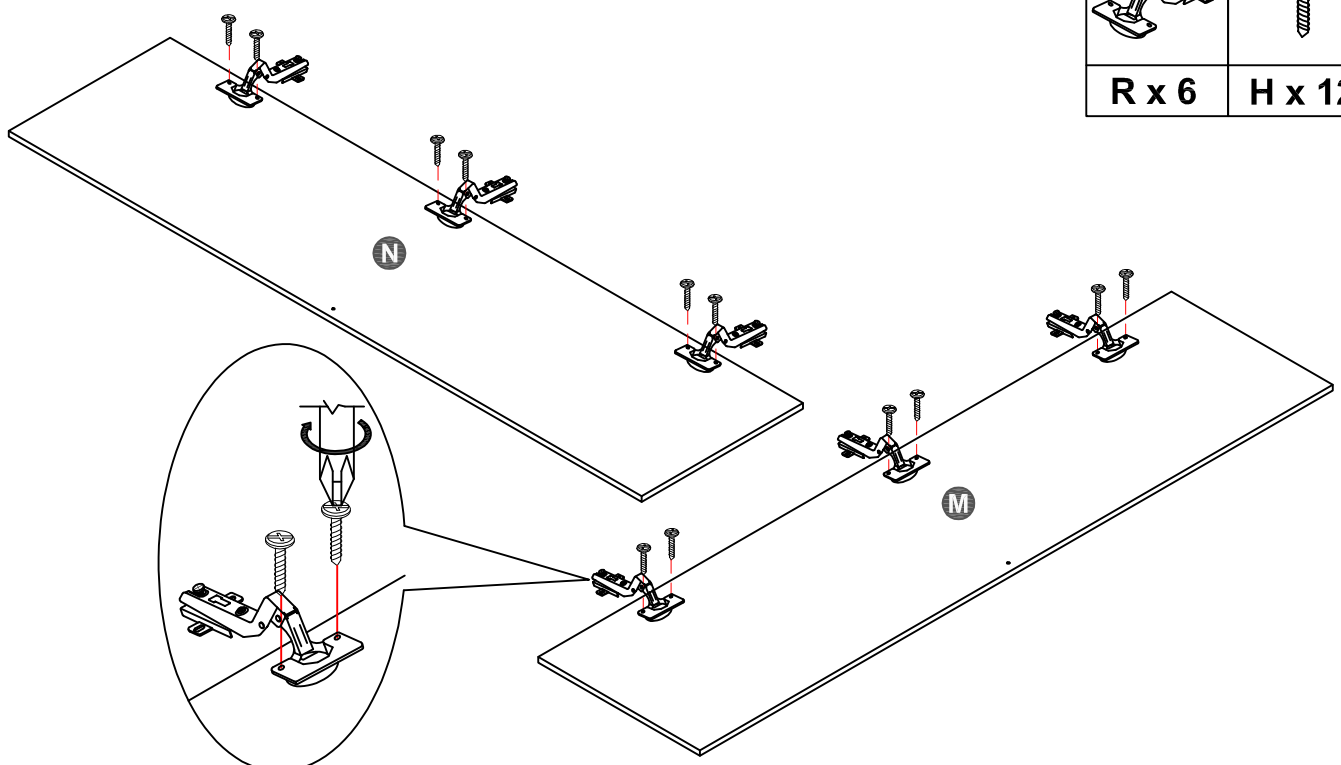	
P x 1	G x 4



Step 16



	
R x 6	H x 12

Step 17

			
N x 1	U x 2	H x 12	D x 2

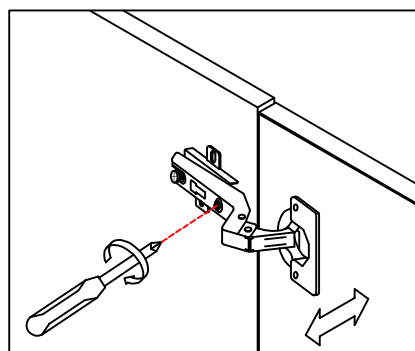
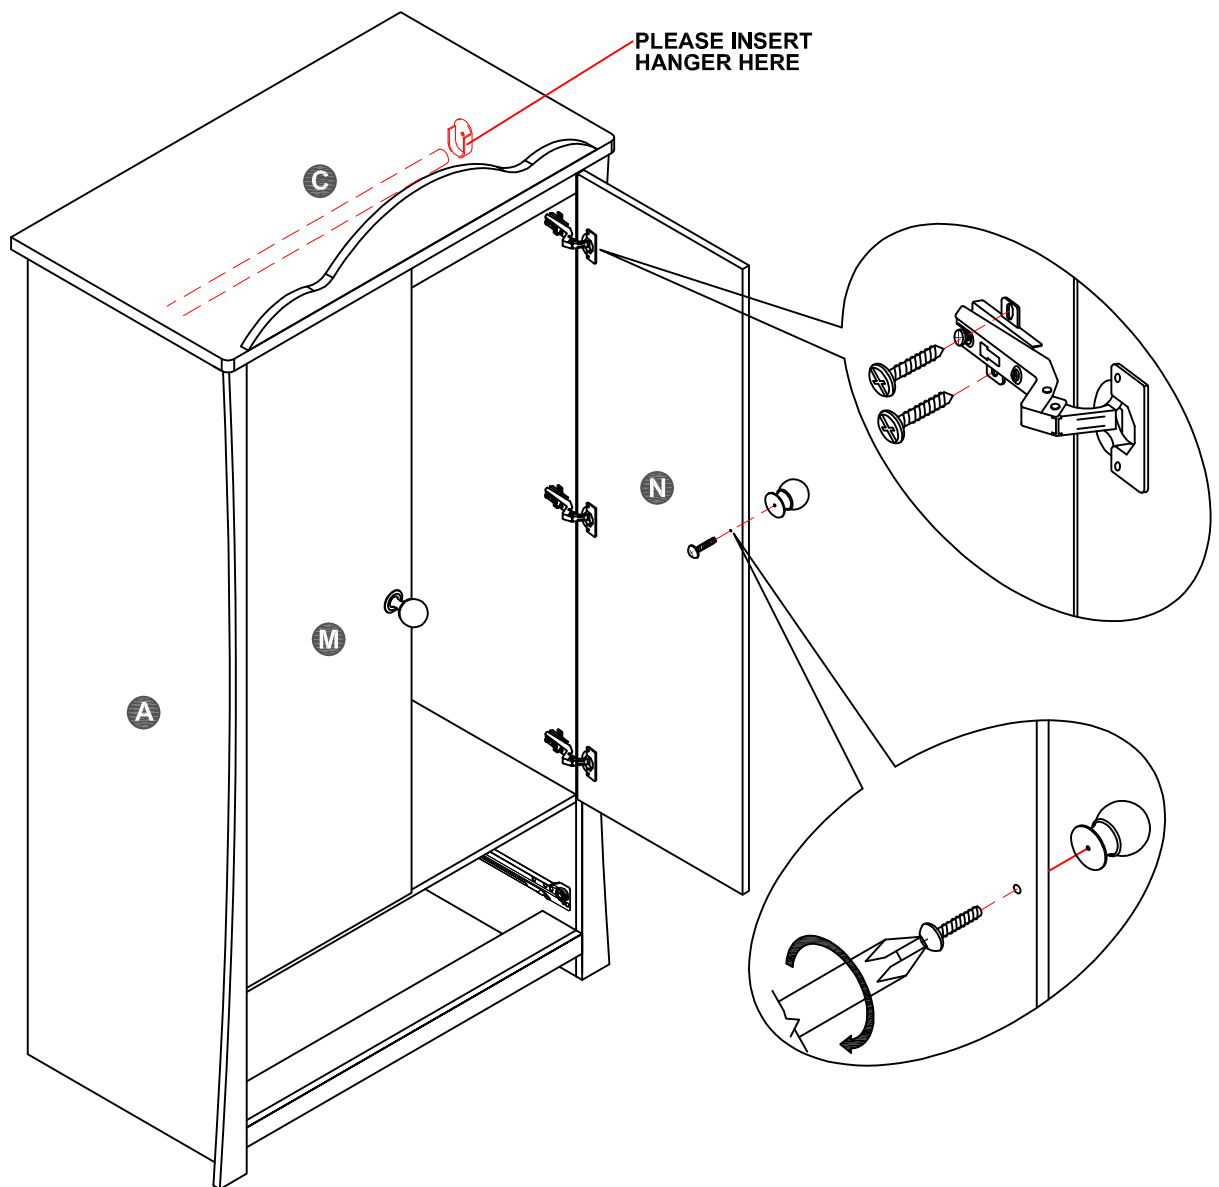


Step 18




S x 16

F x 16

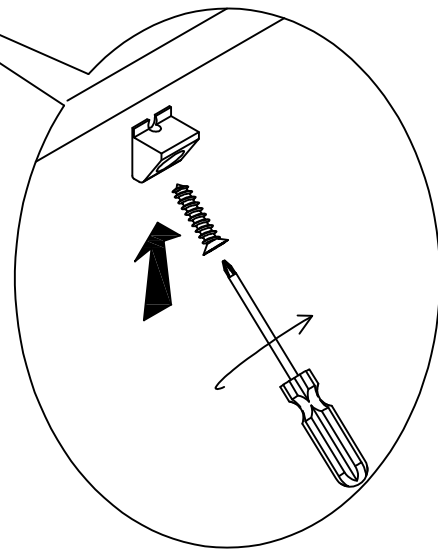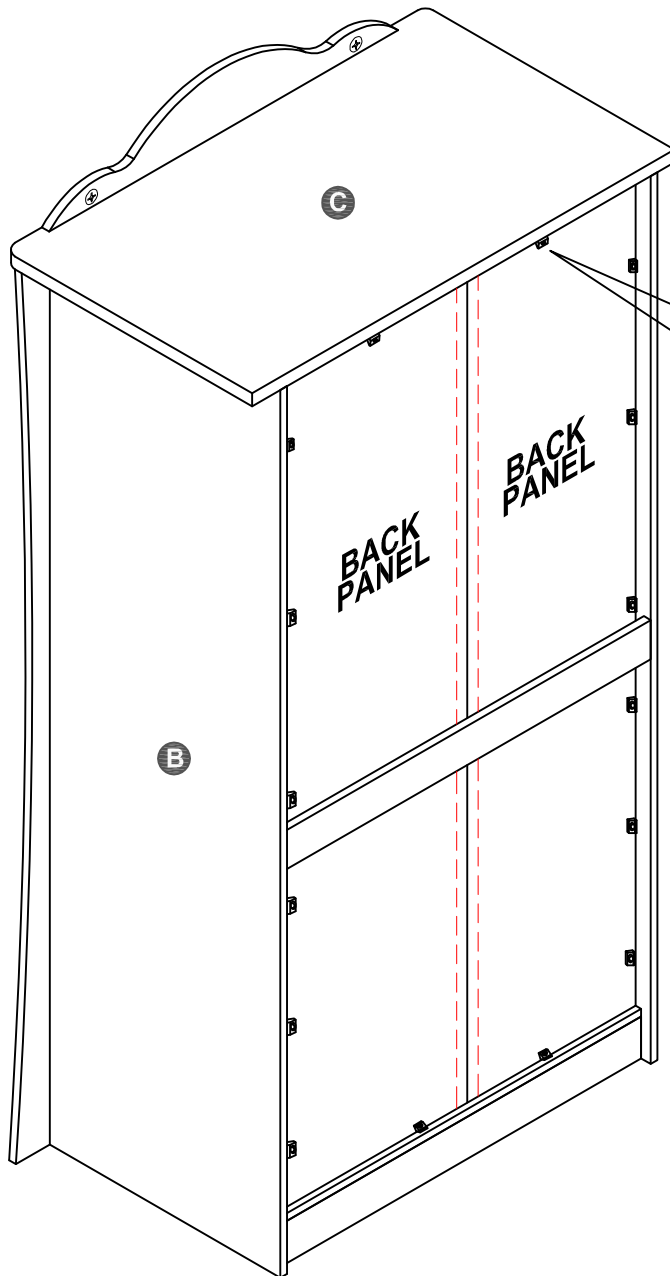


**PLEASE ENSURE THAT EACH
OF THE FOUR CORNERS OF
THE CABINET IS SQUARE.**

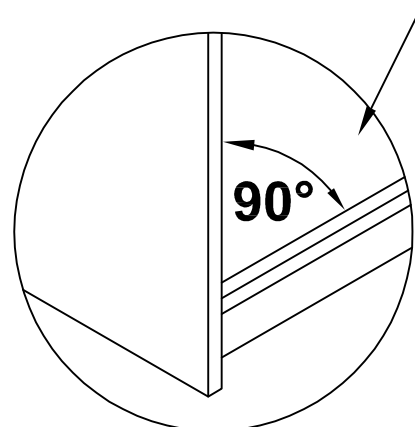

FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:

Pull the screw in the top panel hole of your furniture

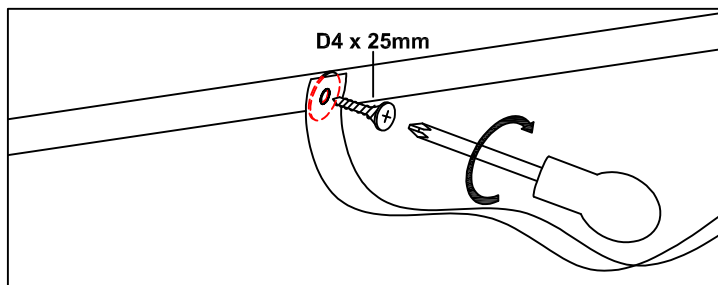


STEP 2:

Make a hole on the wall and pull the wall plug in

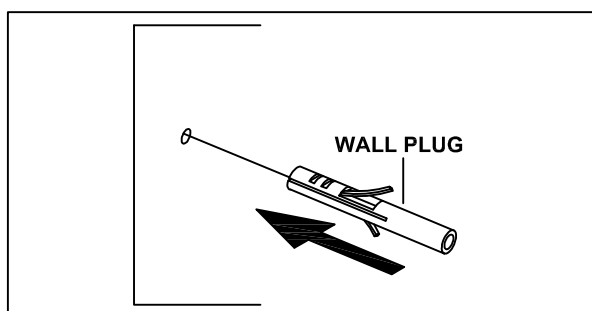

STEP 3:

Pull the screw in the wall plug hole

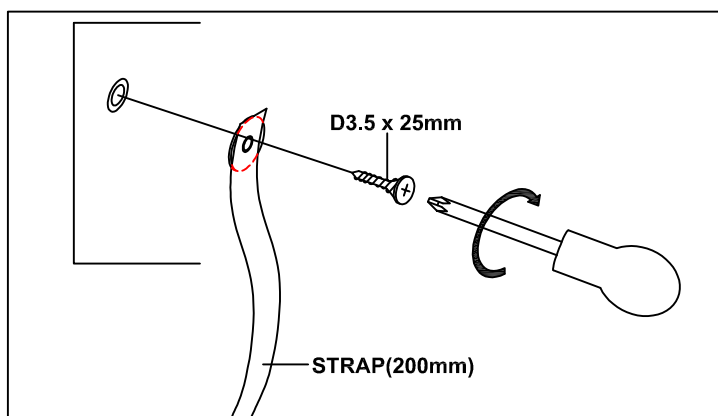

NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

HARDWARE LIST



STRAP(200mm)-1Pc



D4 x 25mm-1Pc