


JD Williams

MIAMI GLOSS BEDROOM PACKAGE - 1 DRAWER BEDSIDE TABLE (2PCS)

Assembly Instructions - Please keep for future reference

Cat No

MR981

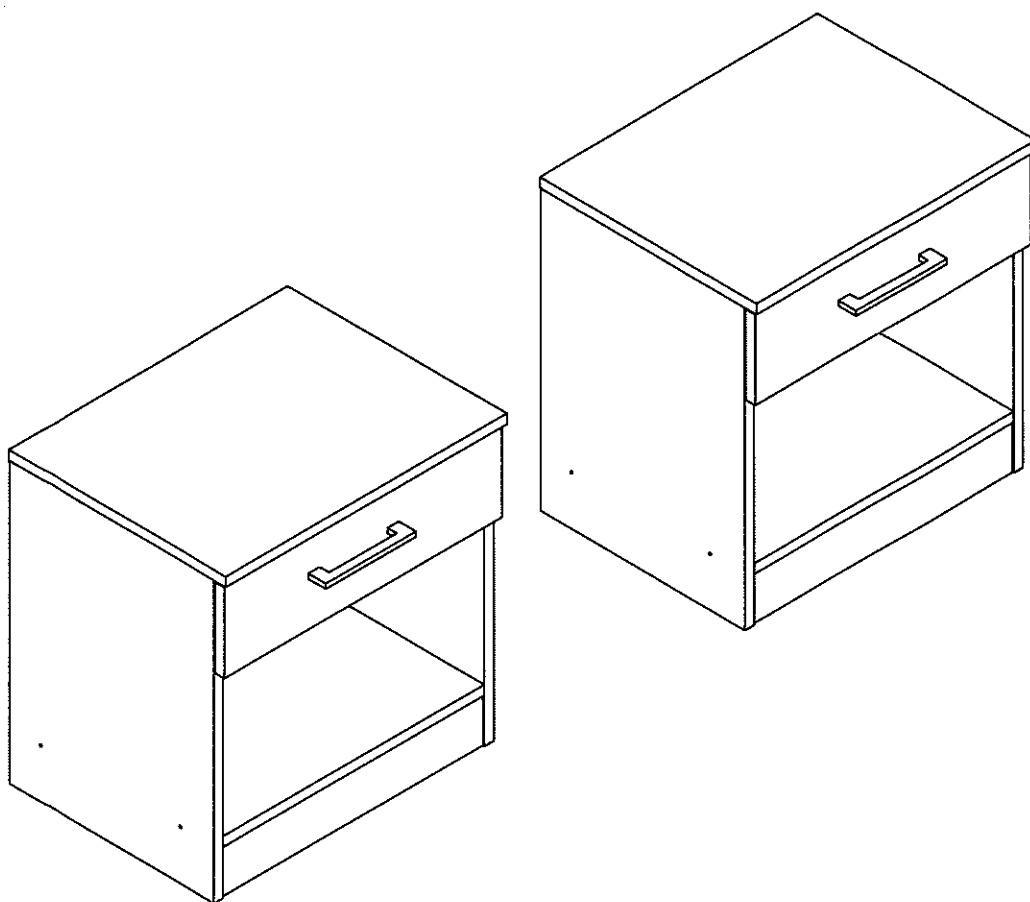

Dimensions	No. people	Assembly Time
Width: 45.2cm Depth: 35.5cm Height: 46.5cm		30Minutes (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance



- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**

Exploded View

Warning: Please do not remove the protection film until the assembly process completed.

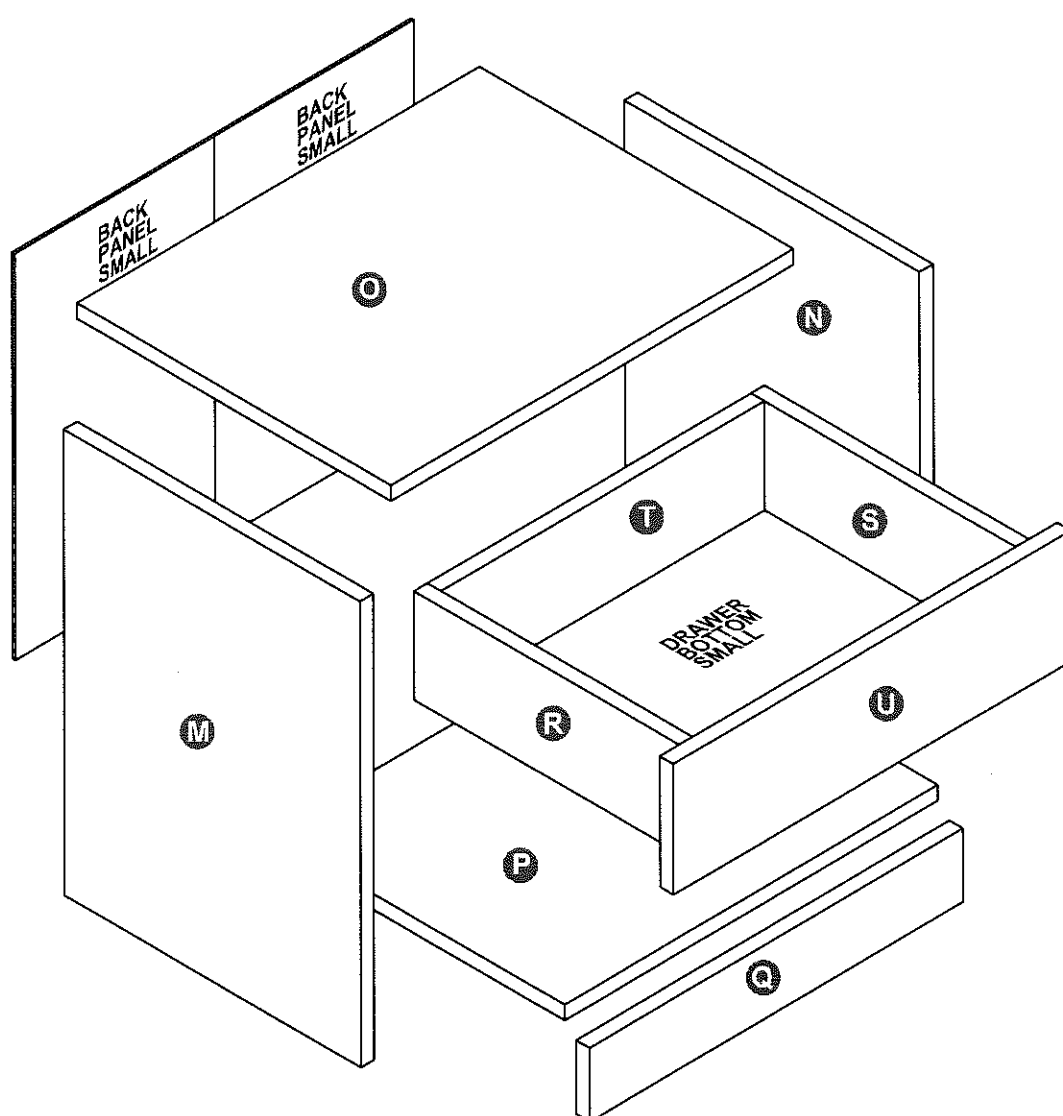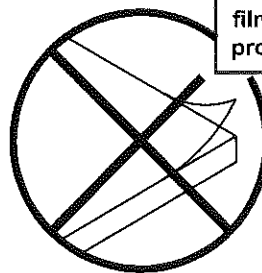

Components - Panels

Please check that you have all the components listed below before constructing your items.
















Part No	Description	Qty
M	Side Panel - L	2
N	Side Panel - R	2
O	Top Panel	2
P	Bottom Panel	2
Q	Bottom Support	2
R	Drawer Side - L	2
S	Drawer Side - R	2
T	Drawer Back	2
U	Drawer Front	2
	Drawer Bottom Small	2
	Back Panel Small	4

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	Unitar 6.3x40mm	(B)	Dowel D6x30mm	(C)	Screw M4x38mm	(D)	Minifix Bolt
							
	8 units		28 units		8 units		12 units
(E)	Screw D4x20mm	(F)	Nail Pin	(G)	Screw D3.5x15mm	(H)	Minifix Cam
							
	4 units		28 units		8 units		12 units
(I)	Screw M6x8mm	(J)	Handle	(K)	Nail Leg	(L)	Sticker (D-18)
							
	8 units		2 unit		8 units		8 units
(M)	M4	(N)	Drawer Slide (12")	(O)	Drawer Slide (12")		
							
	2 units		2 units		2 units		

Tools Required




Ruler - Use this to measure your screws (mm)




Assembly Instructions


Step 1

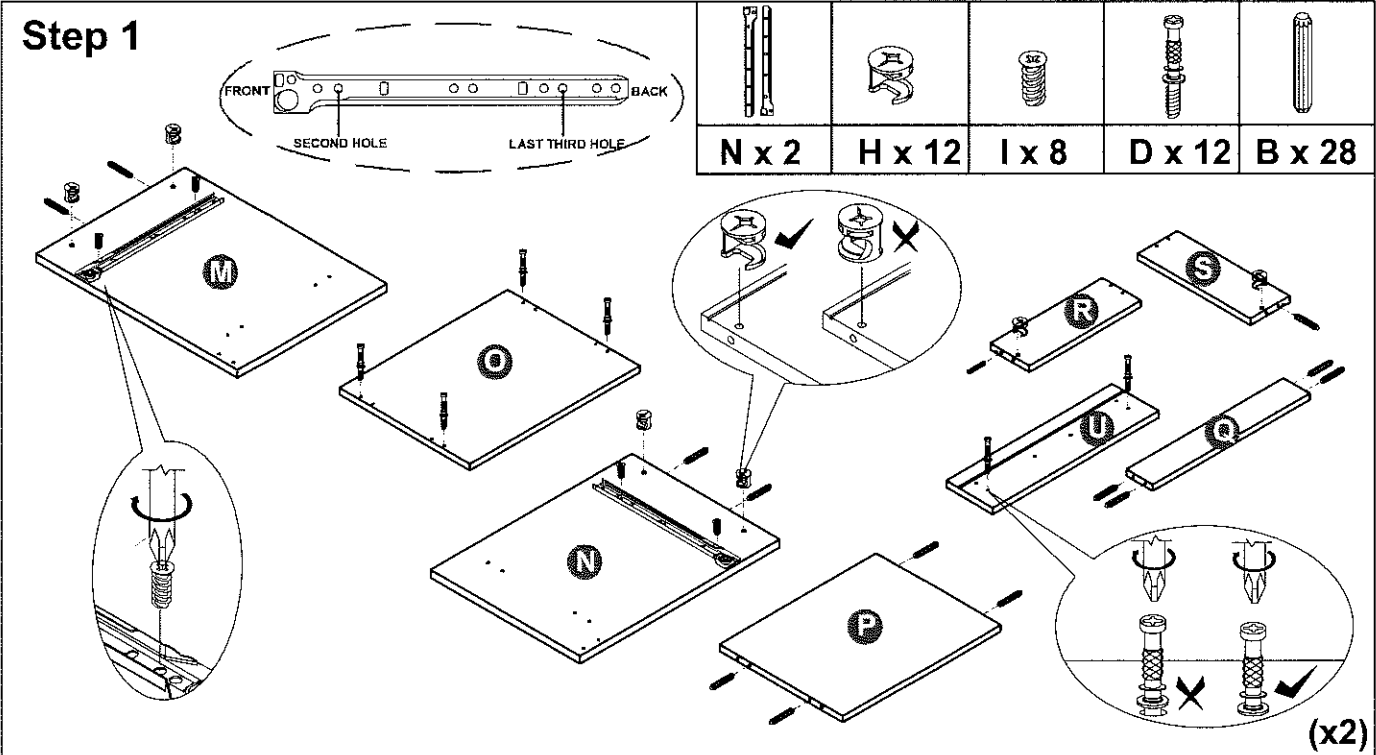


Step 2

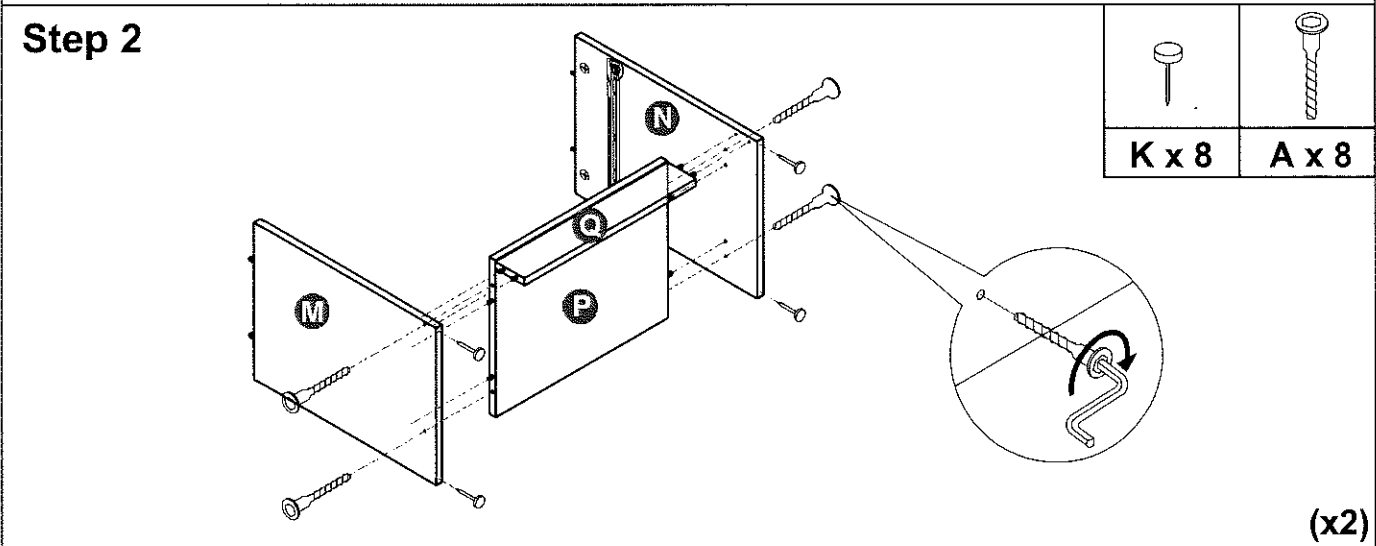


Step 3

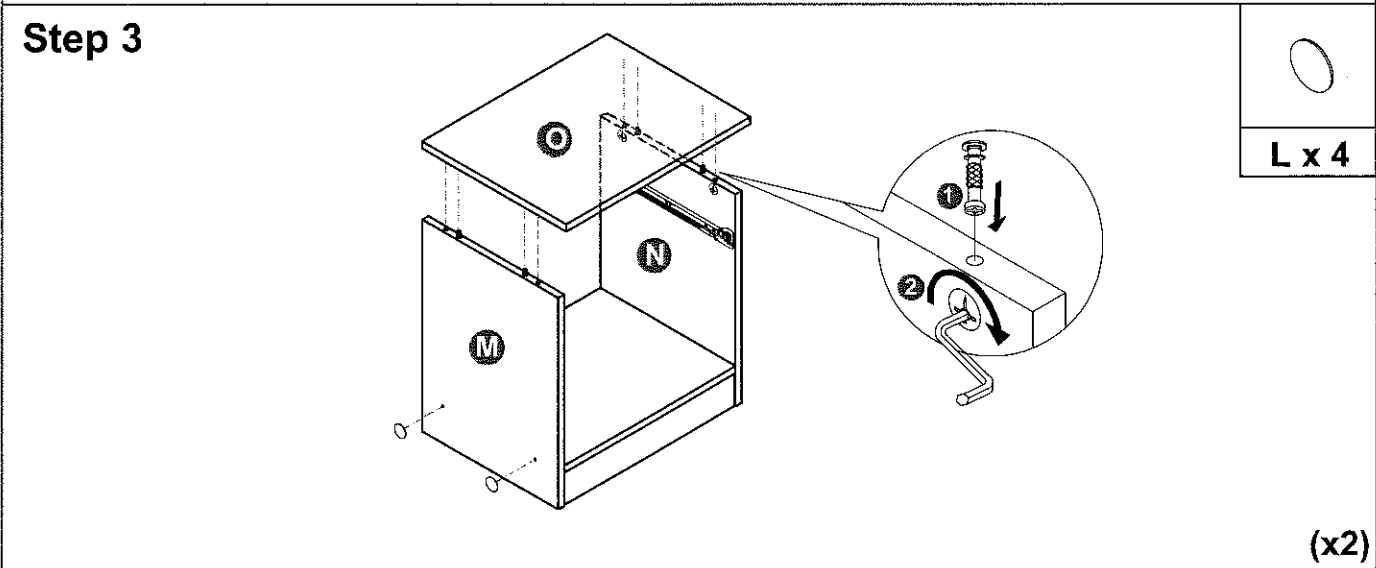

Step 4

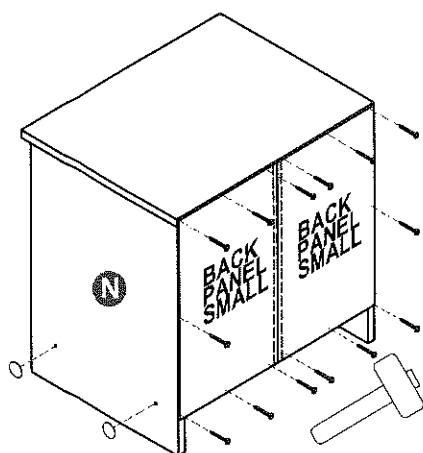

PLEASE ENSURE THAT EACH OF THE FOUR CORNERS OF THE CABINET IS SQUARE.

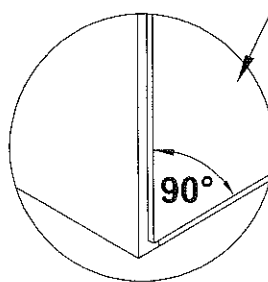


L x 4



F x 28


(x2)

Step 5

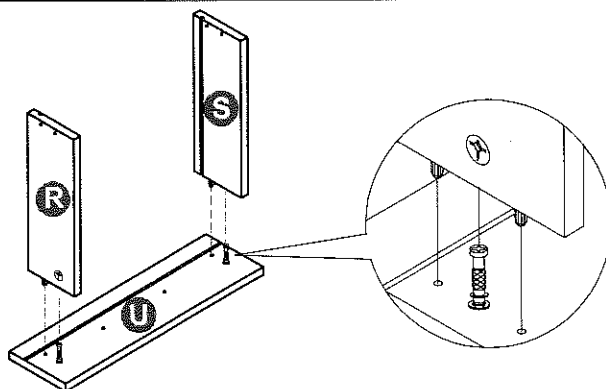

(x2)


Step 6

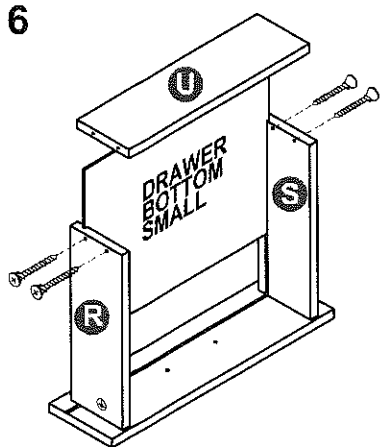


C x 8

(x2)

Step 7

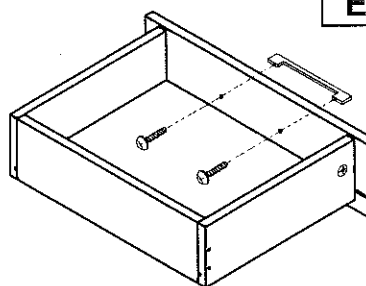


E x 4



J x 2

(x2)


Step 8

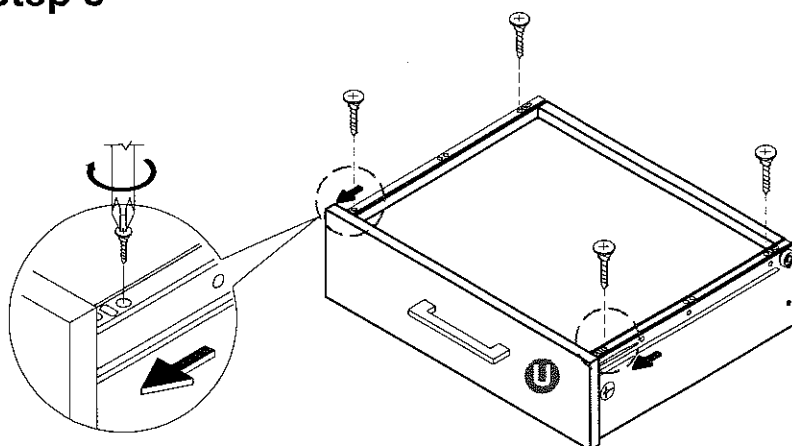


G x 8



O x 2

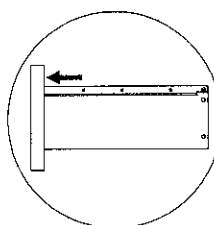

LAST THIRD HOLE

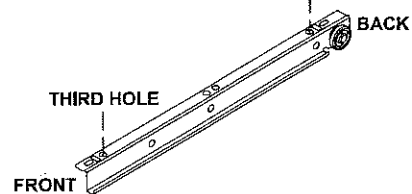

(x2)


JD Williams

MIAMI GLOSS BEDROOM PACKAGE - 3 DRAWER CHEST

Assembly Instructions - Please keep for future reference

Cat No

MR981


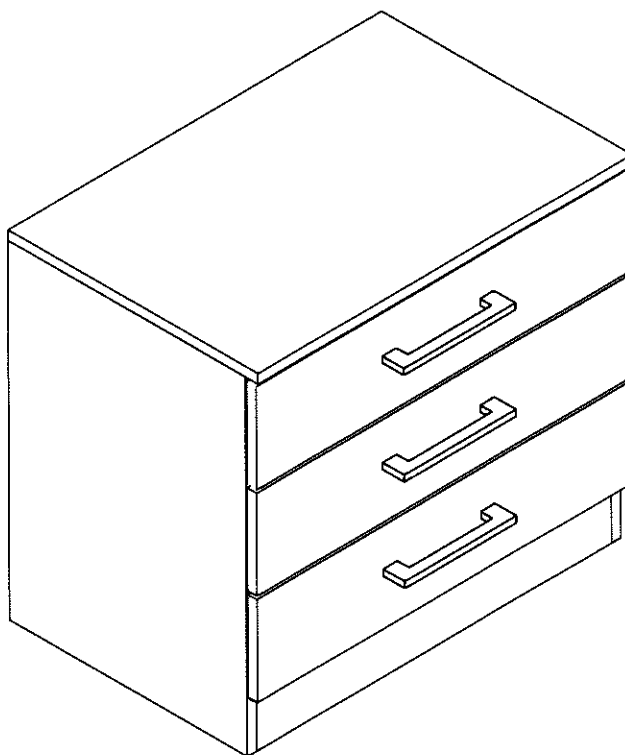


Dimensions	No. people	Assembly Time
Width: 60.2cm Depth: 40.4cm Height: 60.2cm		30Minutes (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Exploded View

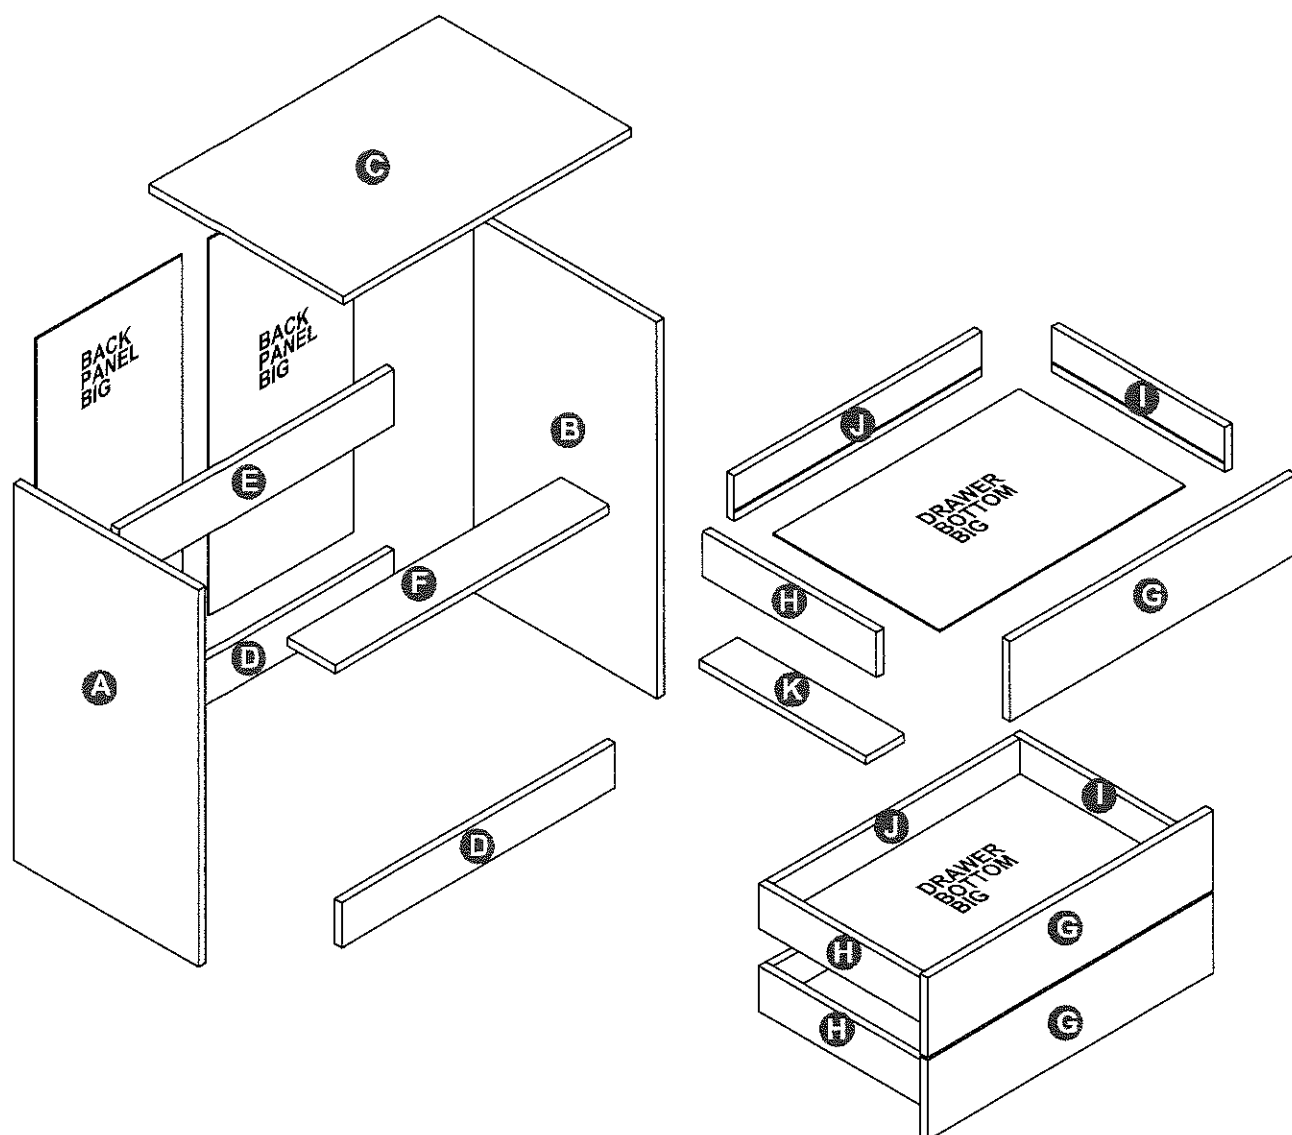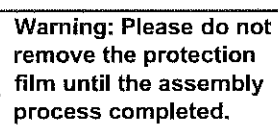

Components - Panels

Please check that you have all the components listed below before constructing your items.


















Part No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Top Panel	1
D	Bottom Bar	2
E	Back Support	1
F	Center Bar	1
G	Drawer Front	3
H	Drawer Side - L	3
I	Drawer Side - R	3
J	Drawer Back	3
K	Drawer Support	3
	Drawer Bottom Big	3
	Back Panel	2

Components - Fixings

Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	Unitar 6.3x40mm	(B)	Dowel D6x30mm	(C)	Screw M4x38mm	(D)	Minifix Bolt
							
	8 units		36 units		12 units		10 units
(E)	Screw D4x20mm	(F)	Nail Pin	(G)	Screw D3.5x15mm	(H)	Minifix Cam
							
	6 units		22 units		12 units		10 units
(I)	Screw D6x8mm	(J)	Handle	(K)	Nail Leg	(L)	Sticker (D-18)
							
	12 units		3 unit		4 units		8 units
(M)	M4	(N)	Drawer Slide (14")	(O)	Drawer Slide (14")	(P)	CSK M3.5 x 25mm
							
	1 unit		3 units		3 units		1 unit
(Q)	Safety Strap + Washer						
							
	1 unit						

Tools Required




Ruler - Use this to measure your screws (mm)




Assembly Instructions


Step 1

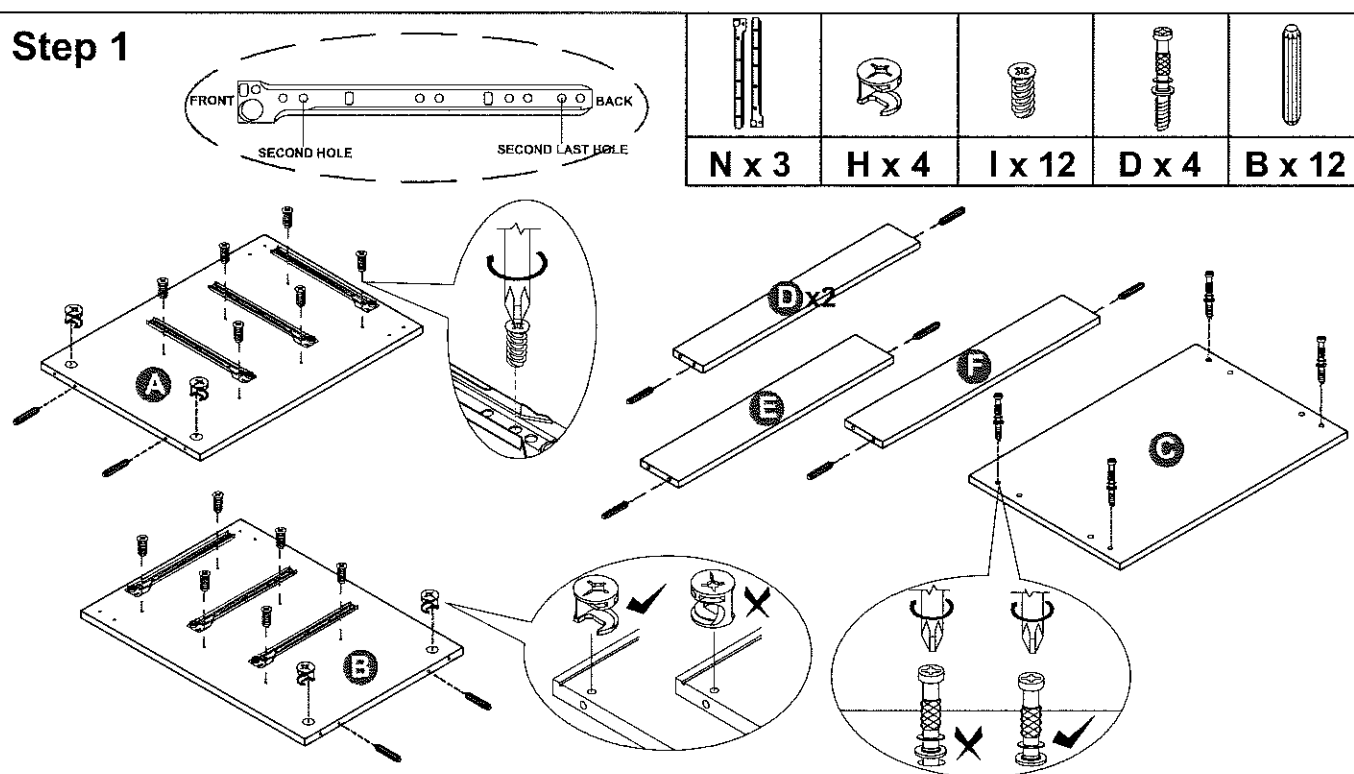


Step 2

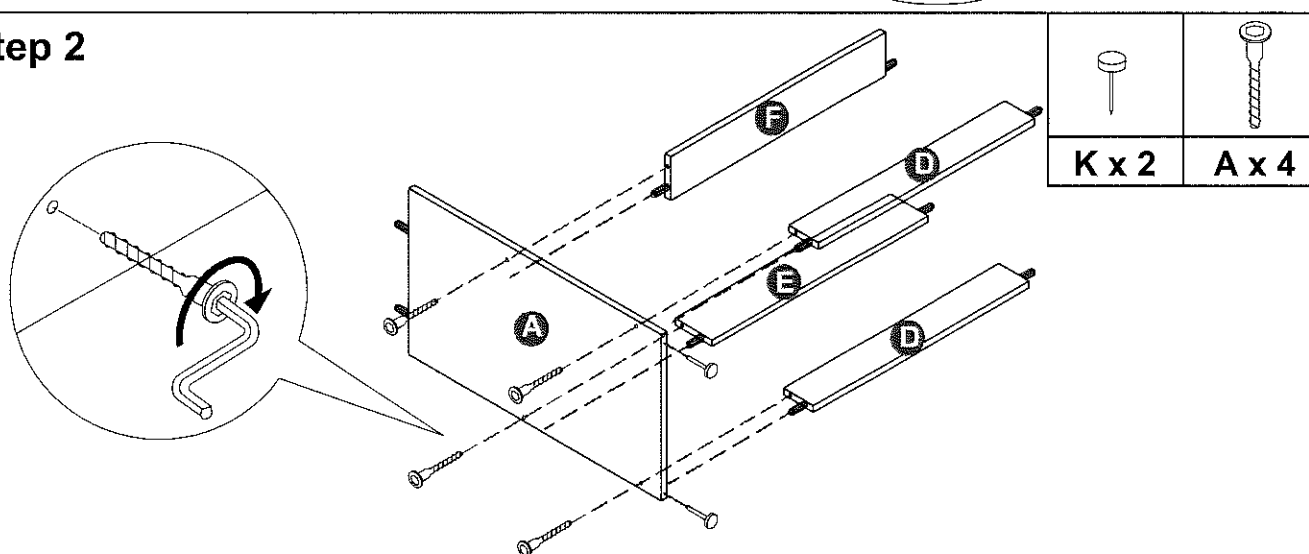

Step 3

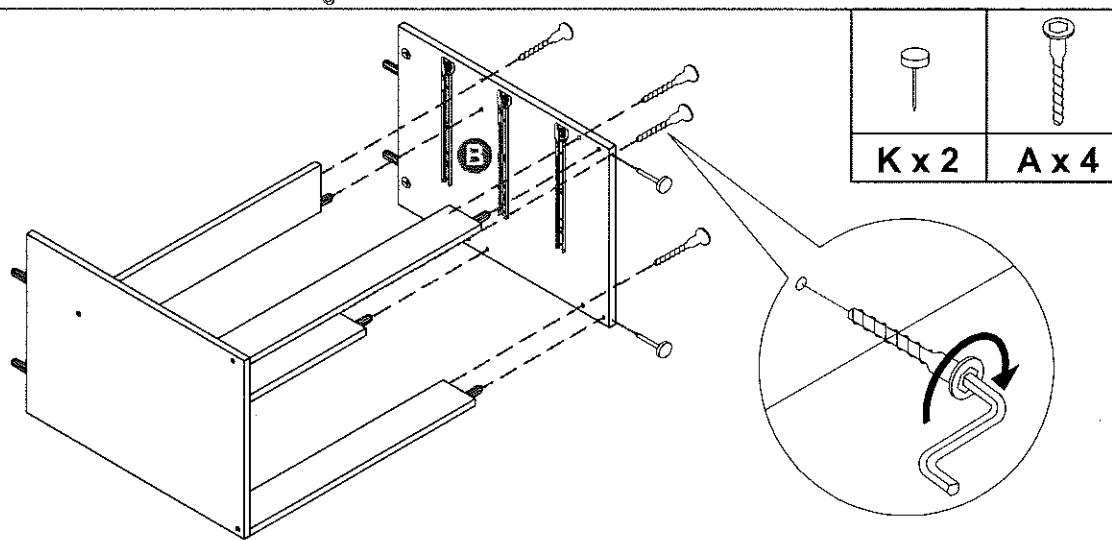


Step 4

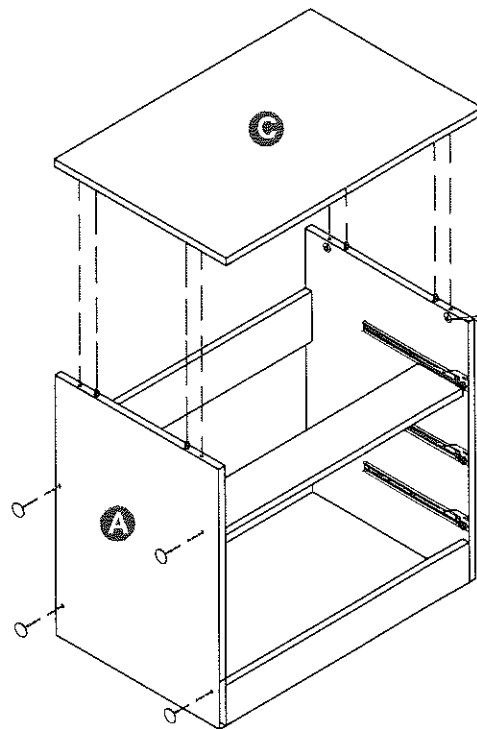

L x 4

Step 5

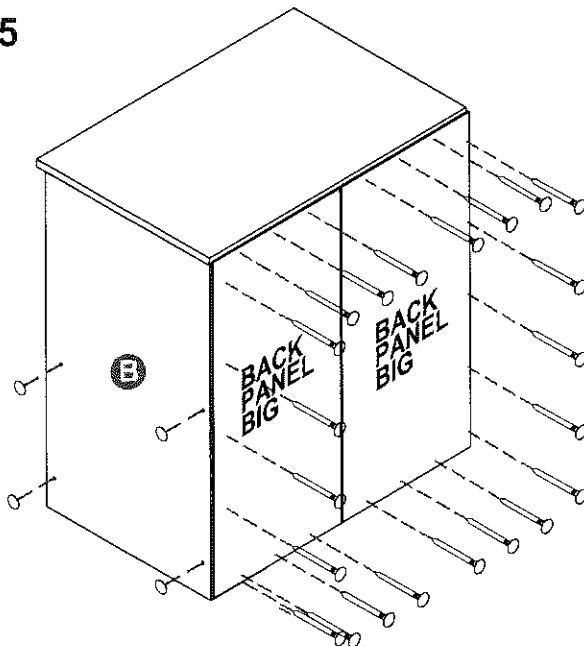


L x 4




F x 22

PLEASE ENSURE THAT EACH
OF THE FOUR CORNERS OF
THE CABINET IS SQUARE.

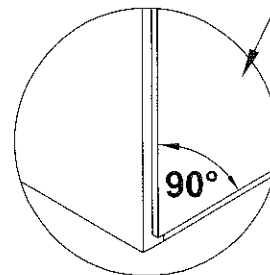

Step 6

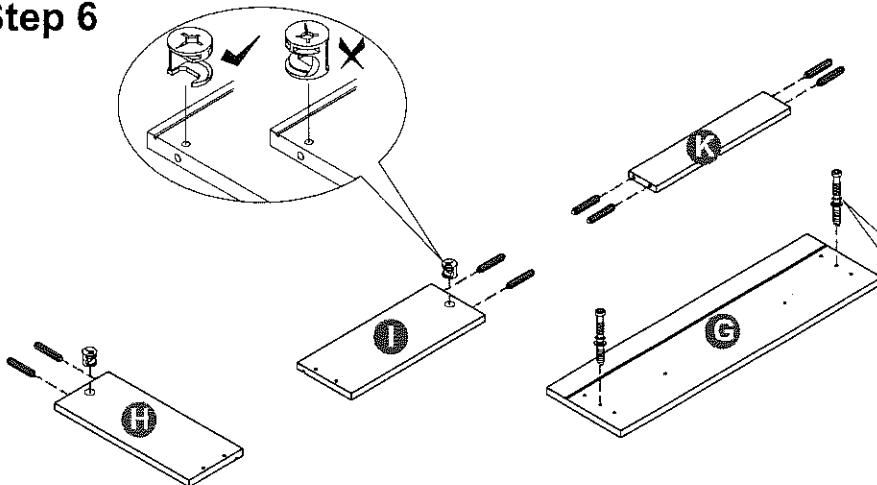


H x 6



D x 6




B x 24

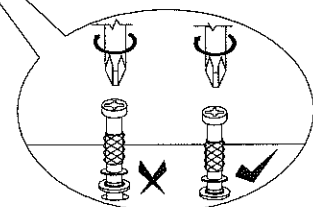


(x3)


Step 7

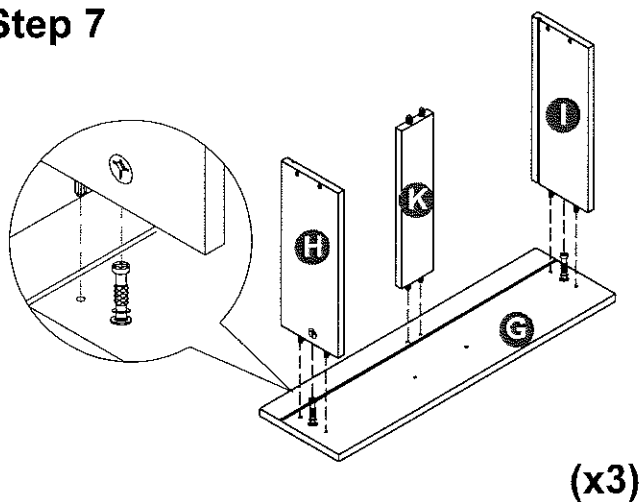


Step 8

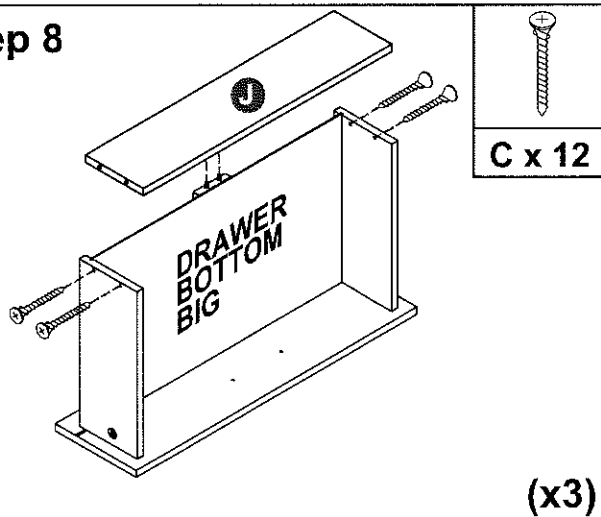

Step 9


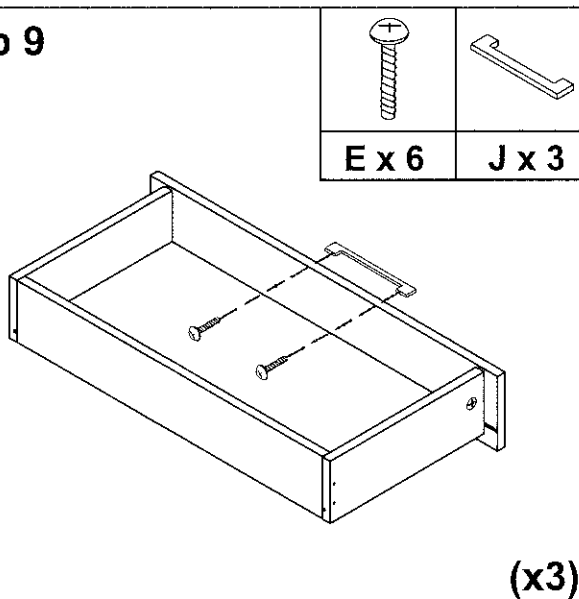


Step 10

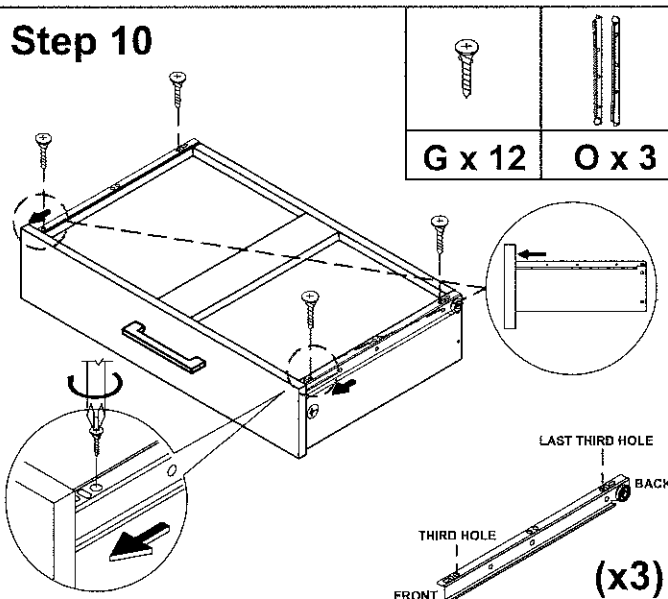

Step 11

PLEASE ENSURE DRAWER THAT HAVE WARNING LABEL ON DRAWER SIDE - L IS INSTALL AS TOP DRAWER.

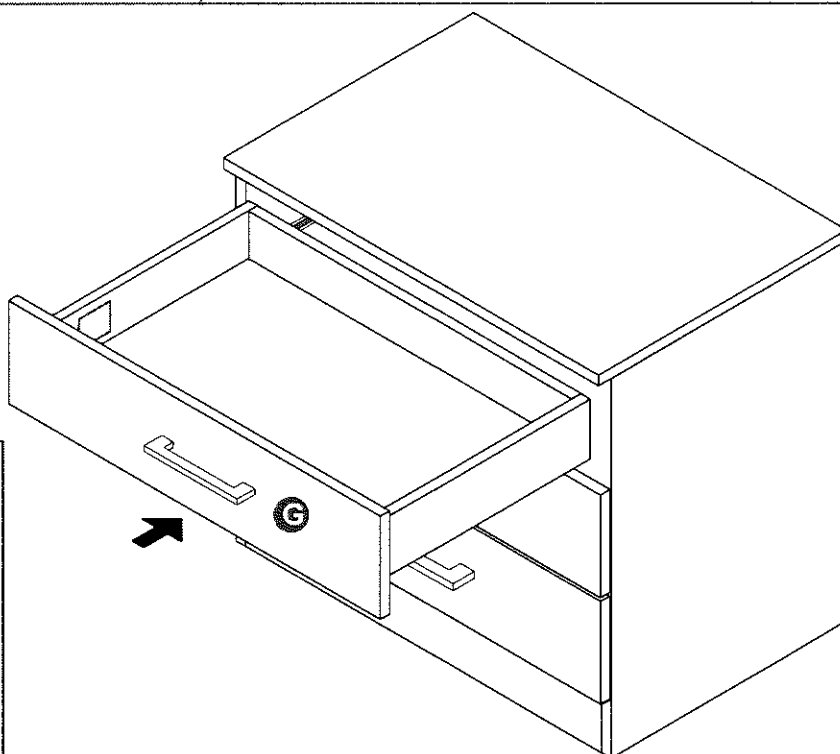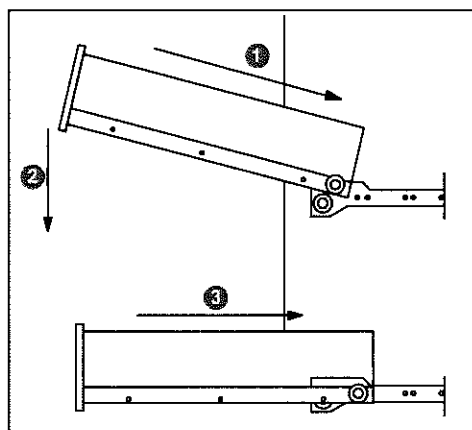


JD Williams

MIAMI GLOSS BEDROOM PACKAGE - 3 DOOR WARDROBE

Assembly Instructions - Please keep for future reference

Cat No

MR981

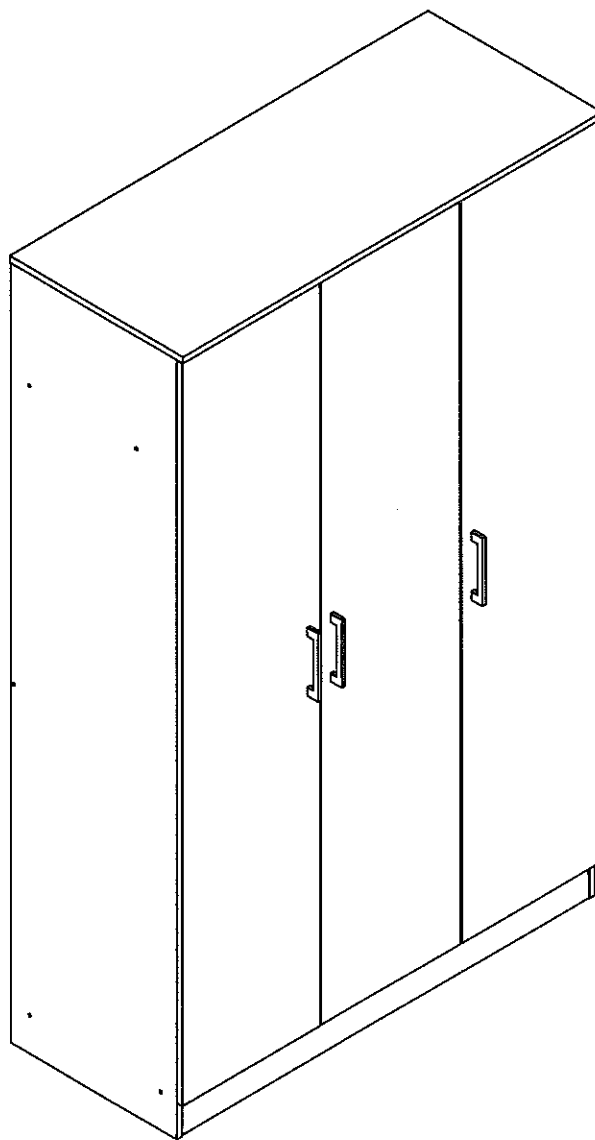

Dimensions

Width: 112.5cm
Depth: 46.8cm
Height: 181.5cm

No. people



Assembly Time

45Minutes
(approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the JDW Customer Helpline: 0871 231 2000

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you have damaged or missing components, call the JD Williams Customer Helpline on 0871 231 2000

If you are unhappy with the product and wish to return it, please follow the retailer's returns procedure.



Warning

Important - In order to help prevent overturning, this product must be used with the wall anti-tip strap/device provided.

To help prevent product toppling over please follow the below steps :



- Use the anti-tip strap/device provided.
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawer.
- Do not place heavy items on the top of furniture, unless the furniture has been designated for this purpose.

Please note that the only anti-tip strap/devices and screw are provided, you will need to provide wall plugs and screws applicable for your wall type.

PLEASE DO NOT REMOVE THE PERMANENT SAFETY LABEL FROM YOUR FURNITURE !


Permanent Label Assembly Location

1. Wardrobe/Cabinet without Drawer :
Inside back panel visible/below the shelf.
2. Chest of Drawer/sideboard/Unit with Drawer :
Top drawer on the inside side of drawer wrap.

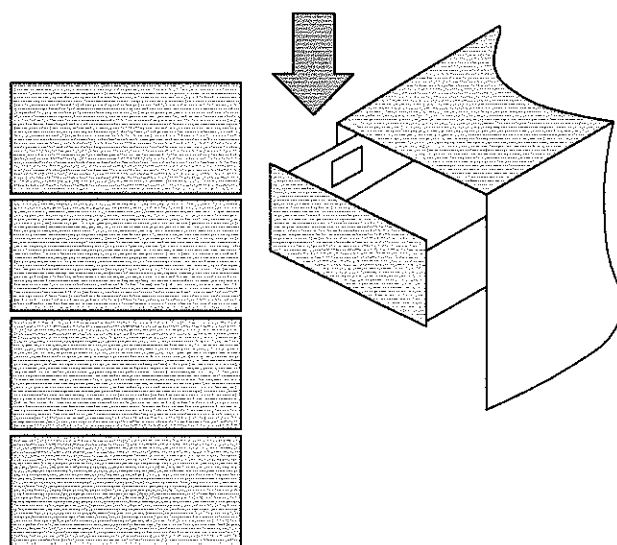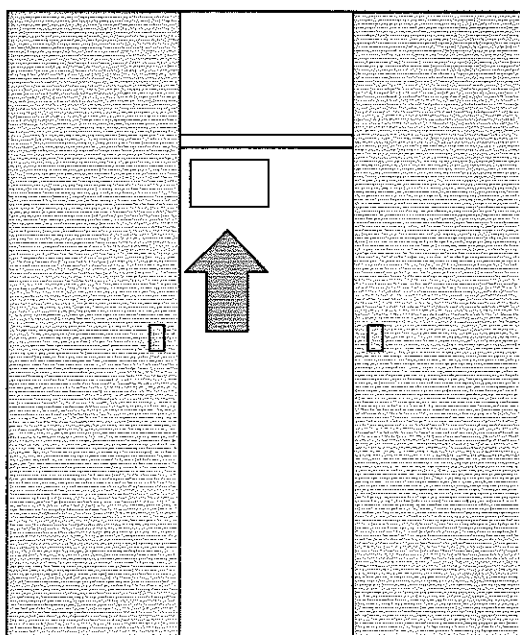

Note: For uncommon furniture design, the location of safety permanent label may differ.

Exploded View

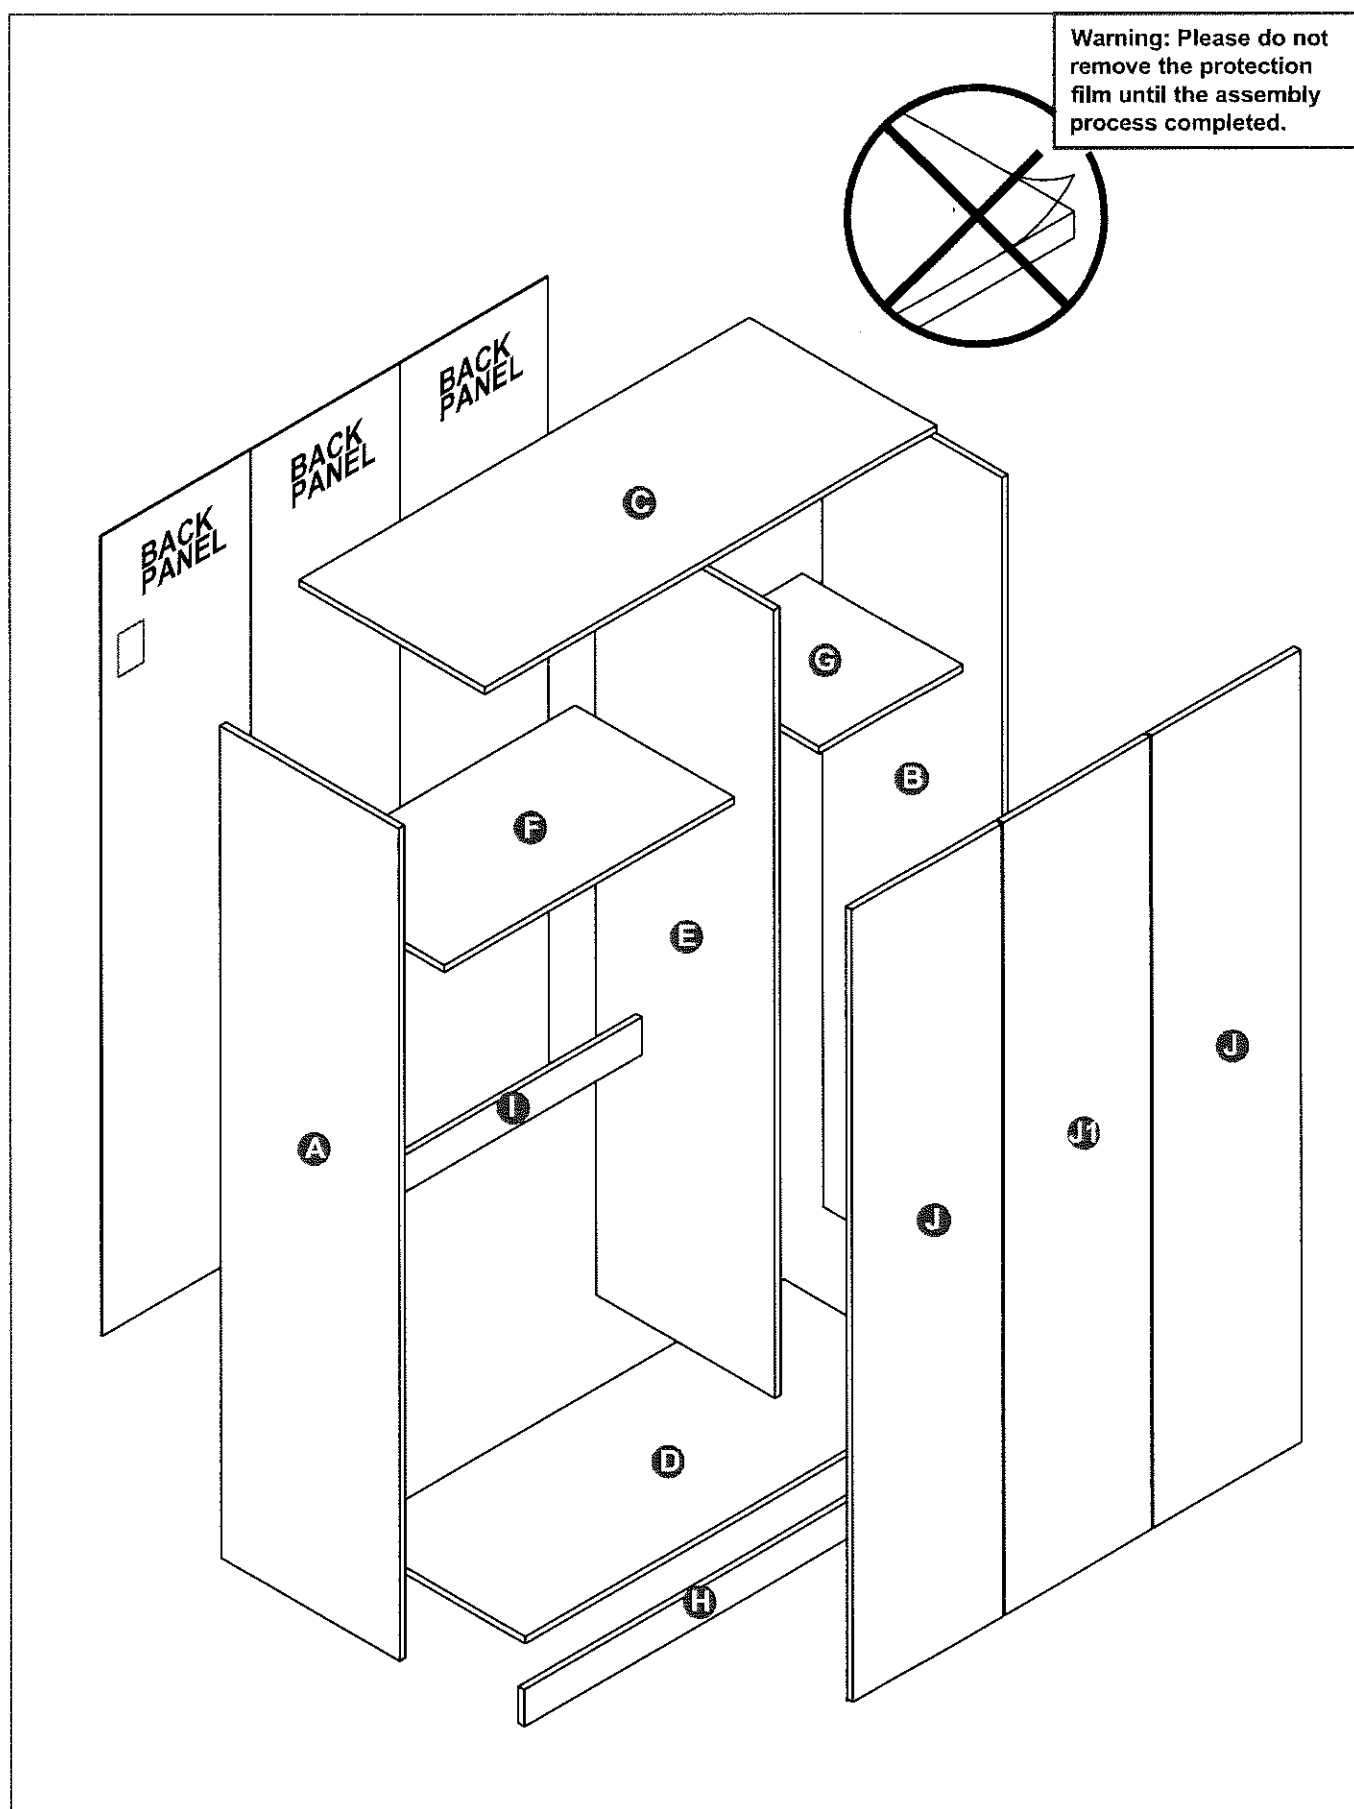

Components - Panels

Please check that you have all the components listed below before constructing your items.



















Part No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Top Panel	1
D	Bottom Panel	1
E	Center Panel	1
F	Fix Shelf	1
G	Small Fix Shelf	1
H	Bottom Support	1
I	Back Support	1
J	Door - L&R	2
J1	Door - C	1
	Back Panel	3

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A) Unitar 6.3x40mm  12 units	(B) Dowel D6x30mm  17 units	(C) Minifix Bolt  10 units	(D) Screw M4x22mm  6 units
(E) Nail Leg  5 units	(F) Screw #10x16mm  36 units	(G) Minifix Cam  10 units	(H) Nail Pin  56 units
(I) Hinges 5/8"  6 units	(J) Hinges 1/4"  3 units	(K) Hanger - L-368mm  1 unit	(L) Hanger - L-738mm  1 unit
(M) Handle  3 units	(N) Door Stopper  1 unit	(O) Sticker (D-18)  10 units	(P) Safety Strap + Washer  1 unit
(Q) Screw D3.5x25mm  1 unit	(R) M4  1 unit		

Tools Required







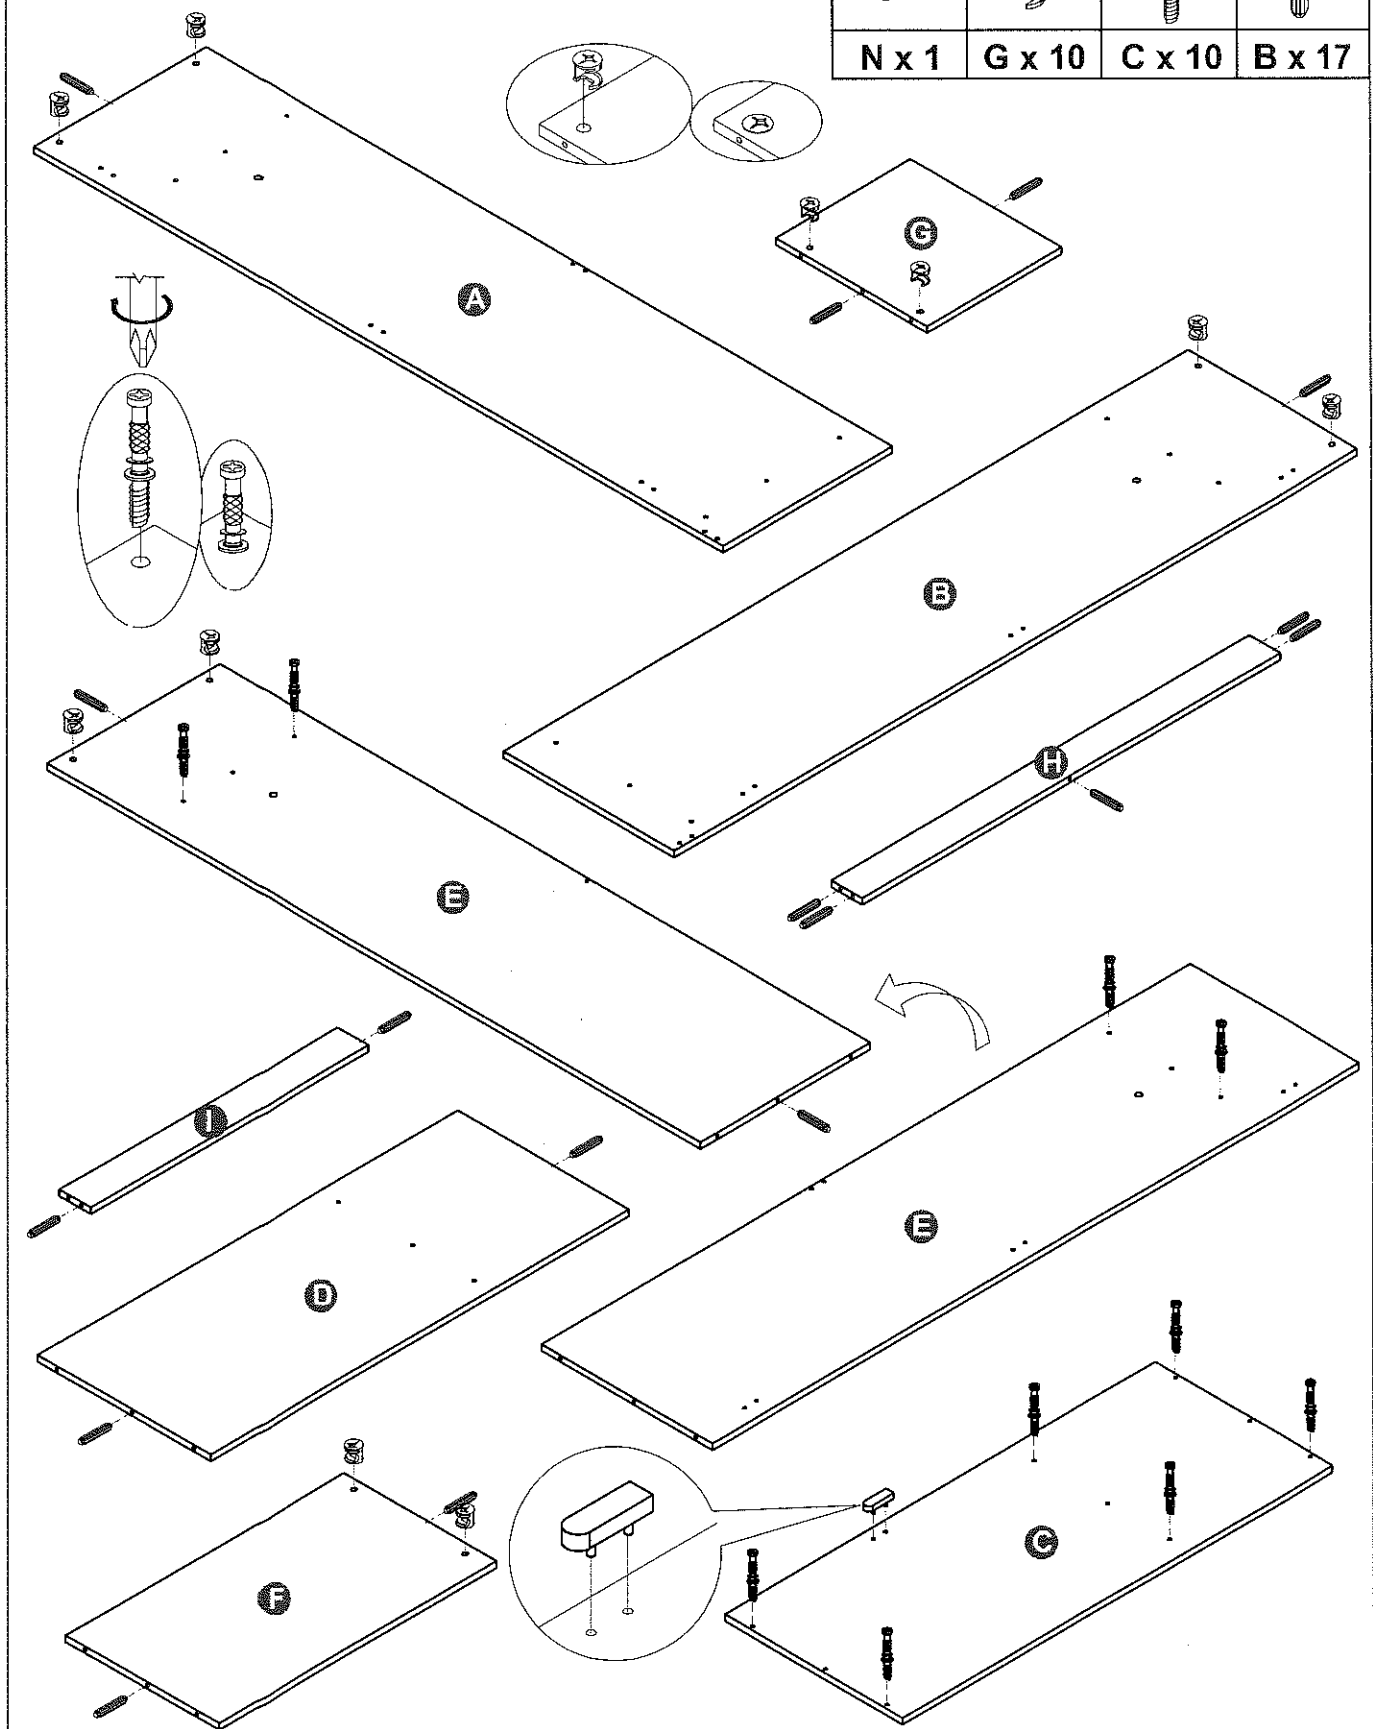
Ruler - Use this to measure your screws (mm)




Assembly Instructions

Step 1


			
N x 1	G x 10	C x 10	B x 17



Step 2

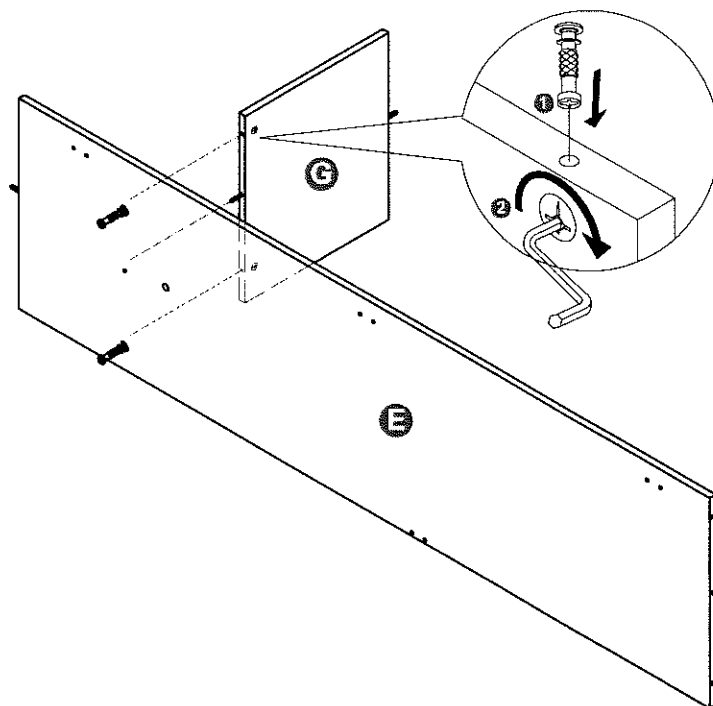


Step 3

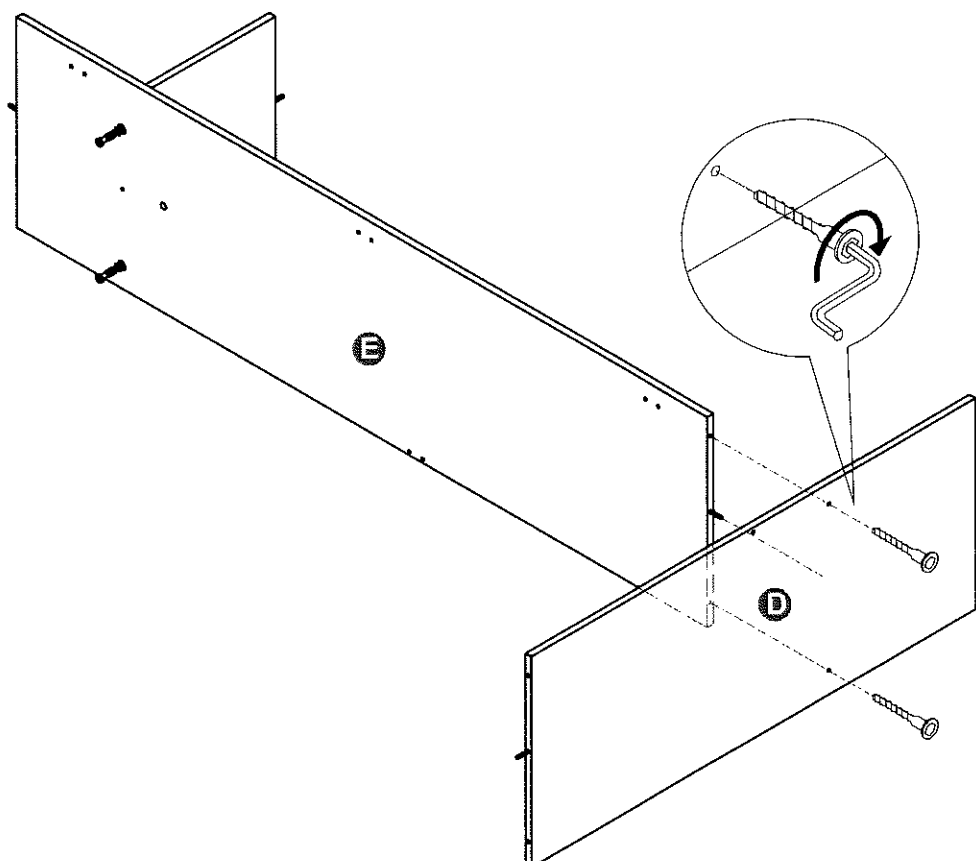




A x 2

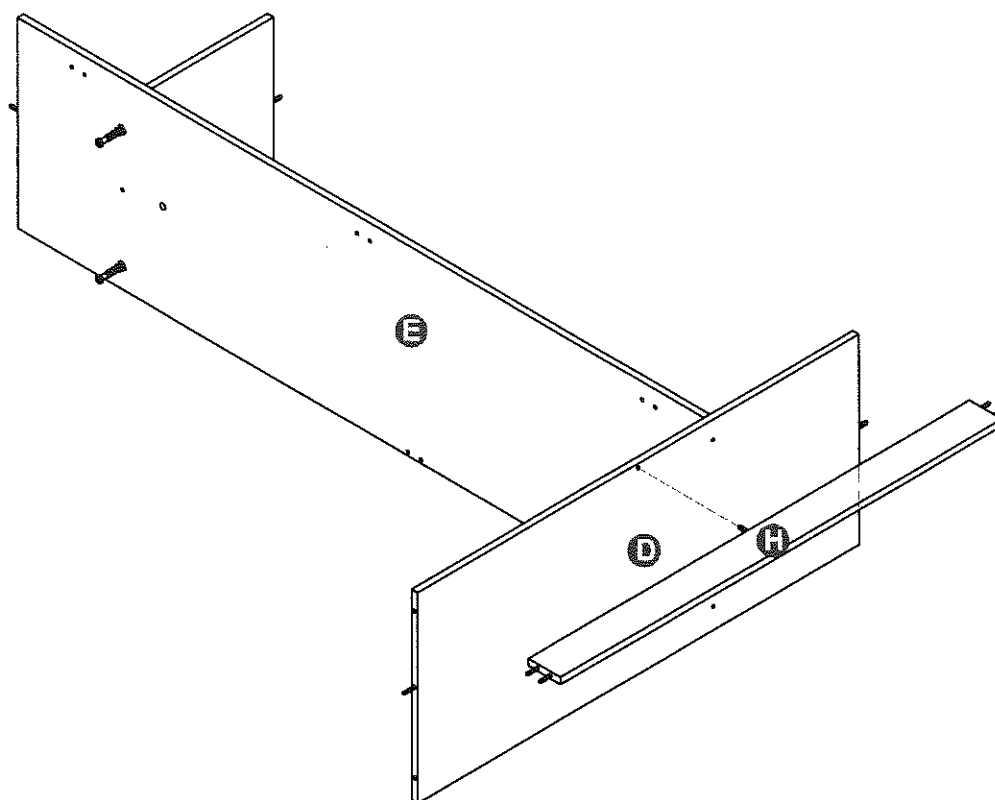Step 4

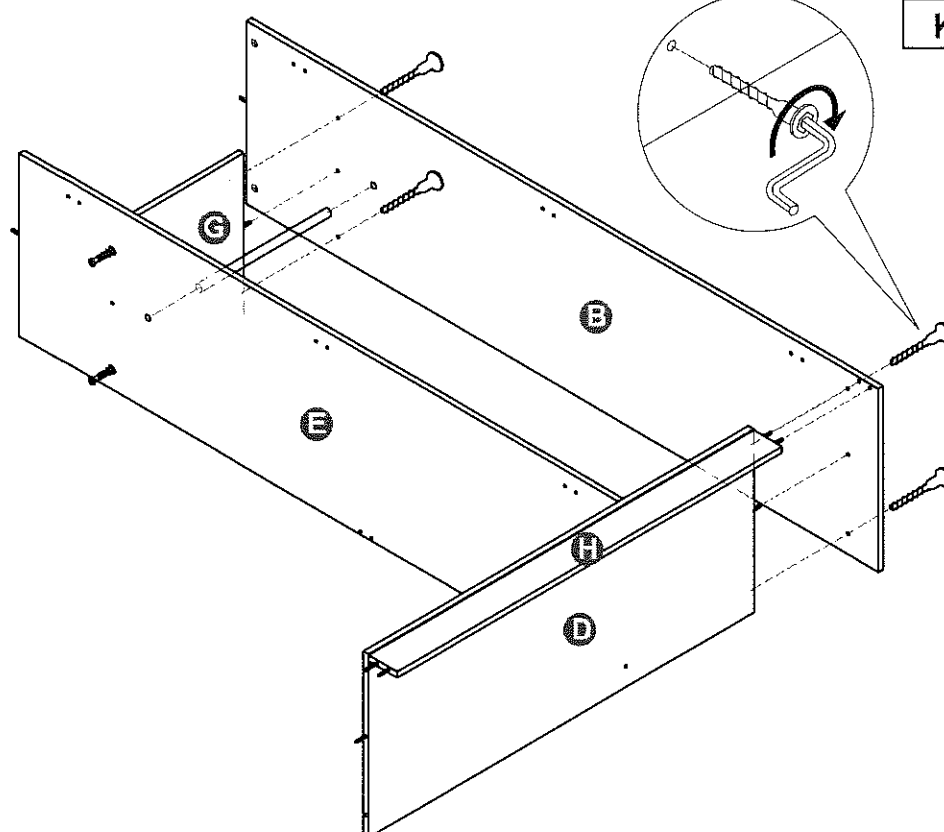


Step 5




	
K x 1	A x 4


Step 6

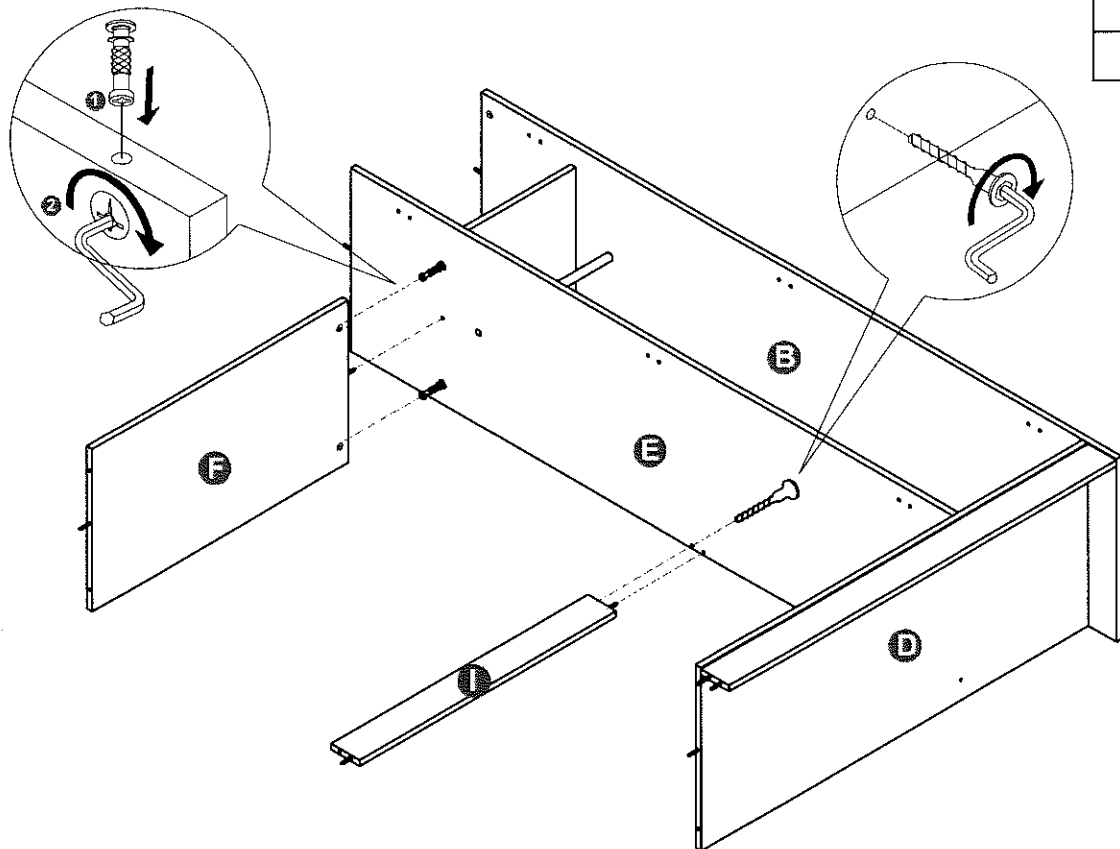


Step 7

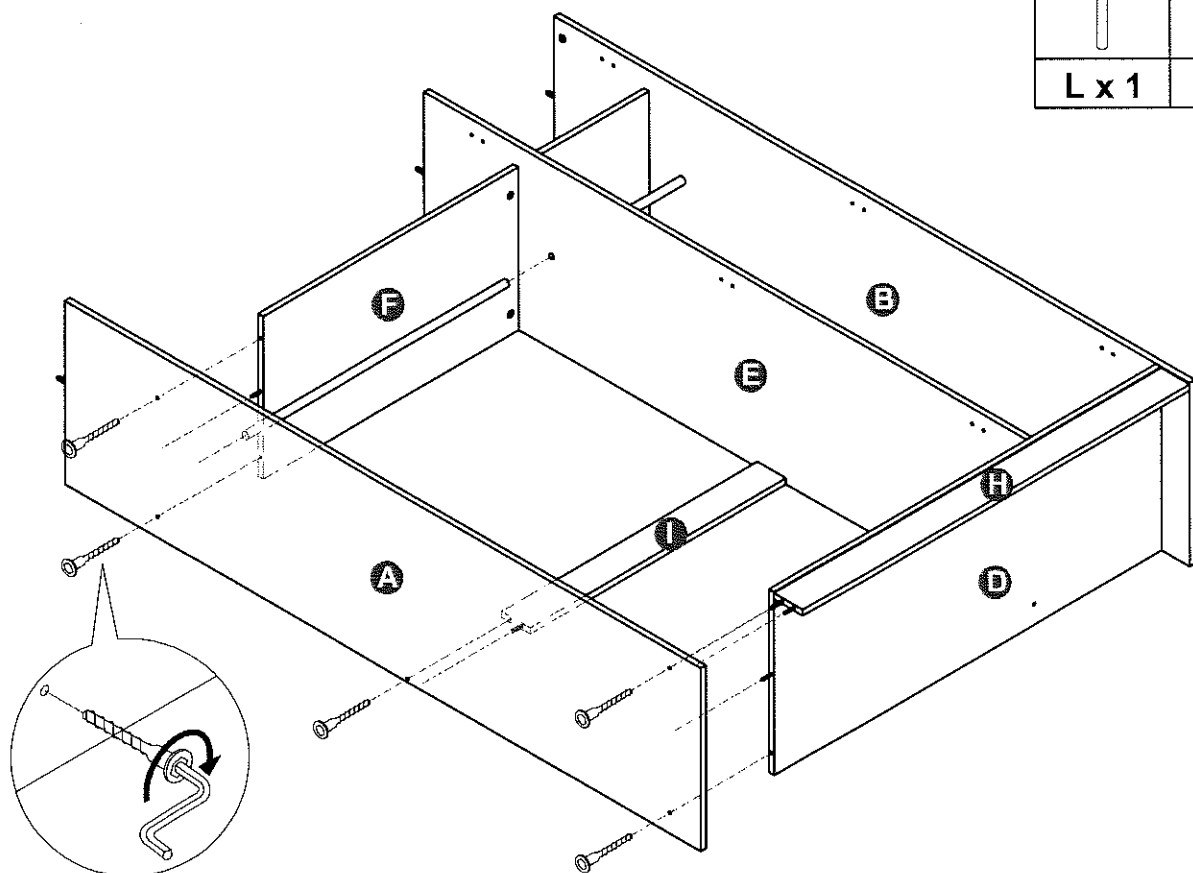

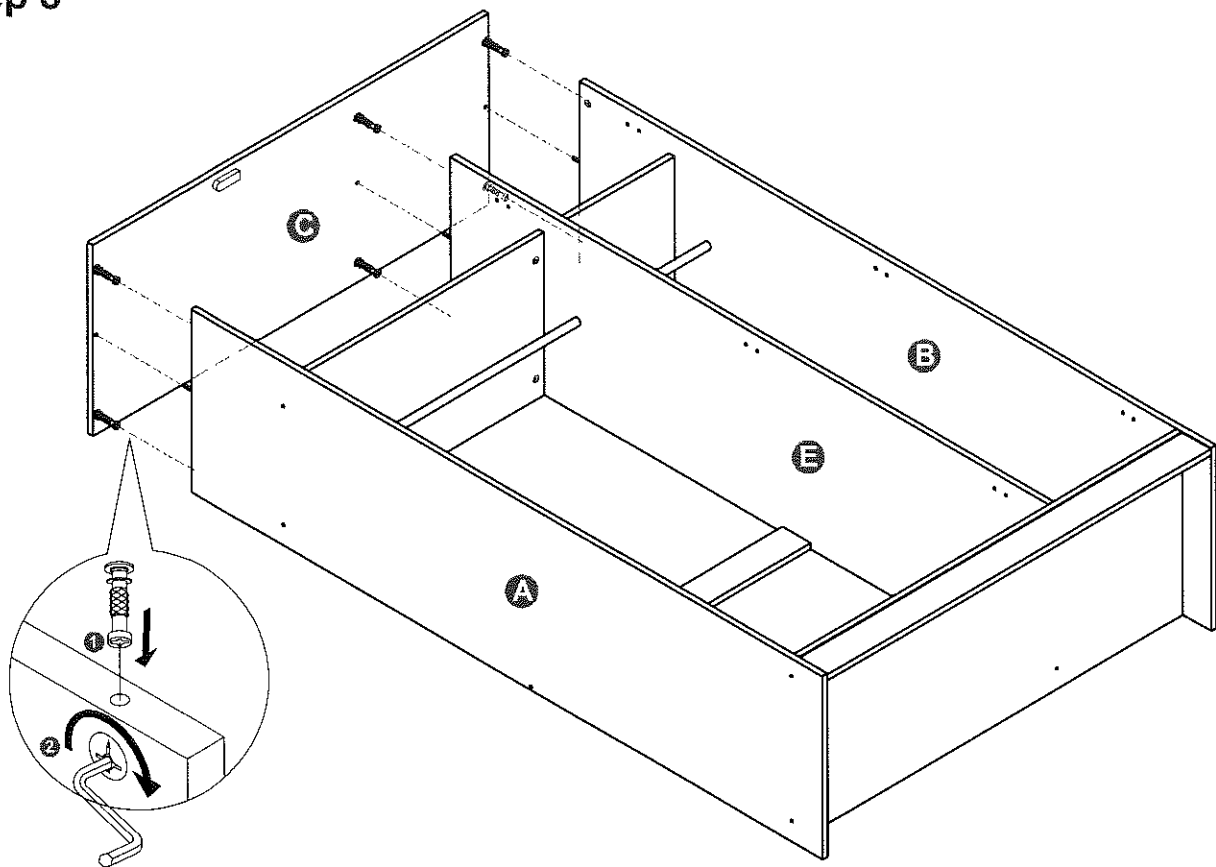


Step 8

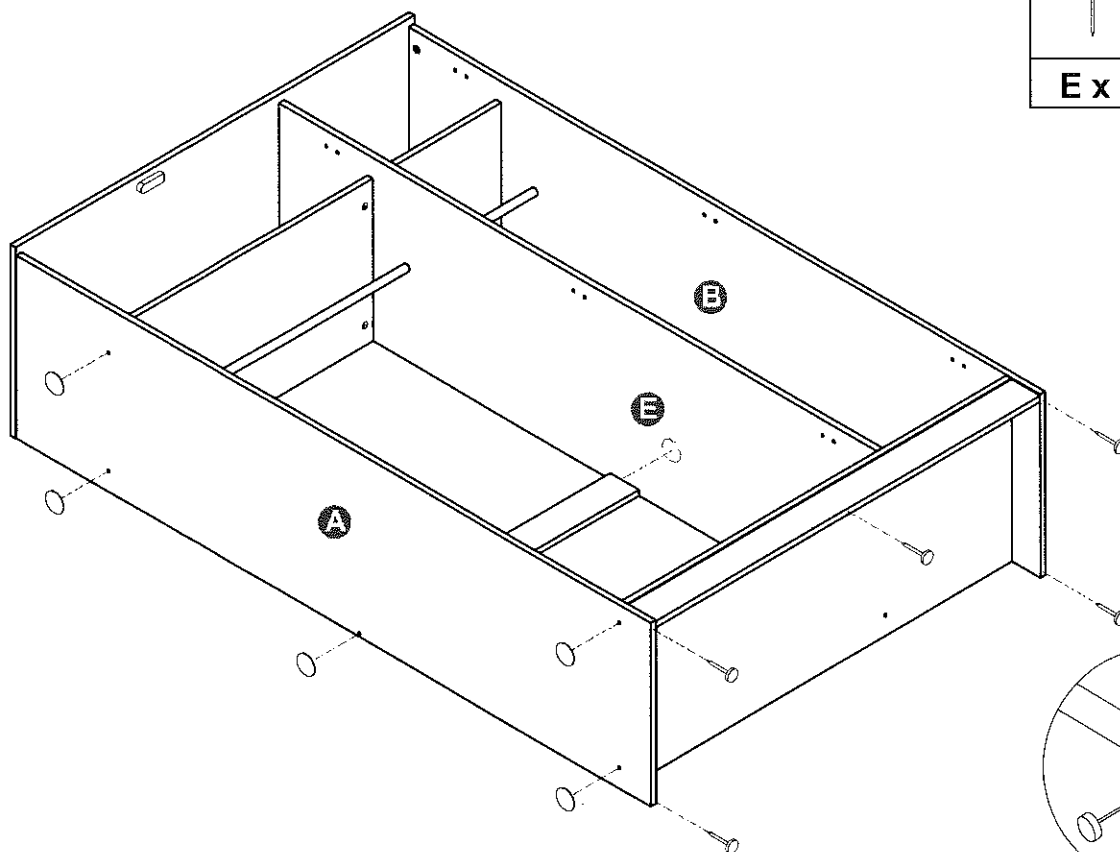

Step 9




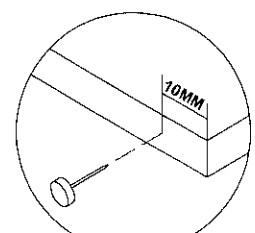

	
E x 5	O x 6




WARNING : THE FRONT
NAIL LEG MUST FIX AT
10MM FROM FRONT

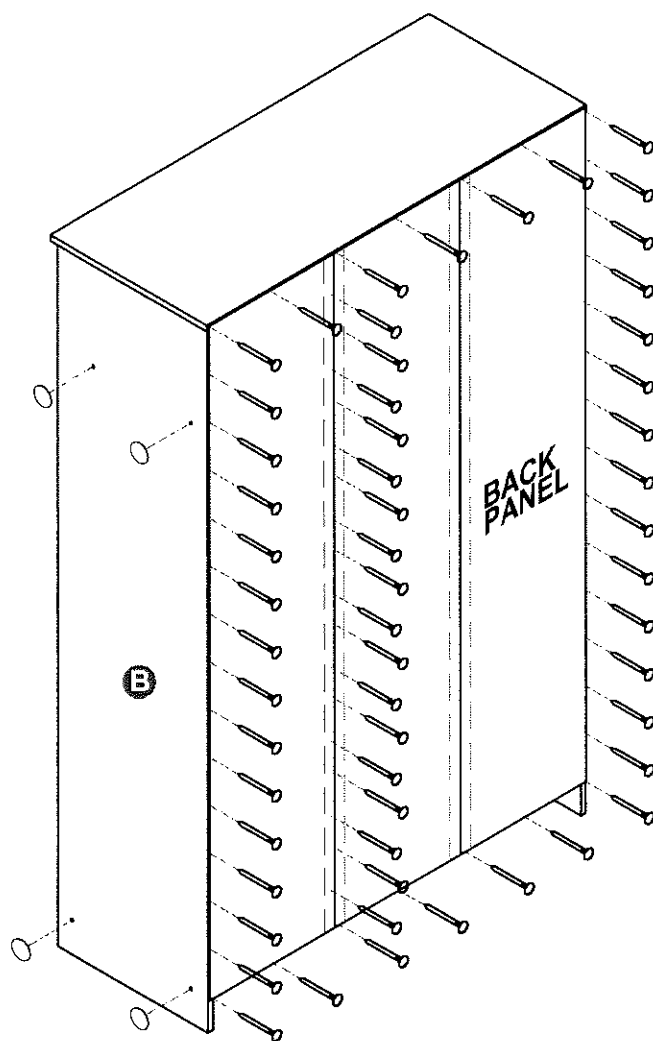Step 10







	
O x 4	H x 56

PLEASE ENSURE THAT EACH OF THE FOUR CORNERS OF THE CABINET IS SQUARE.

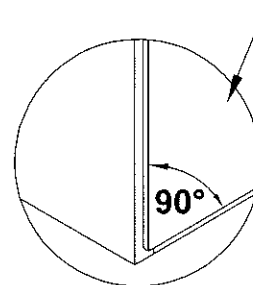

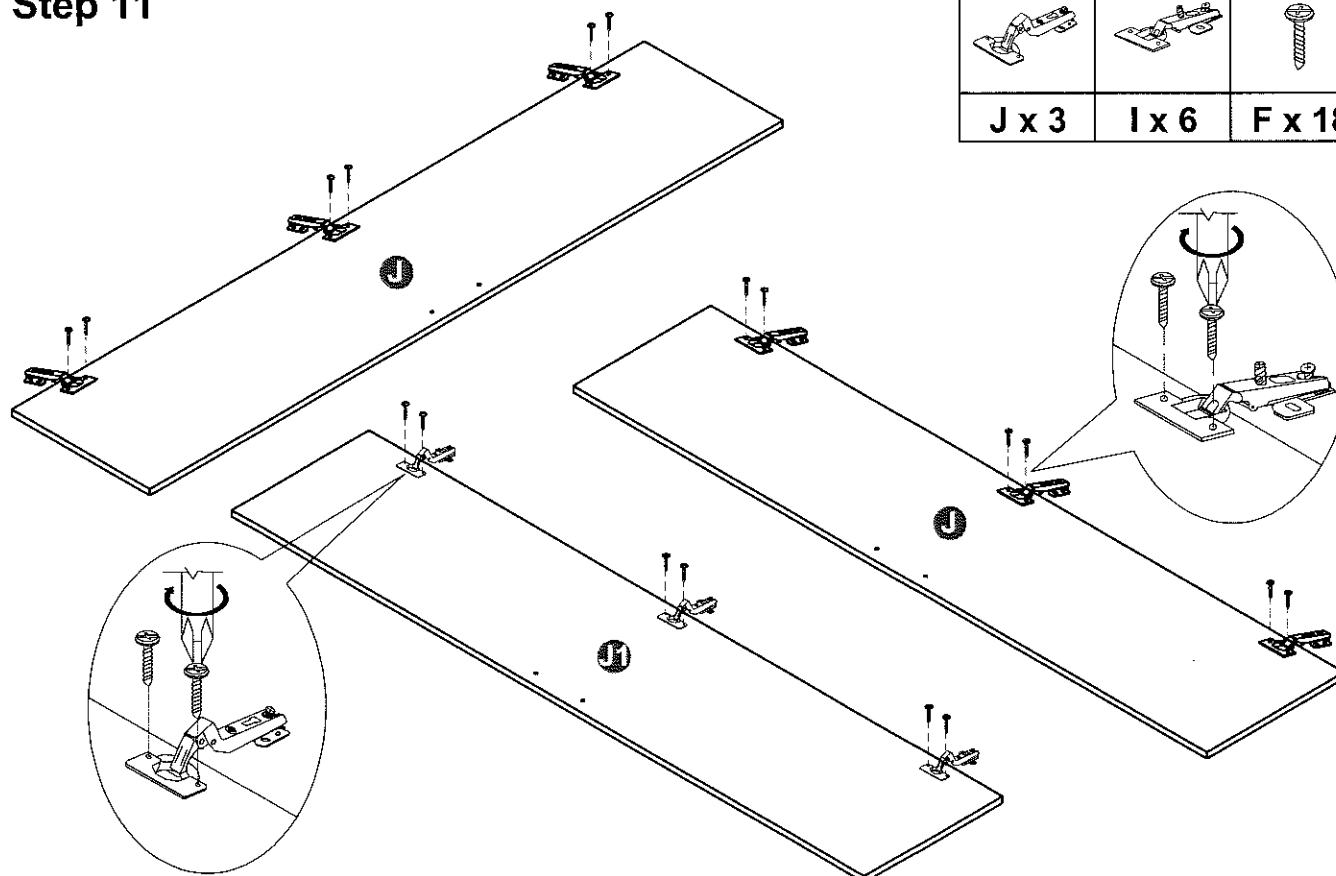




Step 11




		
J x 3	I x 6	F x 18

Step 12


		
F x 12	D x 4	M x 2

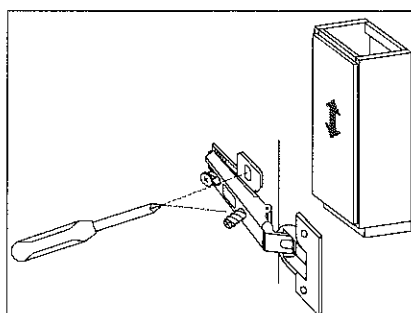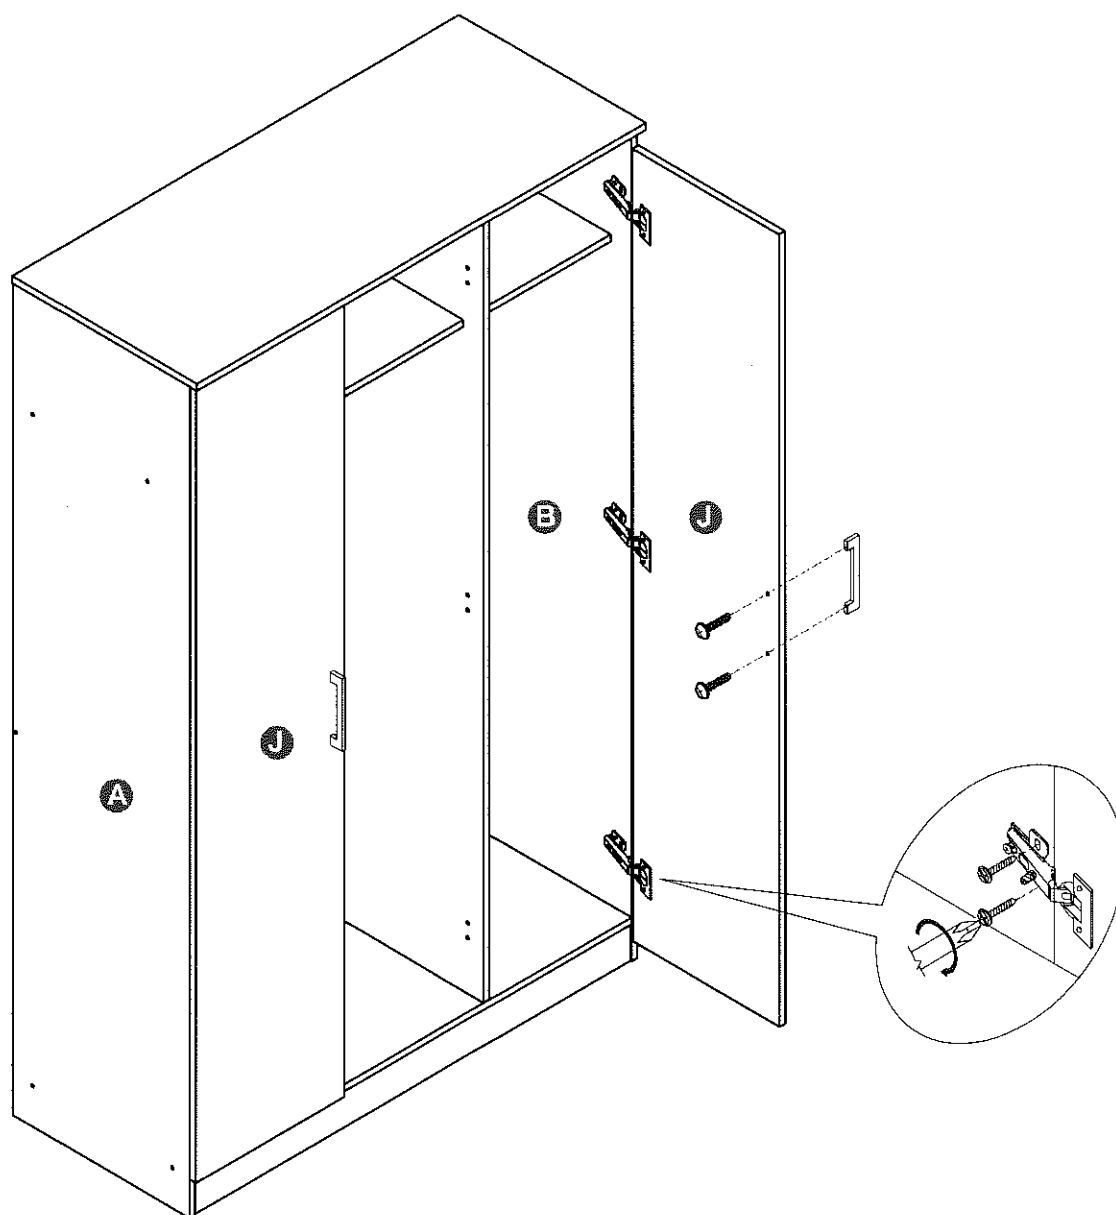

Vertical Adjustment

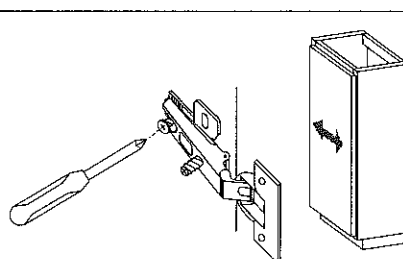

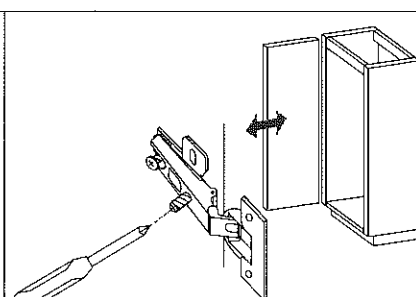




Lateral Adjustment




Horizontal Adjustment

Step 13


		
F x 6	D x 2	M x 1

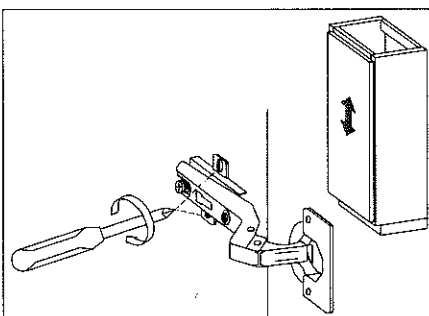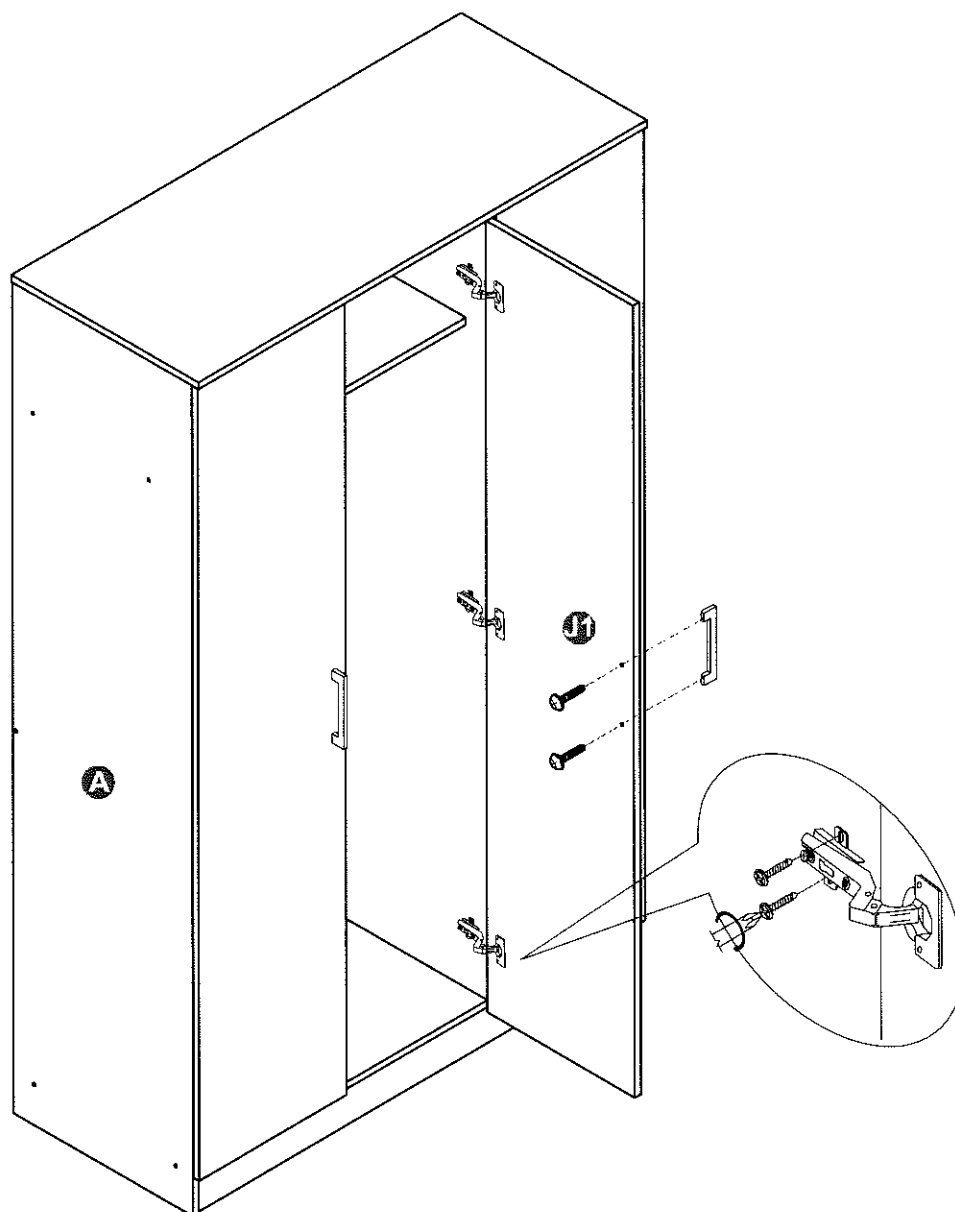

Vertical Adjustment

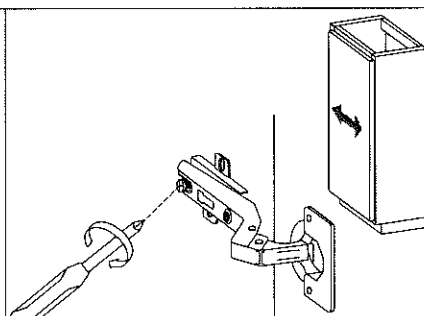


Lateral Adjustment

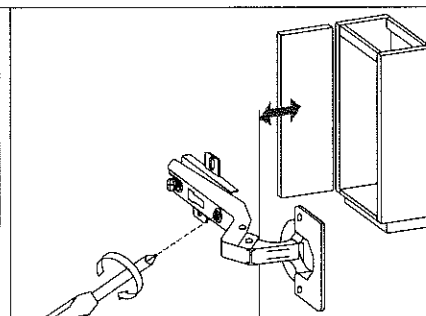


Horizontal Adjustment

FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:
Pull the screw in
the top panel hole
of your furniture

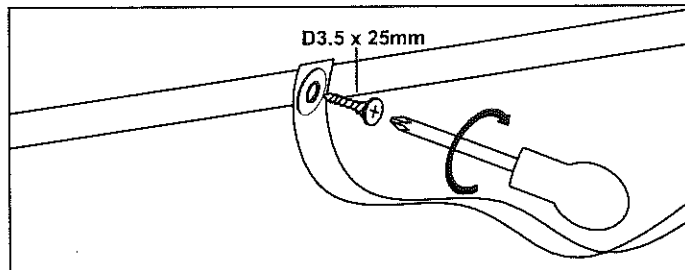

STEP 2:
Make a hole on
the wall and pull
the wall plug in

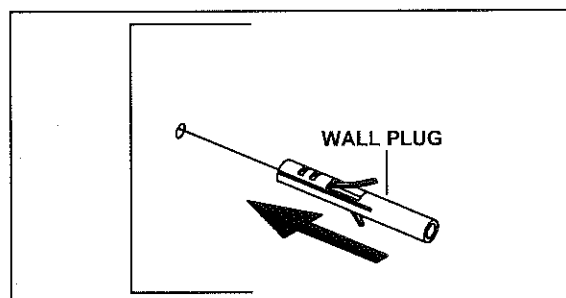


STEP 3:
Pull the screw in
the wall plug hole

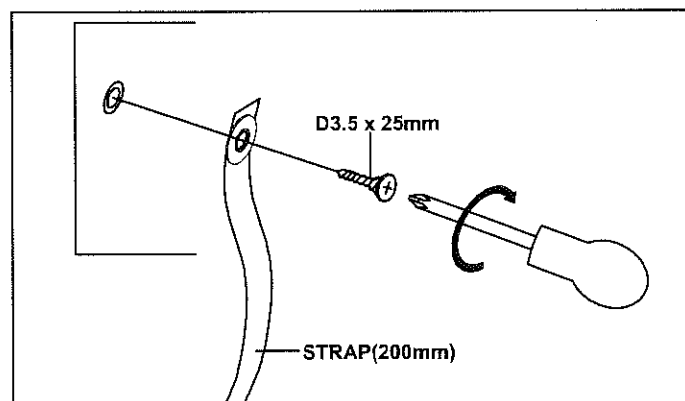

NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

HARDWARE LIST



STRAP(200mm)-1Pc



D3.5 x 25mm-1Pc

