


MIAMI GLOSS BEDROOM PACKAGE - 1 DRAWER BEDSIDE TABLE (2PCS)

Assembly Instructions - Please keep for future reference

Cat No

MR981

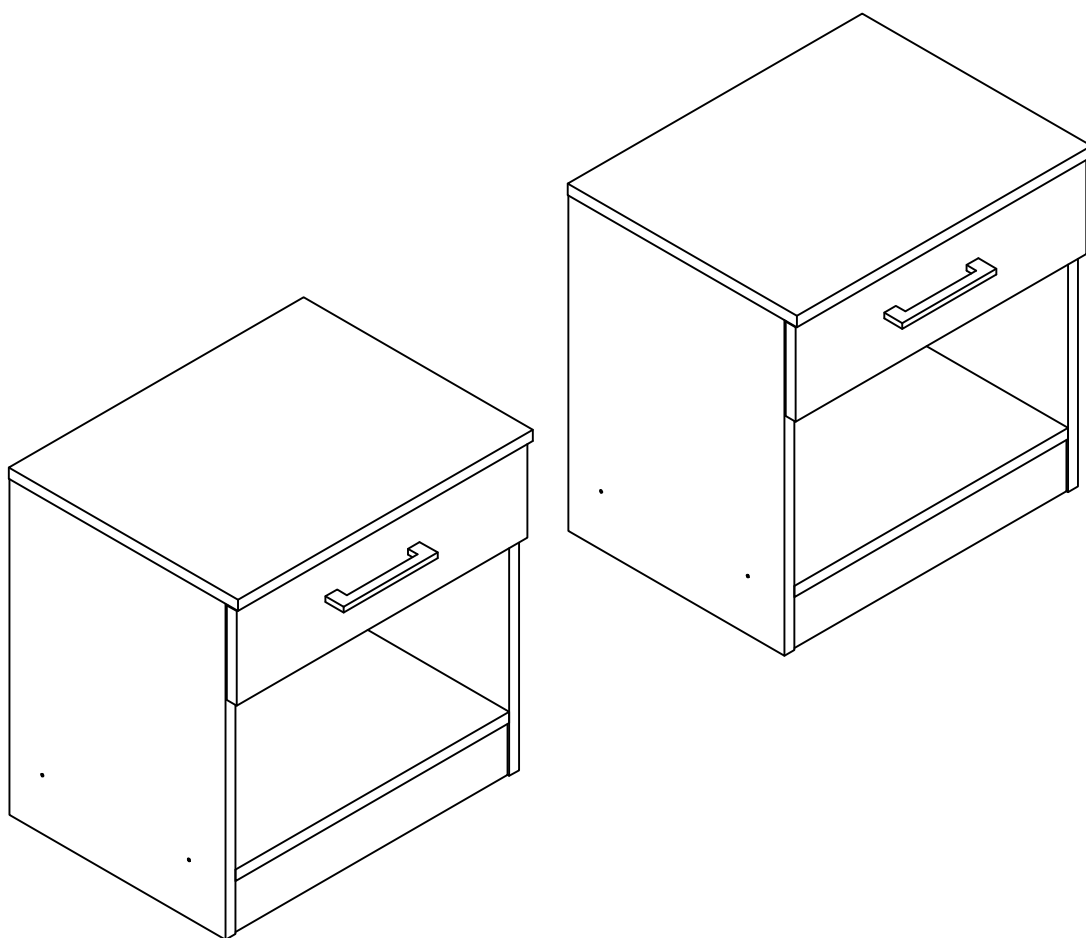

Dimensions	No. people	Assembly Time
Width: 45.2cm Depth: 35.5cm Height: 46.5cm		30Minutes (approx.)


Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance



- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**

Exploded View

Warning: Please do not remove the protection film until the assembly process completed.

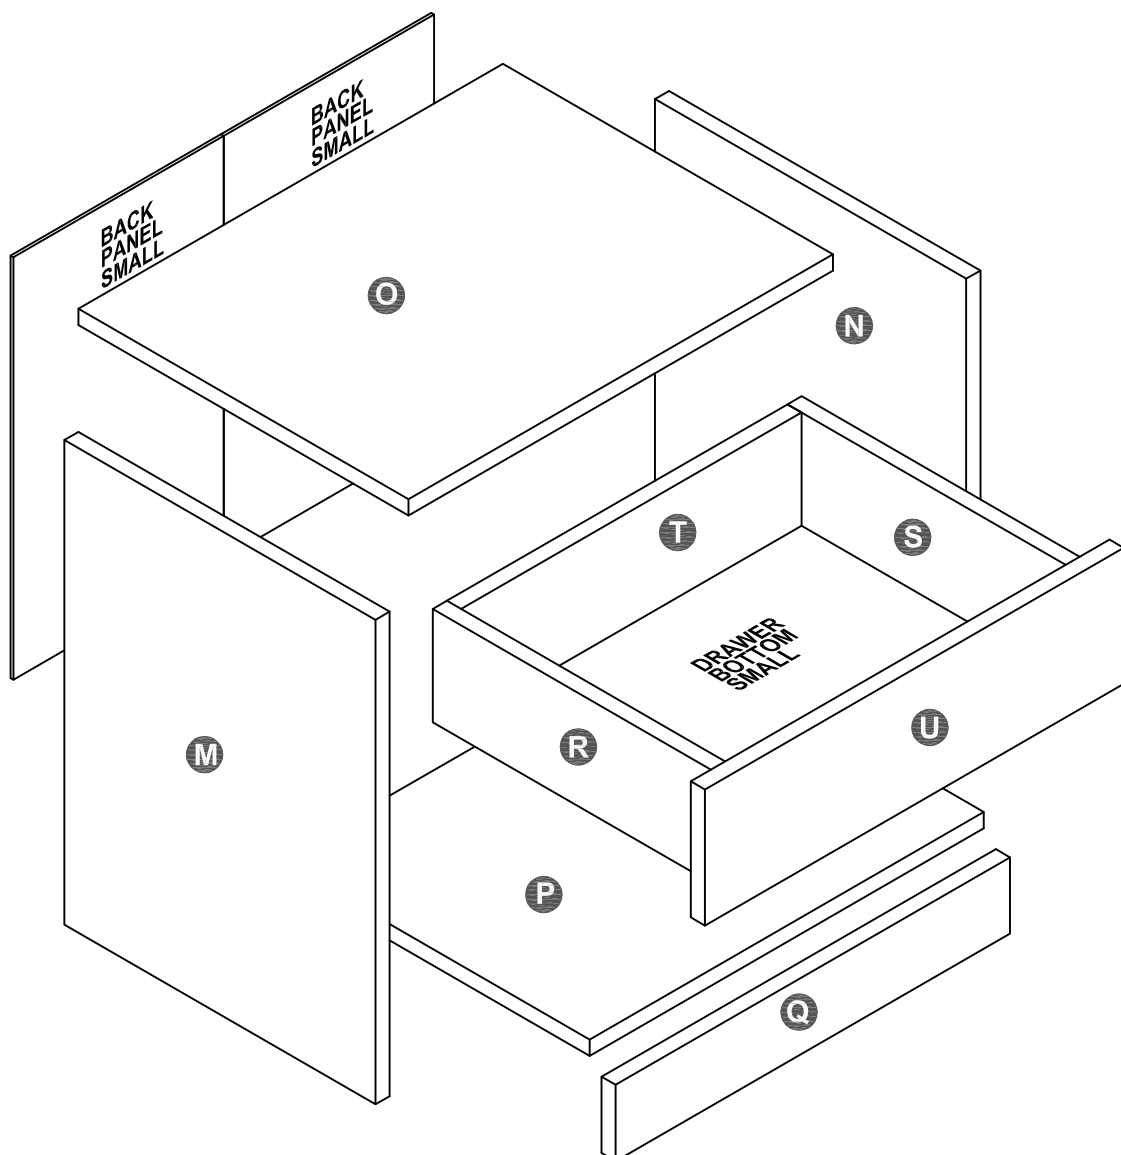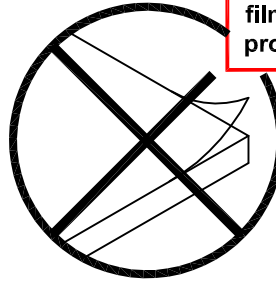

Components - Panels

Please check that you have all the components listed below before constructing your items.
















Part No	Description	Qty
M	Side Panel - L	2
N	Side Panel - R	2
O	Top Panel	2
P	Bottom Panel	2
Q	Bottom Support	2
R	Drawer Side - L	2
S	Drawer Side - R	2
T	Drawer Back	2
U	Drawer Front	2
	Drawer Bottom Small	2
	Back Panel Small	4

Components - Fixings

Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	Unitar 6.3x40mm	(B)	Dowel D6x30mm	(C)	Screw M4x38mm	(D)	Minifix Bolt
							
	8 units		28 units		8 units		12 units
(E)	Screw D4x20mm	(F)	Nail Pin	(G)	Screw D3.5x15mm	(H)	Minifix Cam
							
	4 units		28 units		8 units		12 units
(I)	Screw M6x8mm	(J)	Handle	(K)	Nail Leg	(L)	Sticker (D-18)
							
	8 units		2 unit		8 units		8 units
(M)	M4	(N)	Drawer Slide (12")	(O)	Drawer Slide (12")		
							
	2 units		2 units		2 units		

Tools Required




Ruler - Use this to measure your screws (mm)

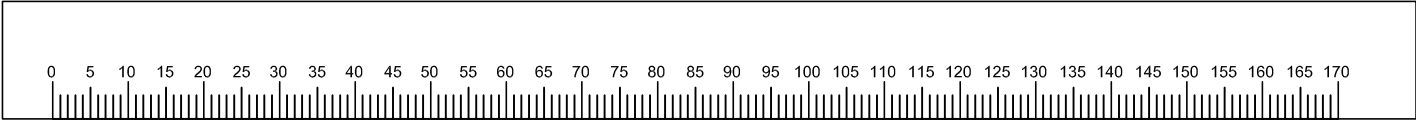


Assembly Instructions


Step 1

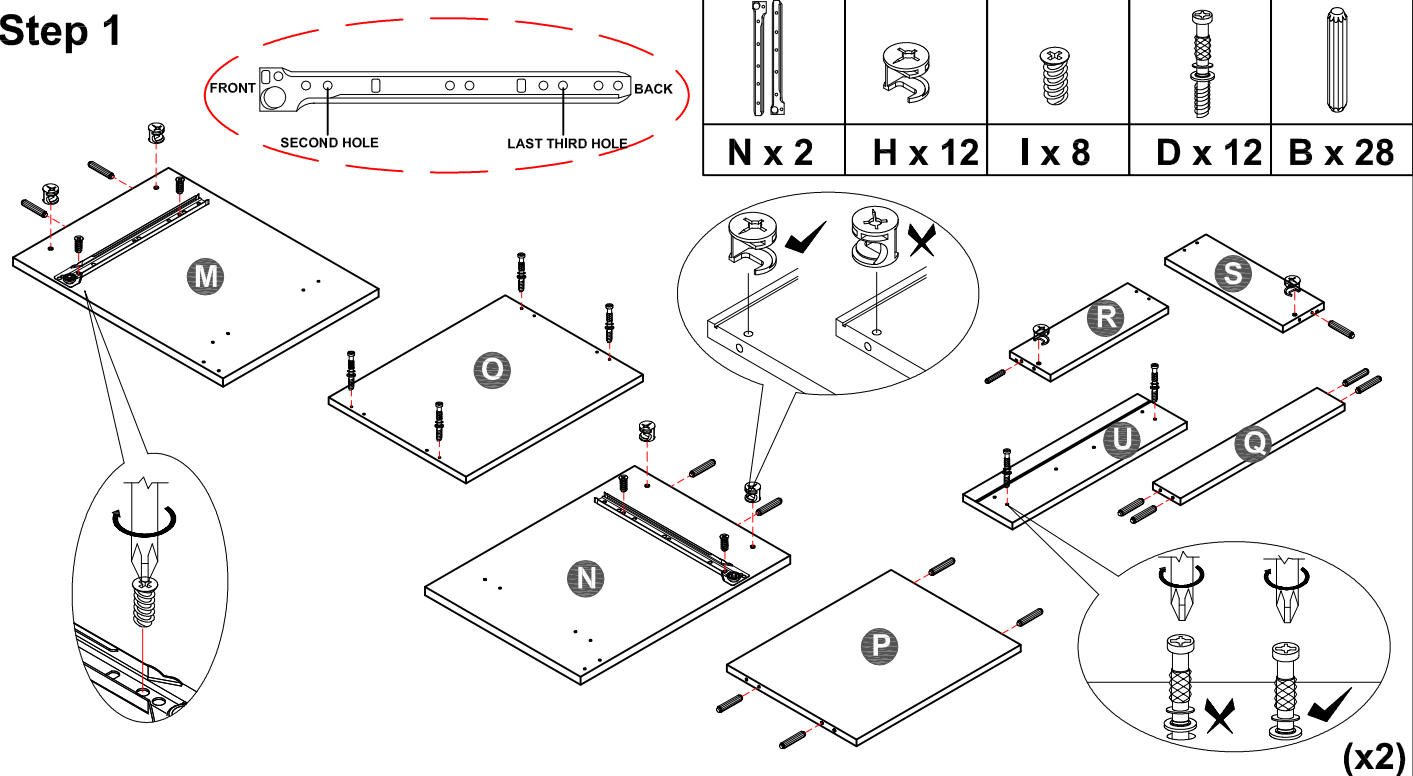


Step 2

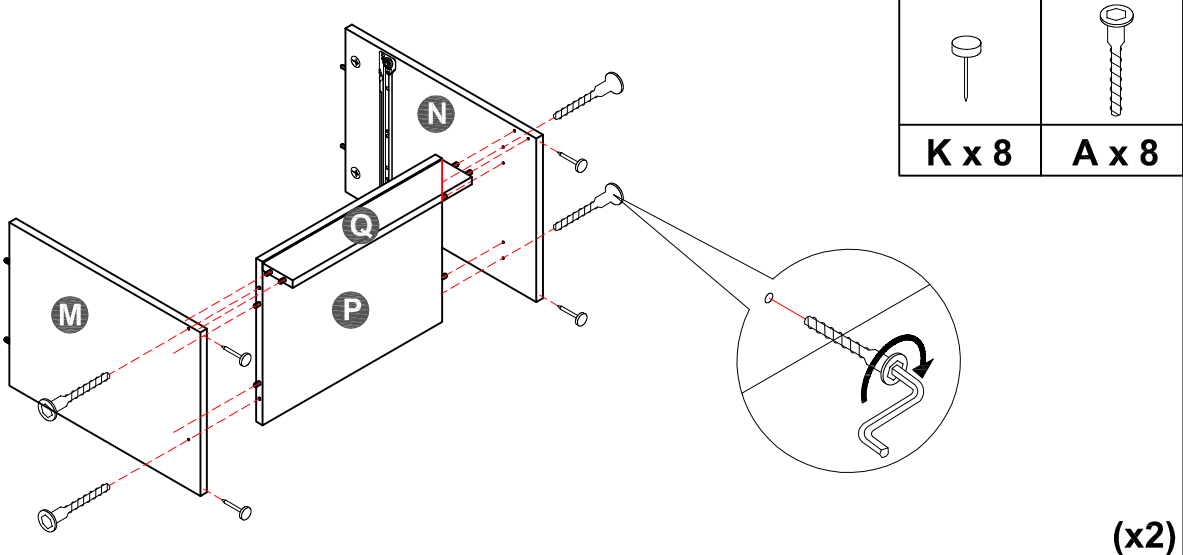


Step 3

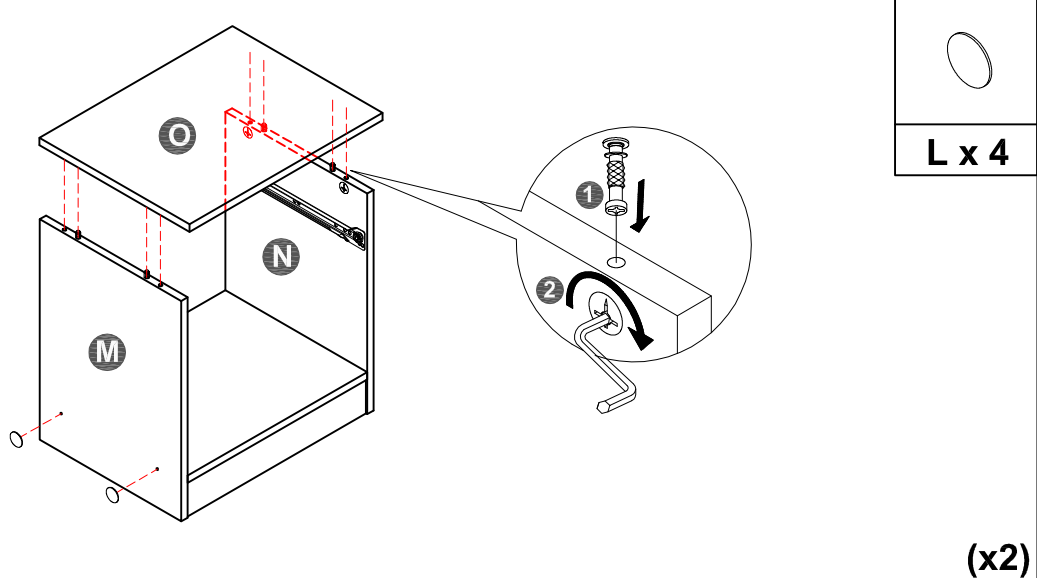

Step 4

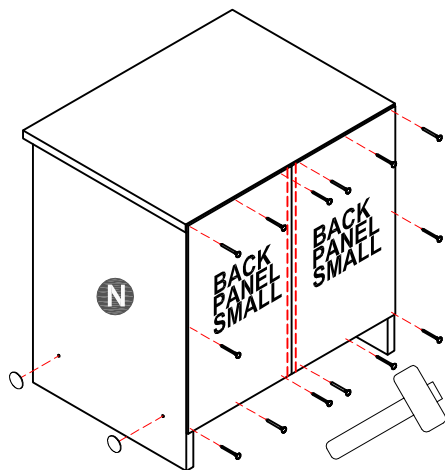

PLEASE ENSURE THAT EACH
OF THE FOUR CORNERS OF
THE CABINET IS SQUARE.

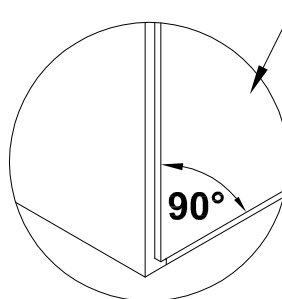


L x 4



F x 28


(x2)

Step 5

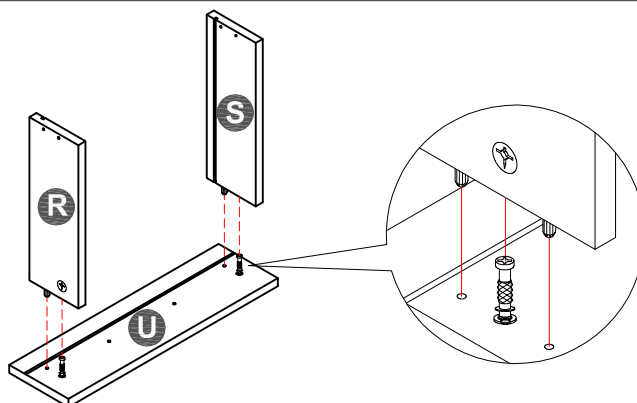

(x2)


Step 6

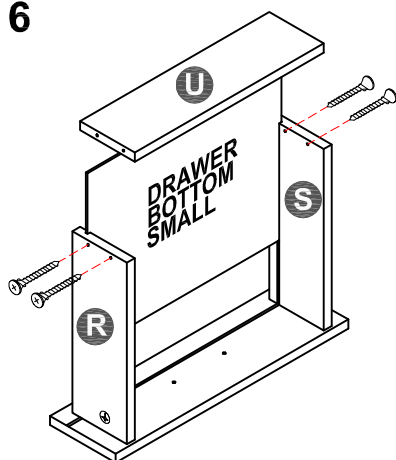


C x 8

(x2)

Step 7

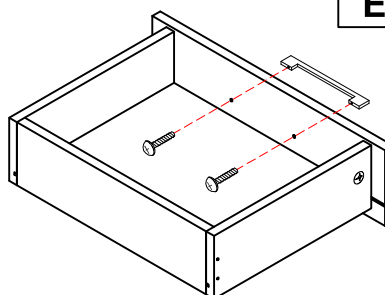


E x 4



J x 2

(x2)



Step 8

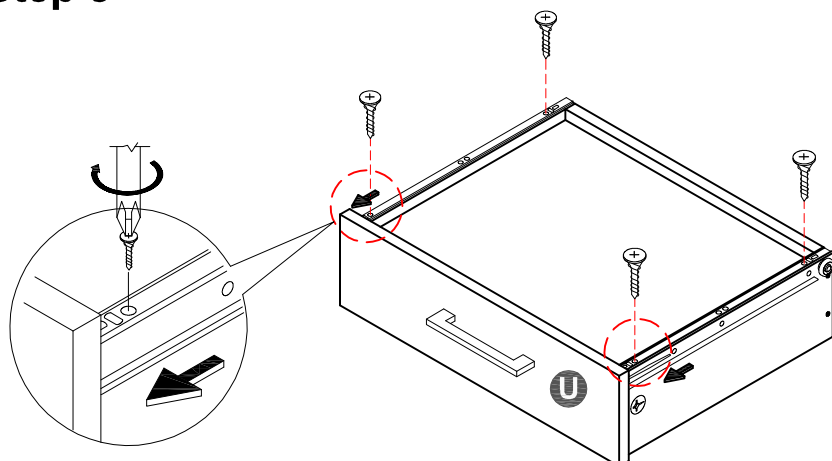

G x 8



O x 2

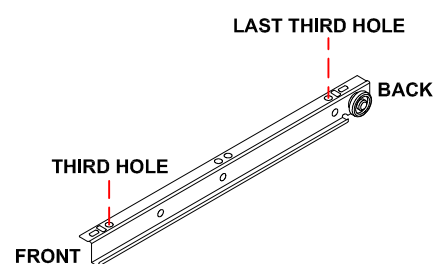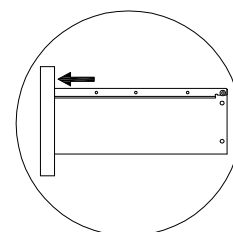


(x2)

MIAMI GLOSS BEDROOM PACKAGE - 3 DRAWER CHEST

Assembly Instructions - Please keep for future reference

Cat No

MR981

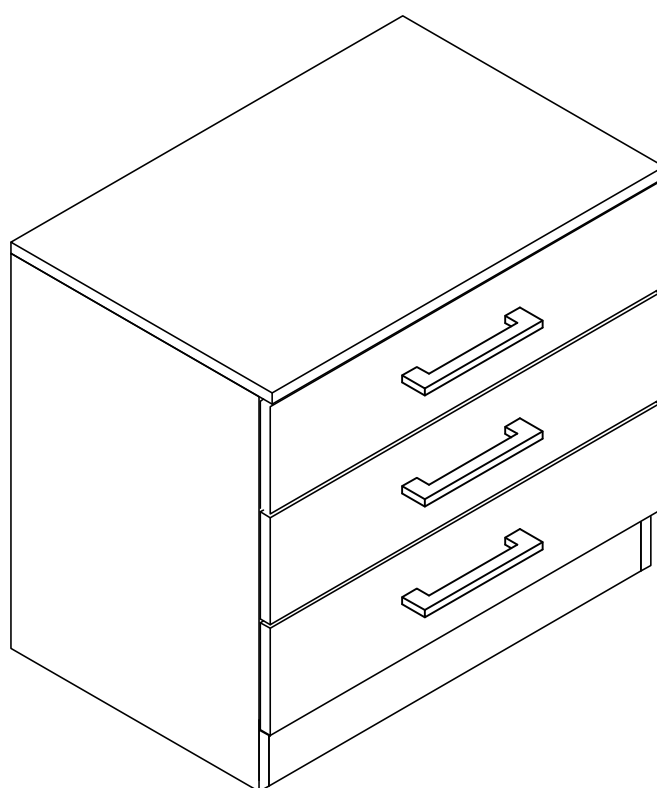

Dimensions	No. people	Assembly Time
Width: 60.2cm Depth: 40.4cm Height: 60.2cm		30Minutes (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**



Warning

Important - In order to help prevent overturning, this product must be used with the wall anti-tip strap/device provided.

To help prevent product toppling over please follow the below steps :


- Use the anti-tip strap/device provided.
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawer.
- Do not place heavy items on the top of furniture, unless the furniture has been designated for this purpose.

Please note that the only anti-tip strap/devices and screw are provided, you will need to provide wall plugs and screws applicable for your wall type.


PLEASE DO NOT REMOVE THE PERMANENT SAFETY LABEL FROM YOUR FURNITURE !

Permanent Label Assembly Location

1. Wardrobe/Cabinet without Drawer :
Inside back panel visible/below the shelf.

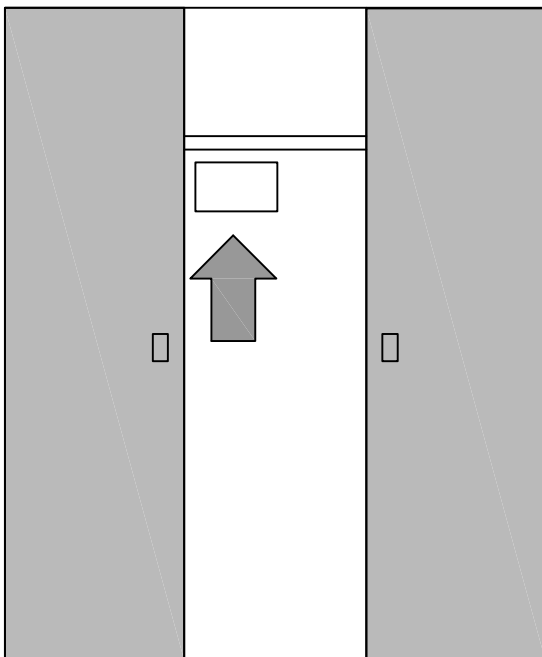



2. Chest of Drawer/sideboard/Unit with Drawer :
Top drawer on the inside side of drawer wrap.

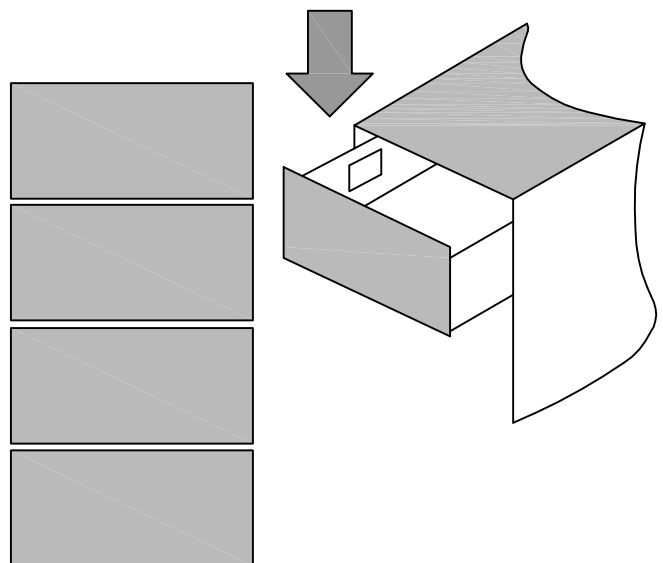

Note: For uncommon furniture design, the location of safety permanent label may differ.

Exploded View

Warning: Please do not remove the protection film until the assembly process completed.

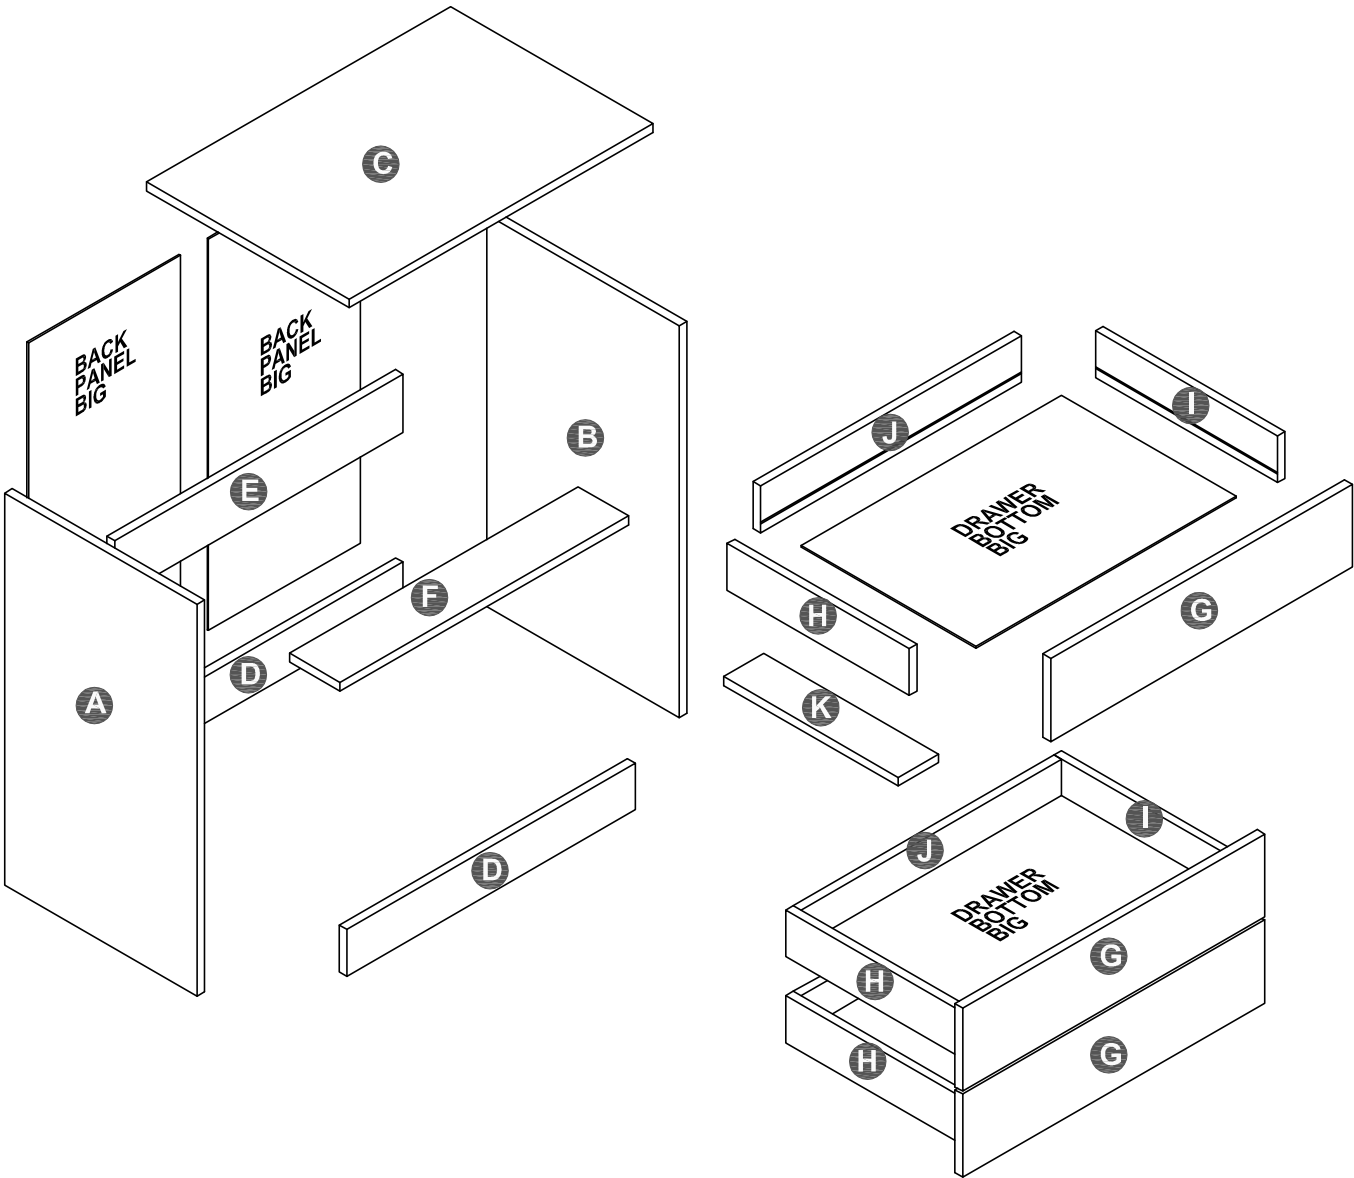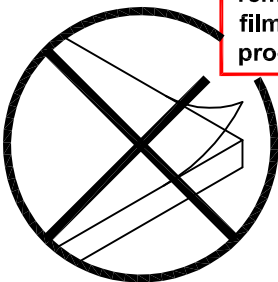

Components - Panels

Please check that you have all the components listed below before constructing your items.


















Part No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Top Panel	1
D	Bottom Bar	2
E	Back Support	1
F	Center Bar	1
G	Drawer Front	3
H	Drawer Side - L	3
I	Drawer Side - R	3
J	Drawer Back	3
K	Drawer Support	3
	Drawer Bottom Big	3
	Back Panel	2

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


***Hardware packed separately according to the code.**

(A)	Unitar 6.3x40mm	(B)	Dowel D6x30mm	(C)	Screw M4x38mm	(D)	Minifix Bolt
							
	8 units		36 units		12 units		10 units
(E)	Screw D4x20mm	(F)	Nail Pin	(G)	Screw D3.5x15mm	(H)	Minifix Cam
							
	6 units		22 units		12 units		10 units
(I)	Screw D6x8mm	(J)	Handle	(K)	Nail Leg	(L)	Sticker (D-18)
							
	12 units		3 unit		4 units		8 units
(M)	M4	(N)	Drawer Slide (14")	(O)	Drawer Slide (14")	(P)	CSK M3.5 x 25mm
							
	1 unit		3 units		3 units		1 unit
(Q)	Safety Strap + Washer						
							
	1 unit						

Tools Required




Ruler - Use this to measure your screws (mm)

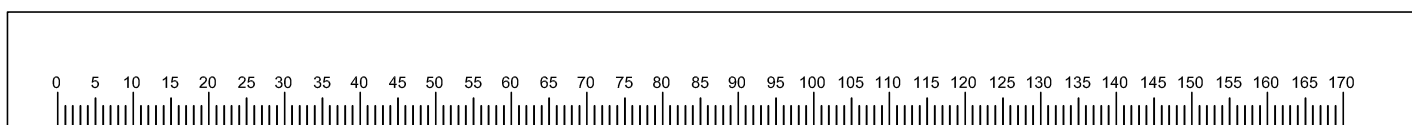


Assembly Instructions


Step 1

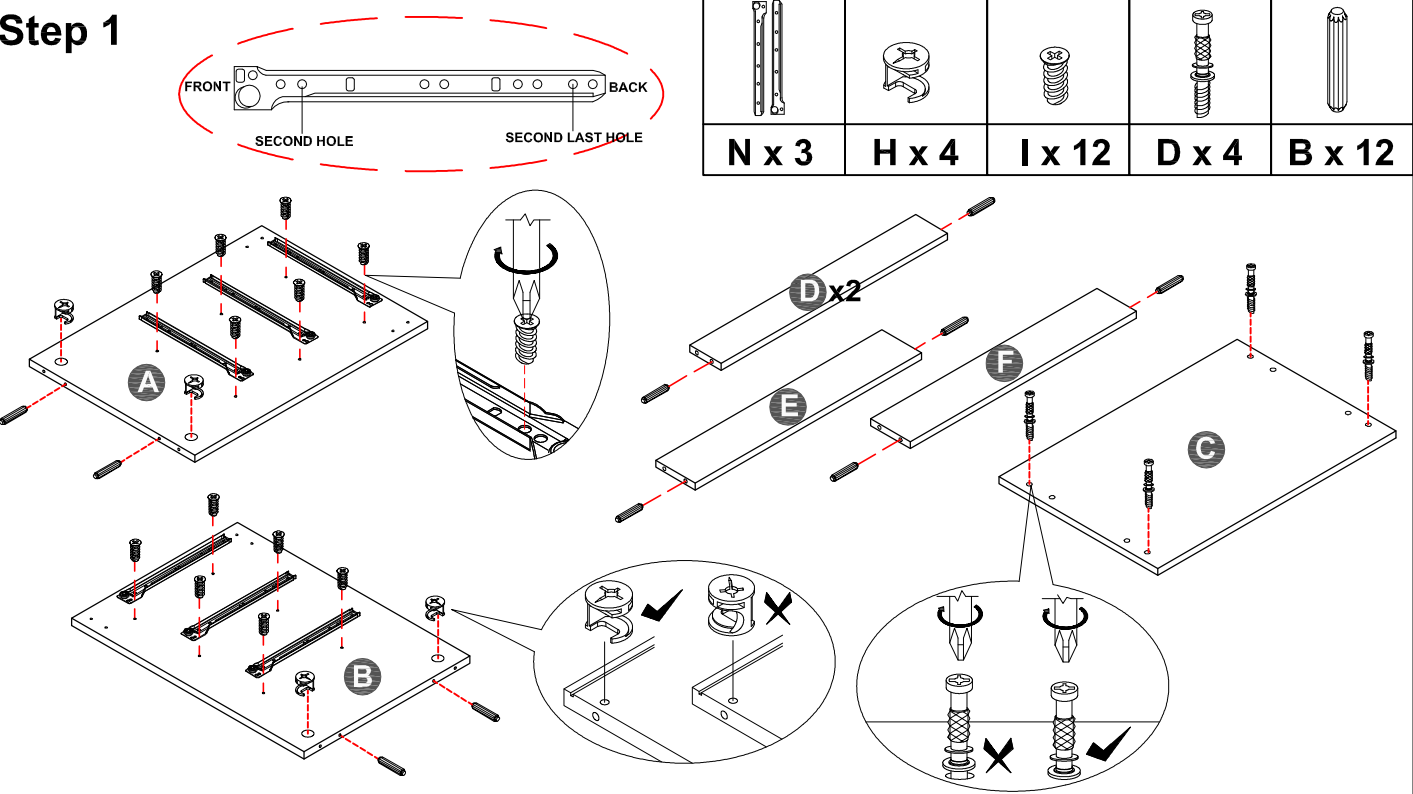


Step 2

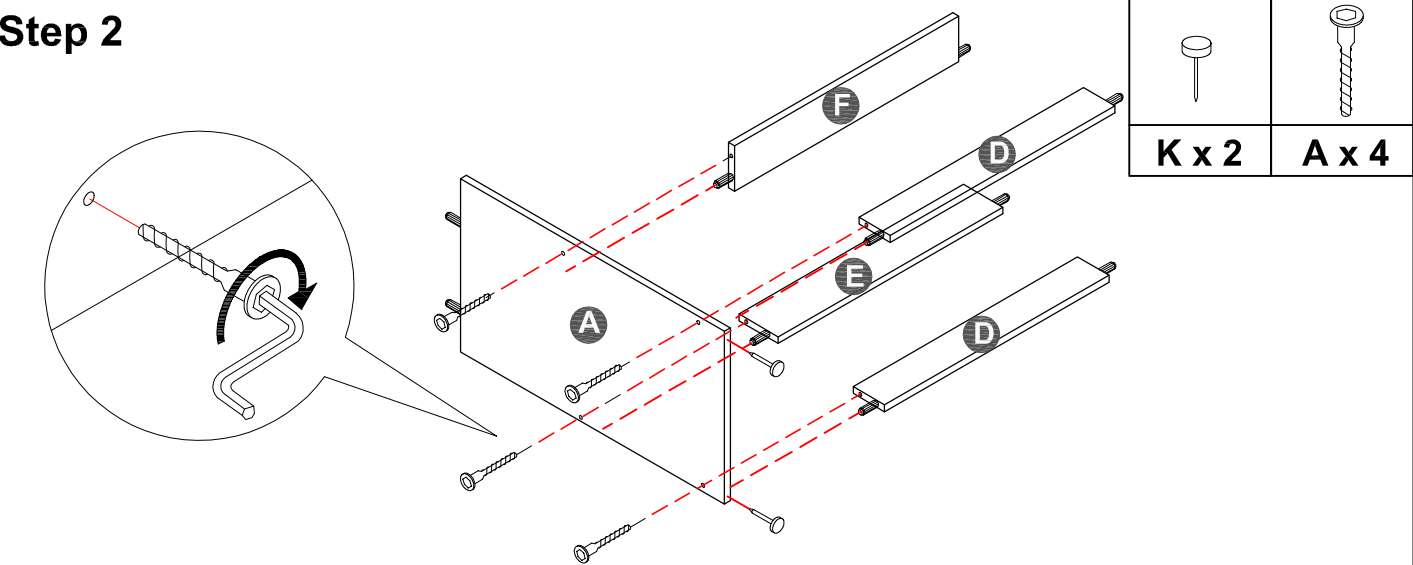

Step 3

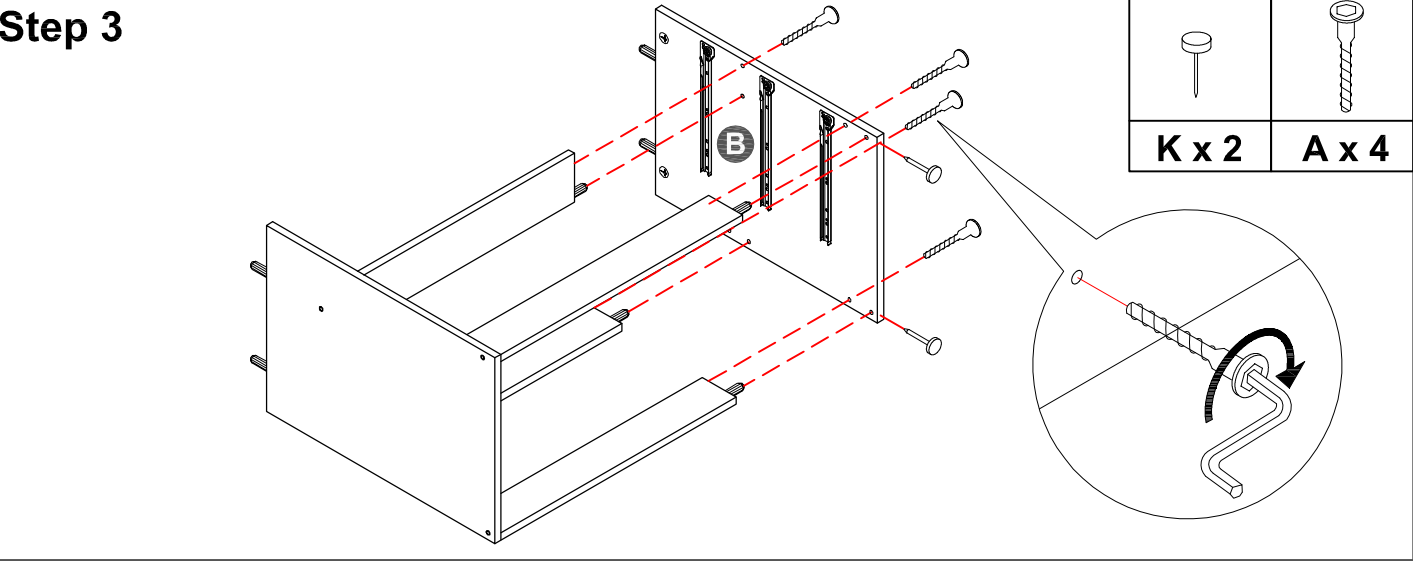


Step 4

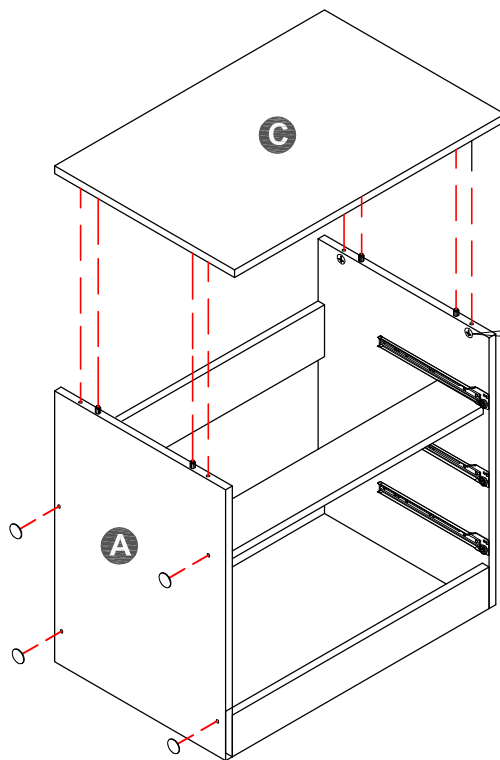

L x 4

Step 5

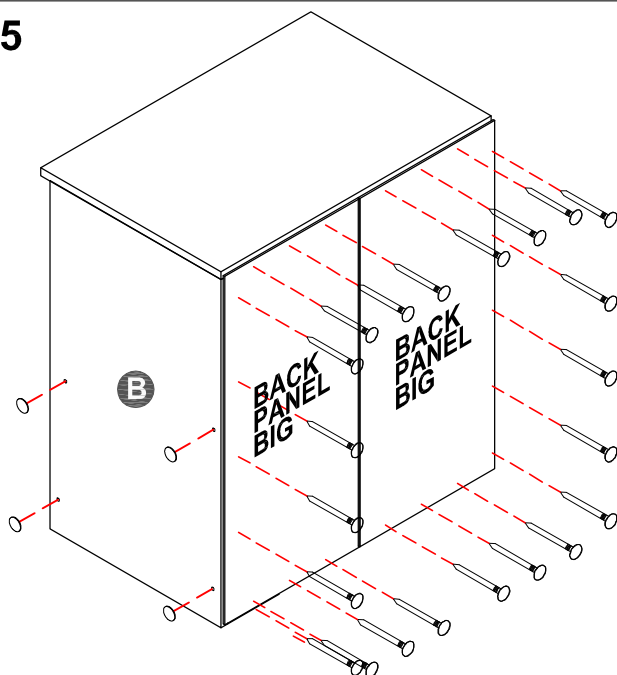

L x 4




F x 22

PLEASE ENSURE THAT EACH
OF THE FOUR CORNERS OF
THE CABINET IS SQUARE.

90°


Step 6

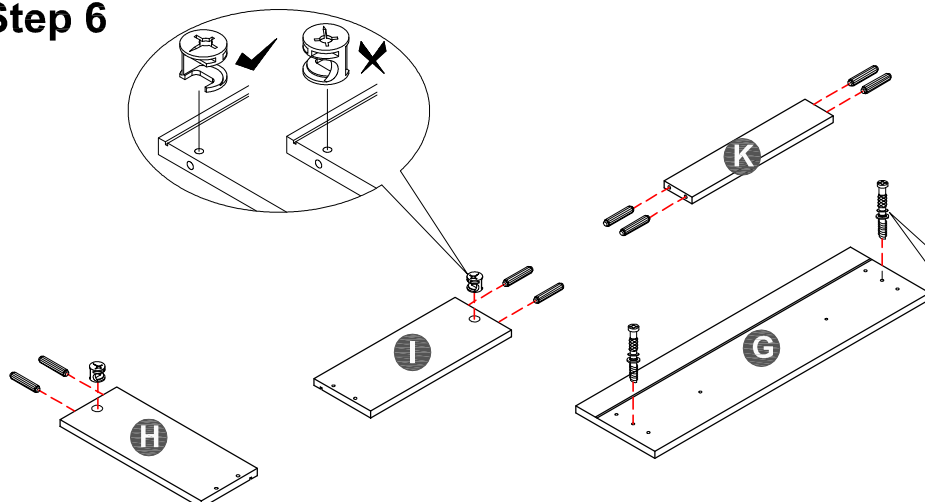

H x 6




D x 6




B x 24

(x3)


Step 7

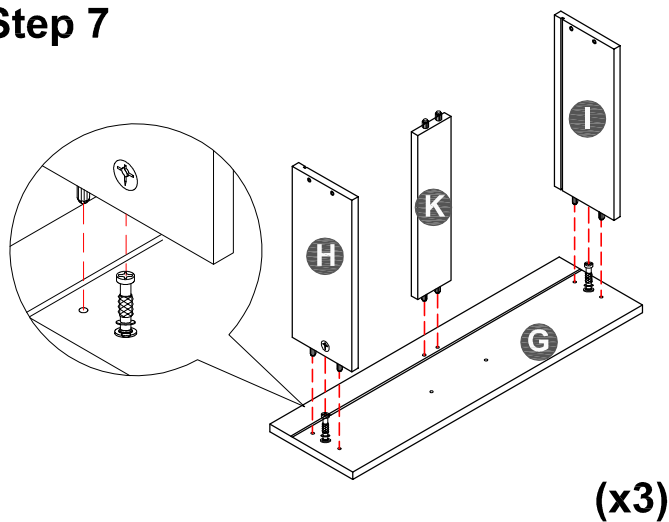


Step 8

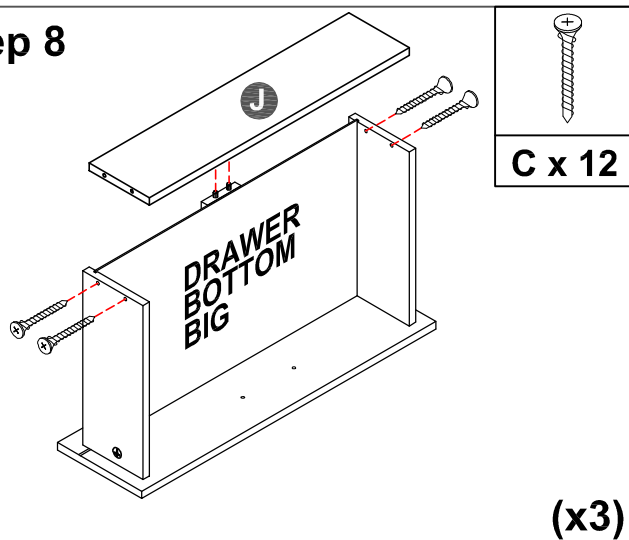

Step 9


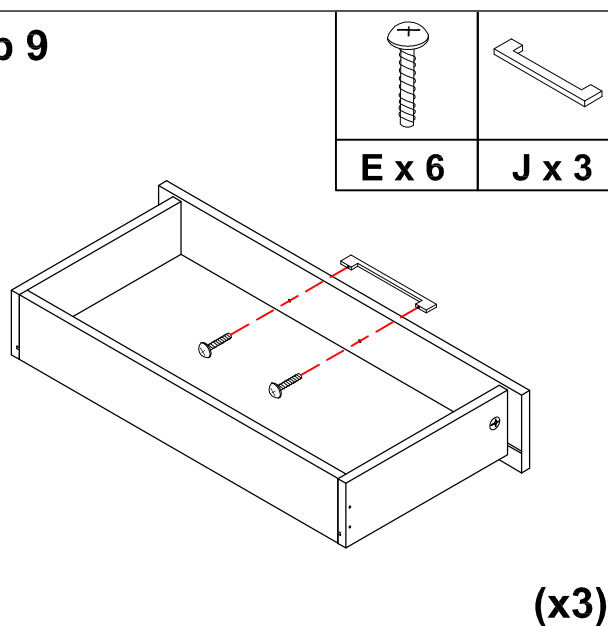


Step 10

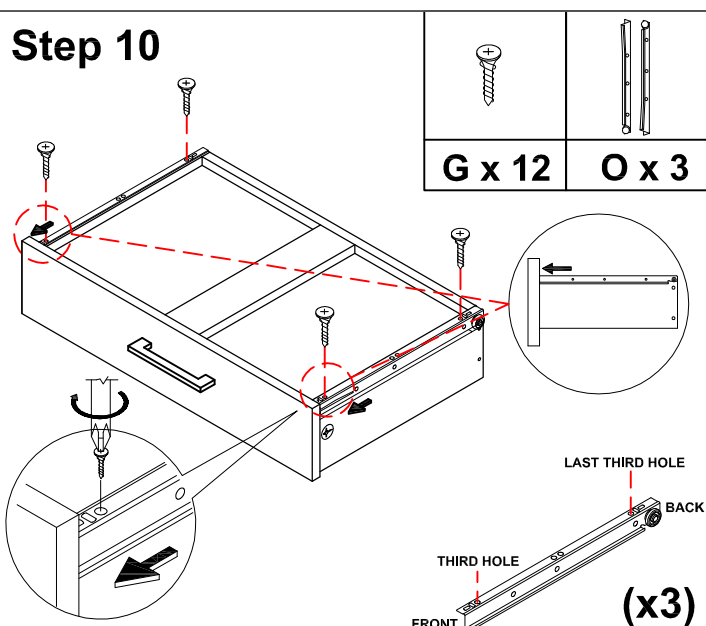

Step 11


PLEASE ENSURE DRAWER THAT HAVE WARNING LABEL ON DRAWER SIDE - L IS INSTALL AS TOP DRAWER.

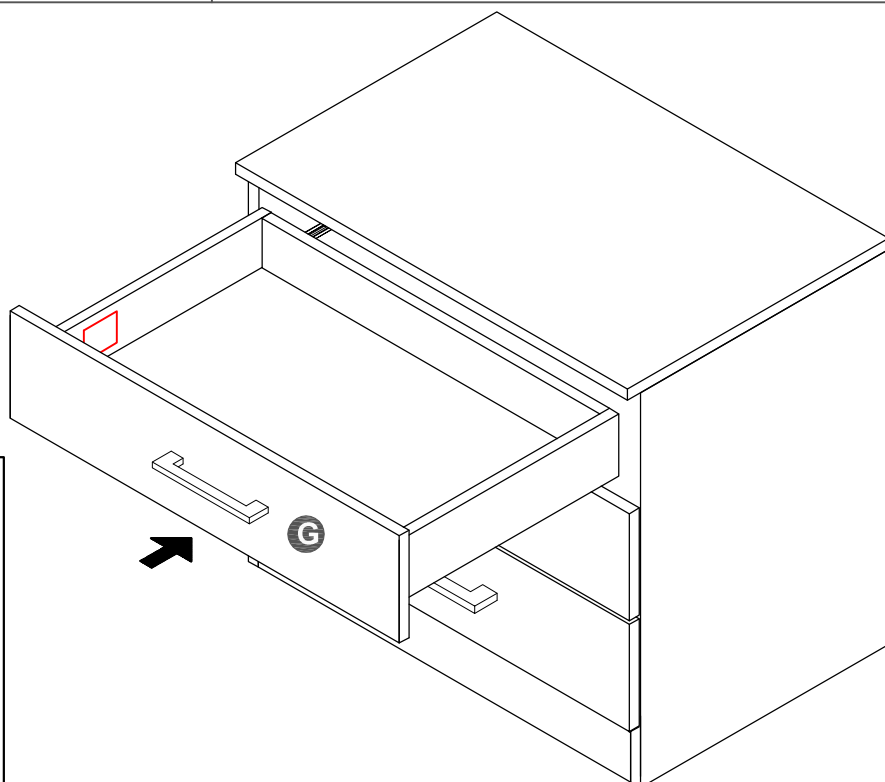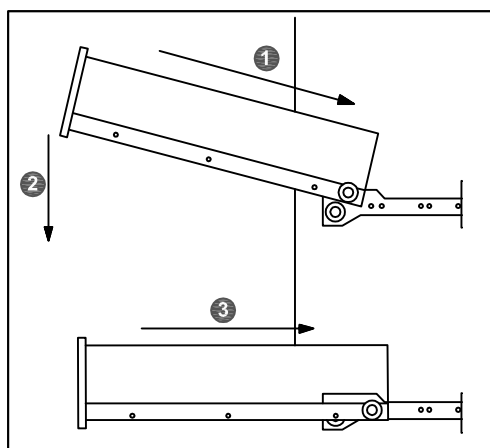

FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:

Pull the screw in the top panel hole of your furniture

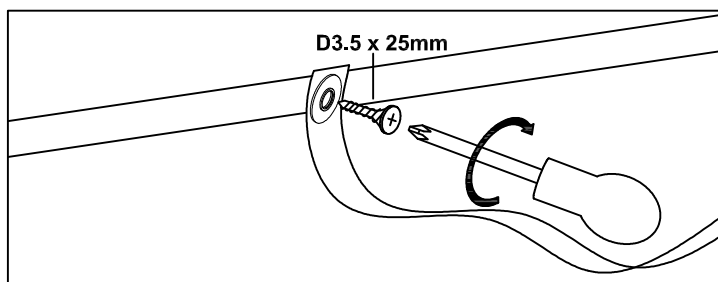


STEP 2:

Make a hole on the wall and pull the wall plug in

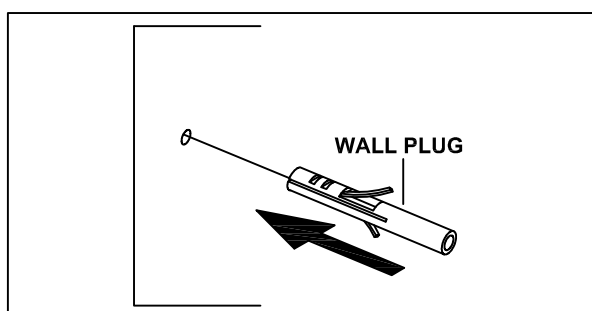

STEP 3:

Pull the screw in the wall plug hole

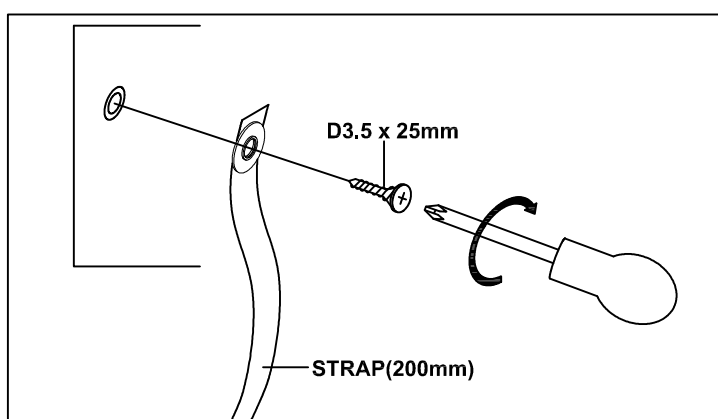

NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

HARDWARE LIST



STRAP(200mm)-1Pc




D3.5 x 25mm-1Pc

MIAMI GLOSS BEDROOM PACKAGE - 2 DOOR WARDROBE

Assembly Instructions - Please keep for future reference

Cat No

OP414

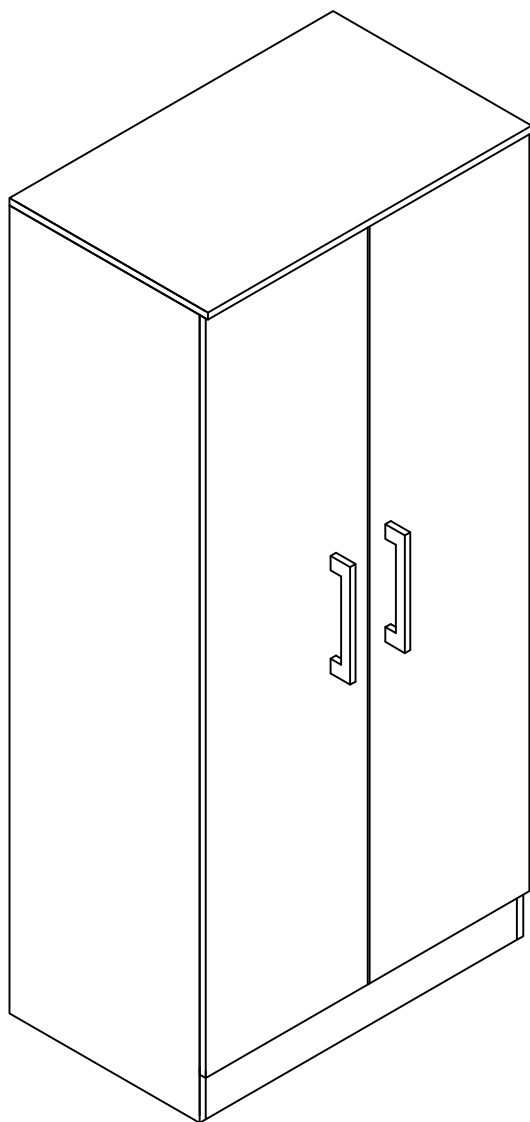

Dimensions	No. people	Assembly Time
Width: 76.2cm Depth: 46.8cm Height: 181.5cm		30Minutes (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**



Warning

Important - In order to help prevent overturning, this product must be used with the wall anti-tip strap/device provided.

To help prevent product toppling over please follow the below steps :


- Use the anti-tip strap/device provided.
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawer.
- Do not place heavy items on the top of furniture, unless the furniture has been designated for this purpose.

Please note that the only anti-tip strap/devices and screw are provided, you will need to provide wall plugs and screws applicable for your wall type.


PLEASE DO NOT REMOVE THE PERMANENT SAFETY LABEL FROM YOUR FURNITURE !

Permanent Label Assembly Location

1. Wardrobe/Cabinet without Drawer :
Inside back panel visible/below the shelf.

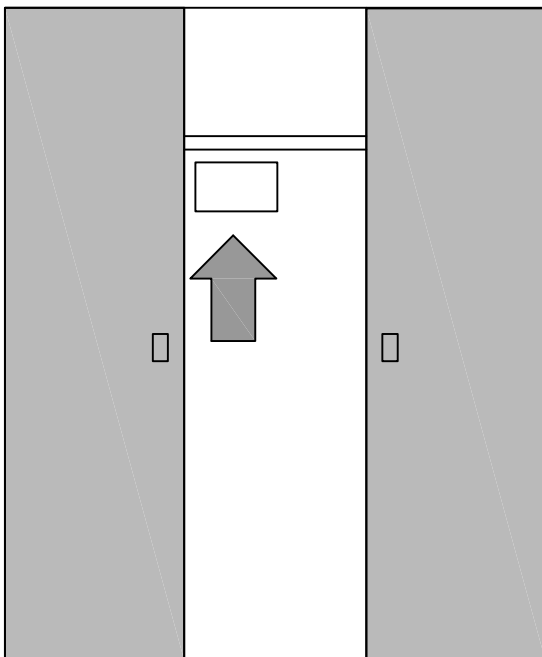



2. Chest of Drawer/sideboard/Unit with Drawer :
Top drawer on the inside side of drawer wrap.

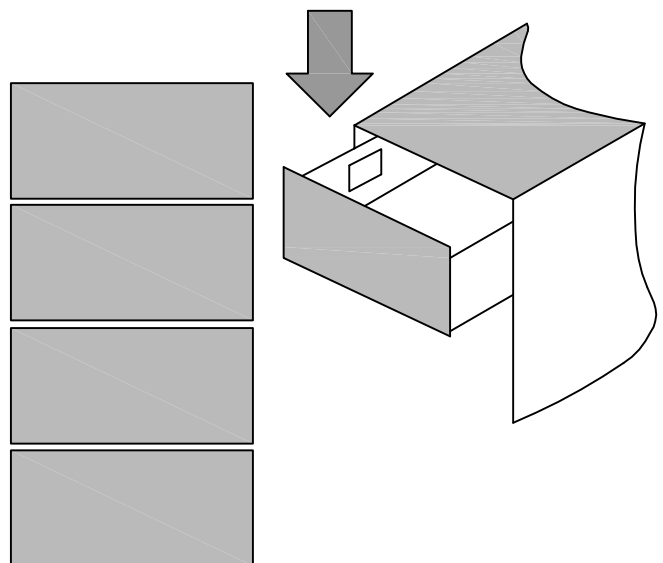

Note: For uncommon furniture design, the location of safety permanent label may differ.

Exploded View

Warning: Please do not remove the protection film until the assembly process completed.

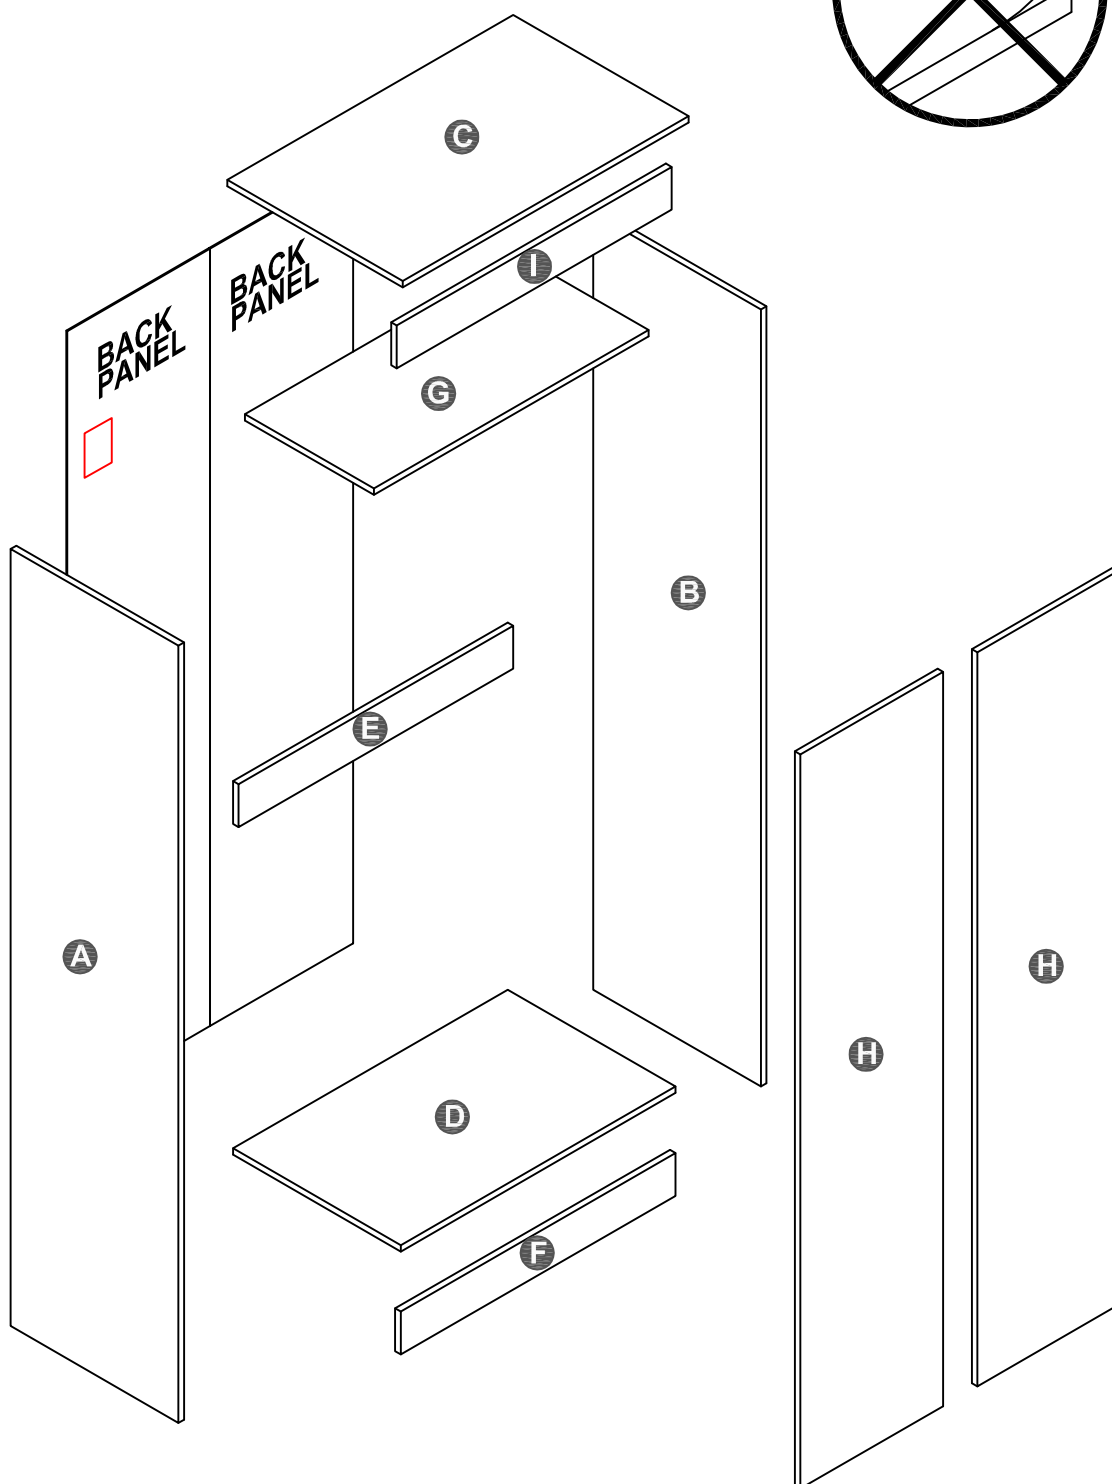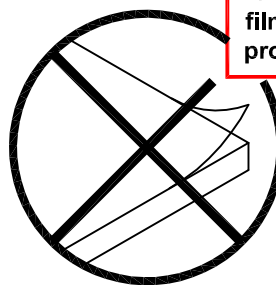

Components - Panels

Please check that you have all the components listed below before constructing your items.
















Part No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Top Panel	1
D	Bottom Panel	1
E	Back Support	1
F	Bottom Bar	1
G	Fix Shelf	1
H	Door	2
I	Top Support	1
	Back Panel	2

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


***Hardware packed separately according to the code.**

(A)	Unitar 6.3x40mm	(B)	Dowel D6x30mm	(C)	Minifix Bolt	(D)	Screw M4x20mm
							
	10 units		24 units		4 units		4 units
(E)	Nail Pin	(F)	Screw #10x16mm	(G)	Minifix Cam	(H)	Screw D3.5x25mm
							
	28 units		24 units		4 units		1 unit
(I)	Hinges 5/8"	(J)	Hanger - L-740mm	(K)	Handle	(L)	Nail Leg
							
	6 units		1 unit		2 units		4 units
(M)	Sticker (D-18)	(N)	M4	(O)	Safety Strap + Washer		
							
	10 units		1 unit		1 unit		

Tools Required




Ruler - Use this to measure your screws (mm)

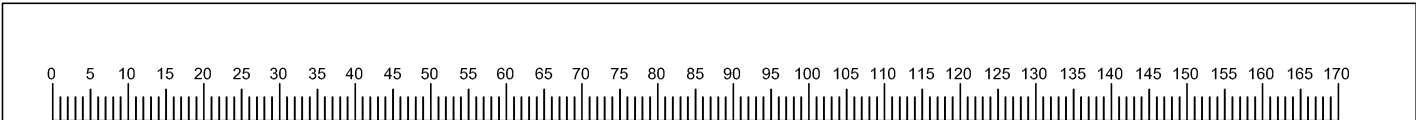


Assembly Instructions


Step 1

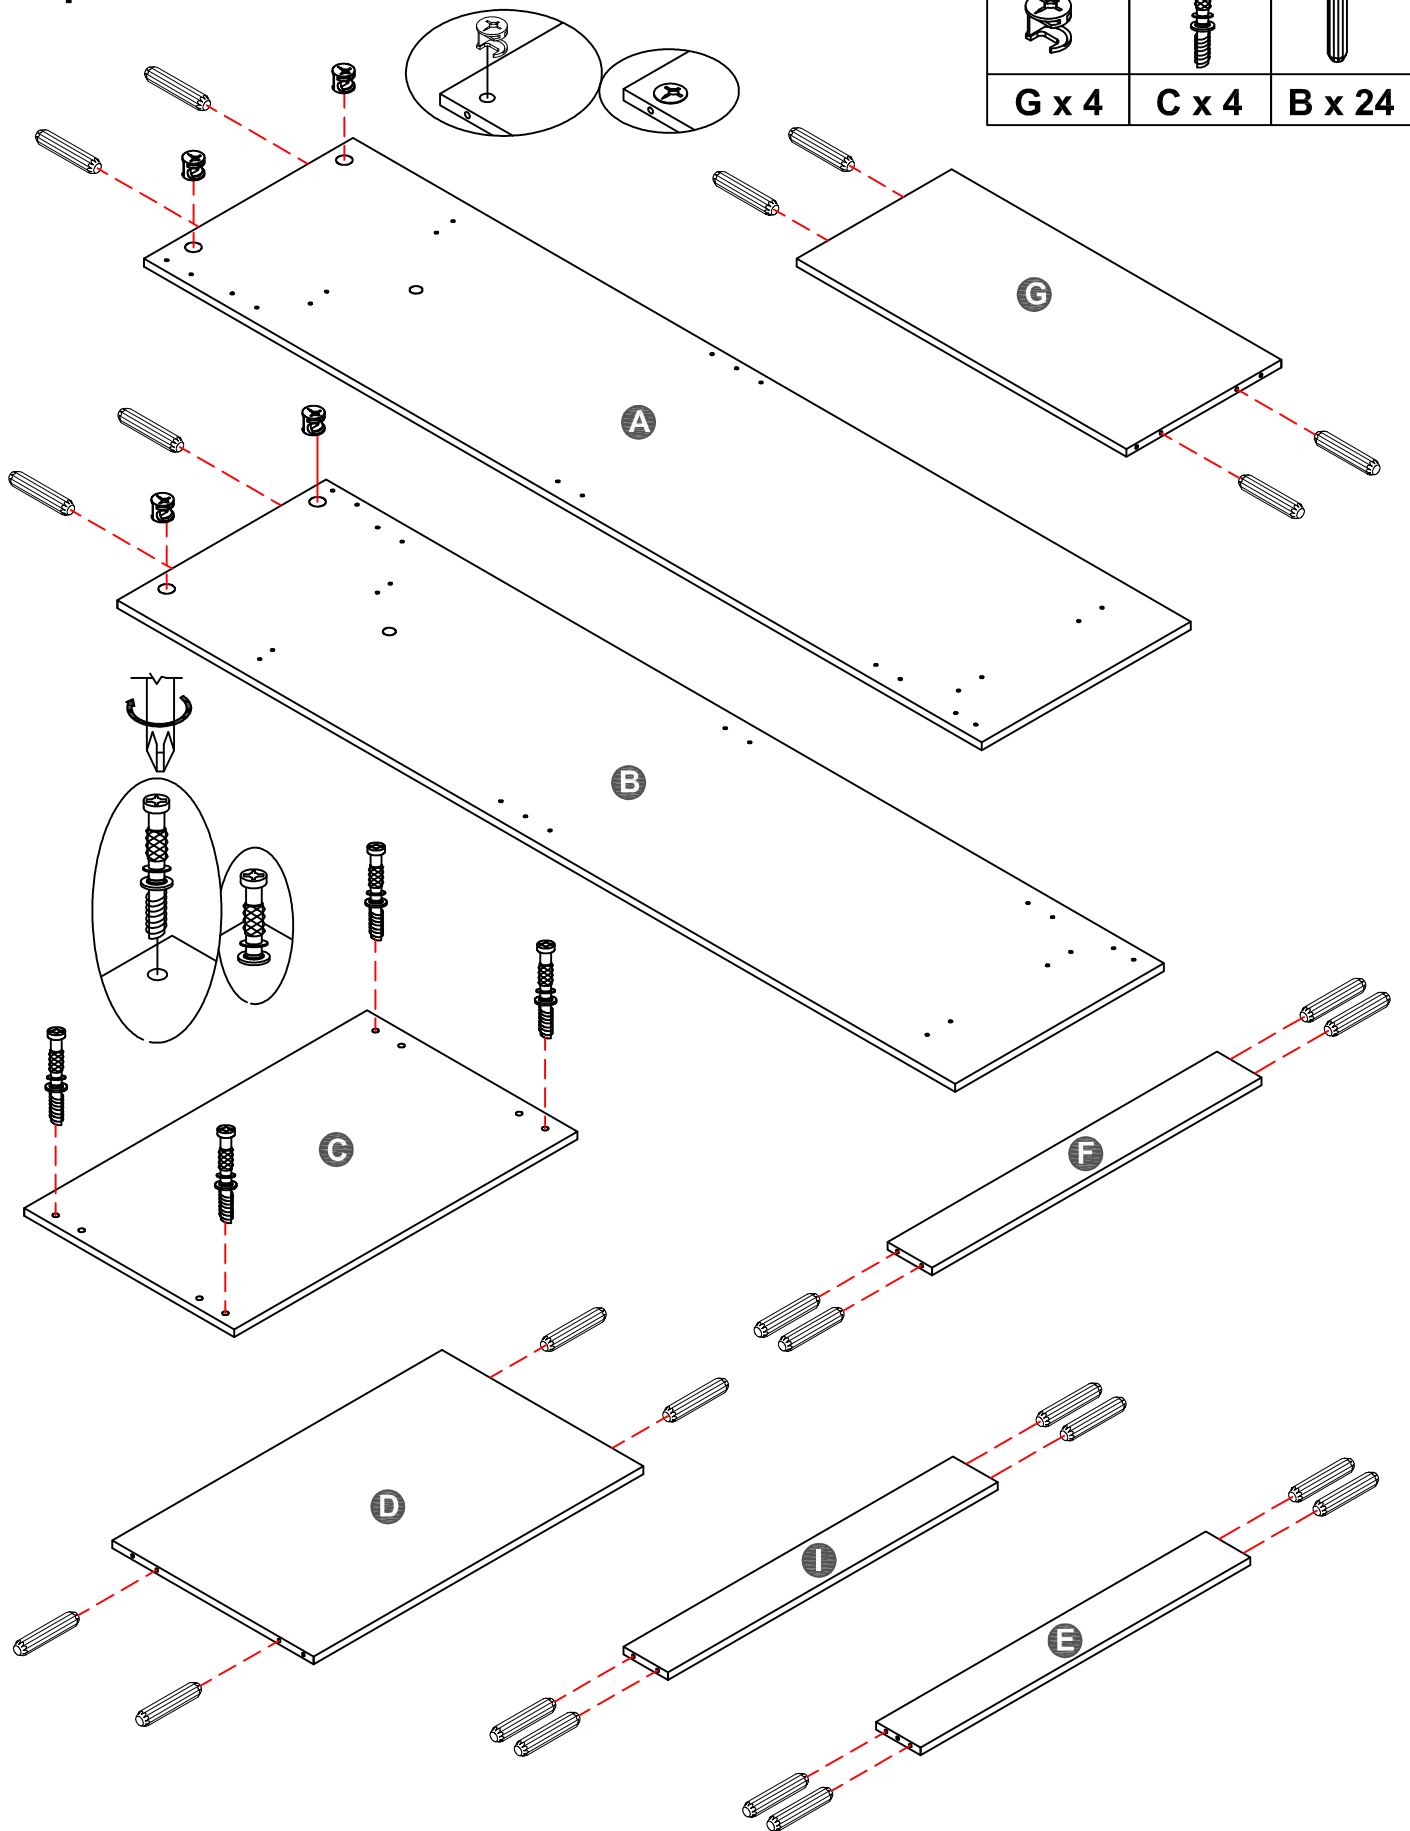


Step 2

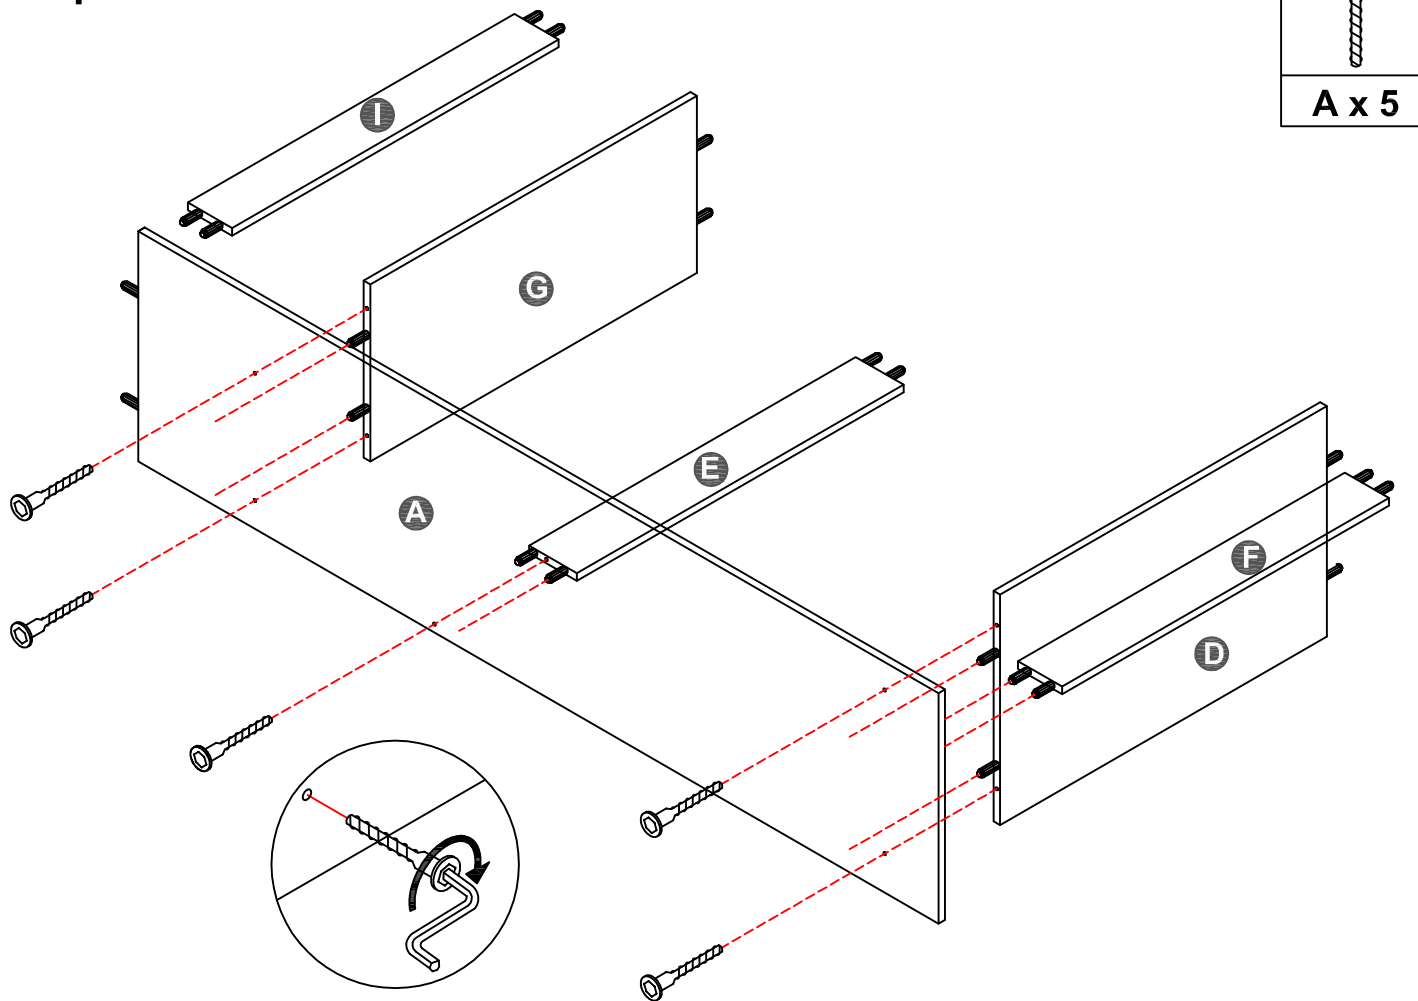


Step 3

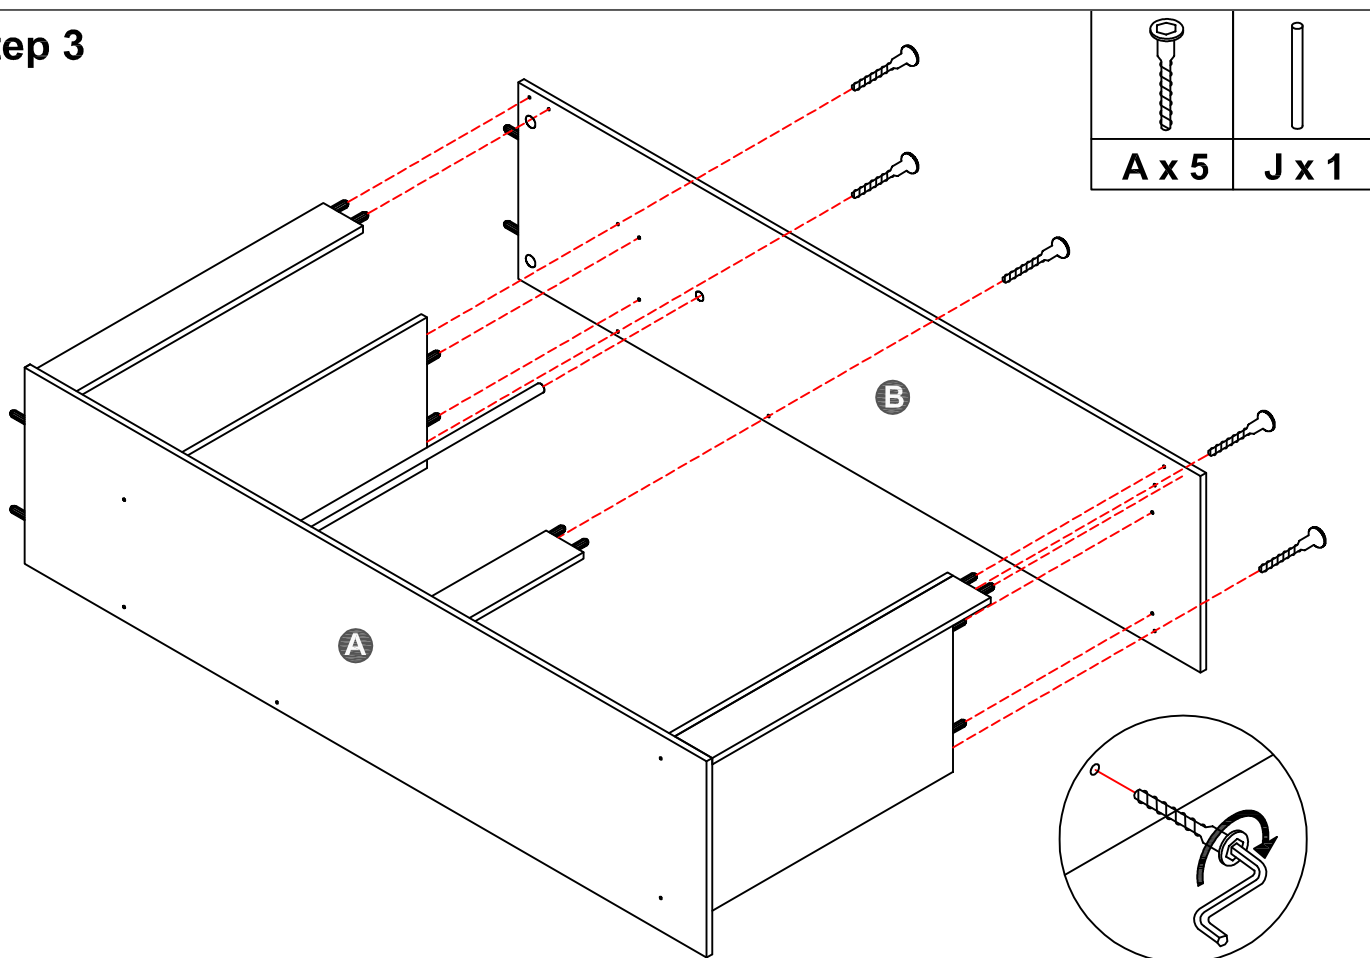

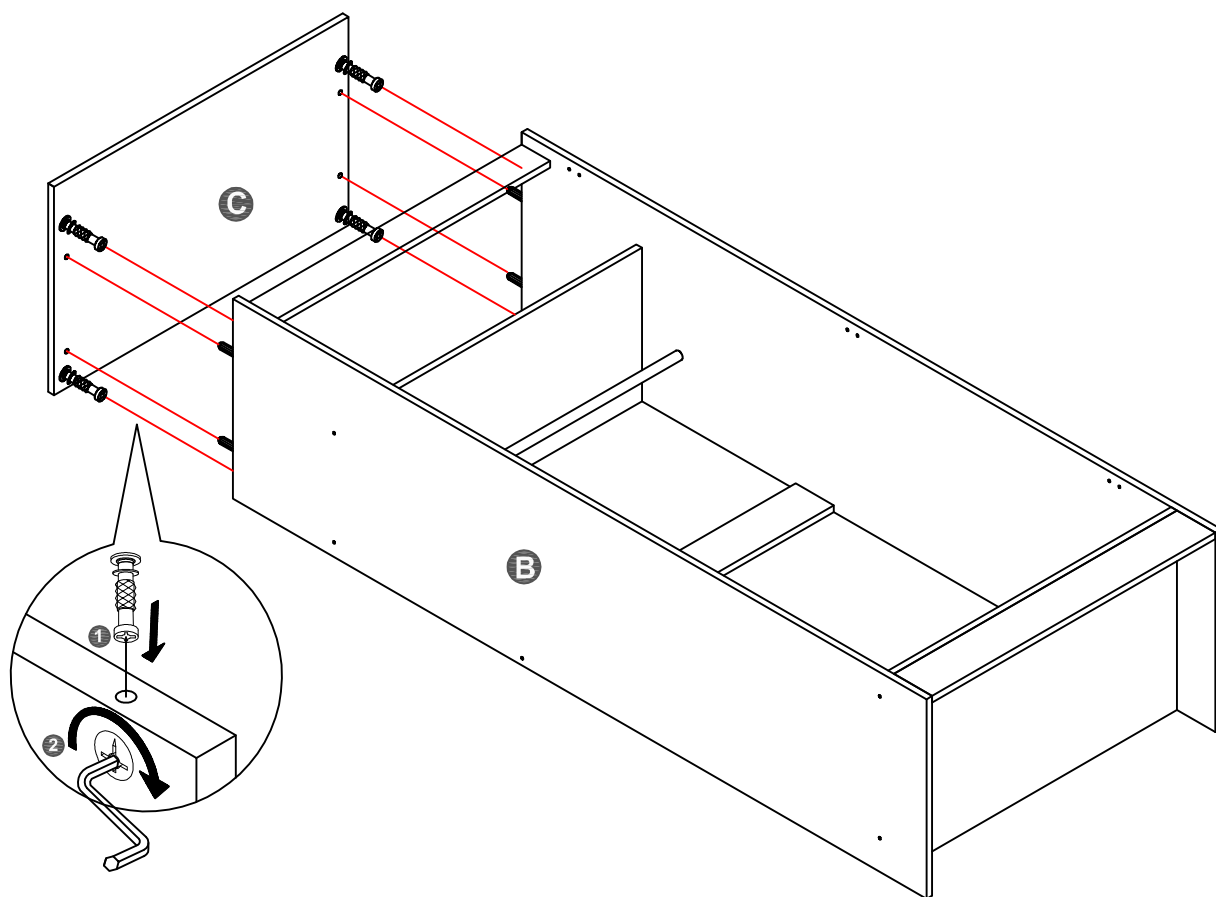


Step 4

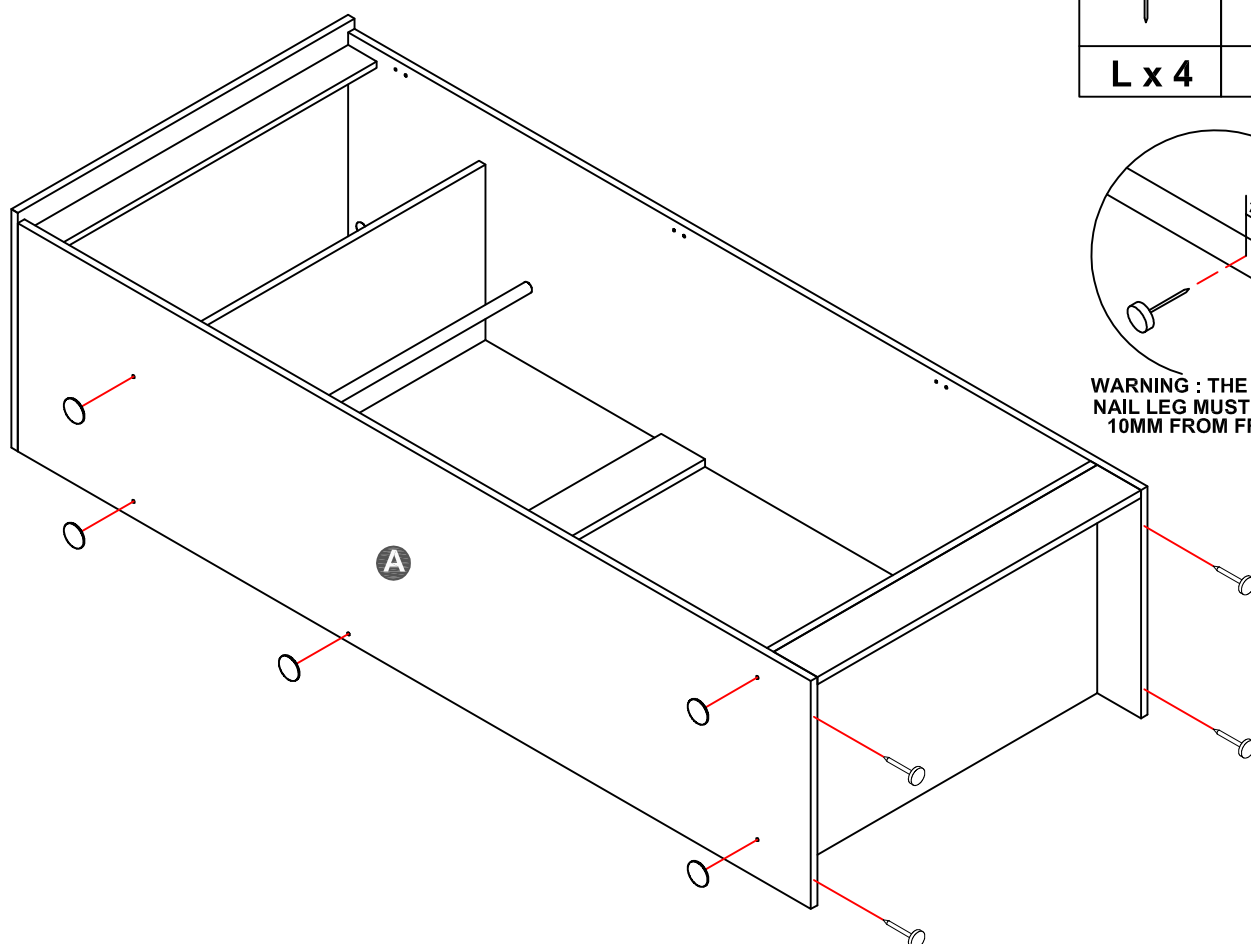

Step 5




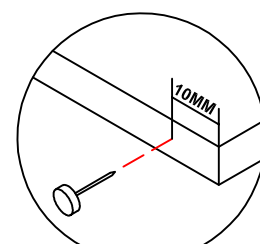

	
L x 4	M x 5




**WARNING : THE FRONT
NAIL LEG MUST FIX AT
10MM FROM FRONT**

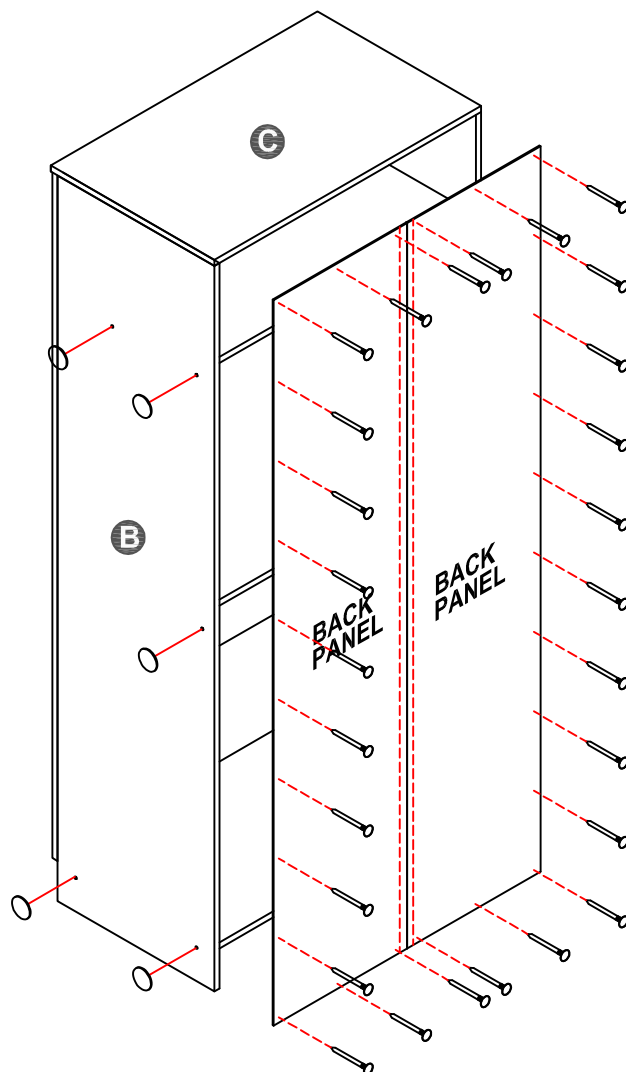Step 6






	
M x 5	E x 28

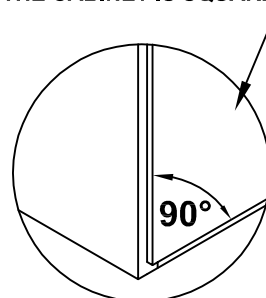


PLEASE ENSURE THAT EACH OF THE FOUR CORNERS OF THE CABINET IS SQUARE.


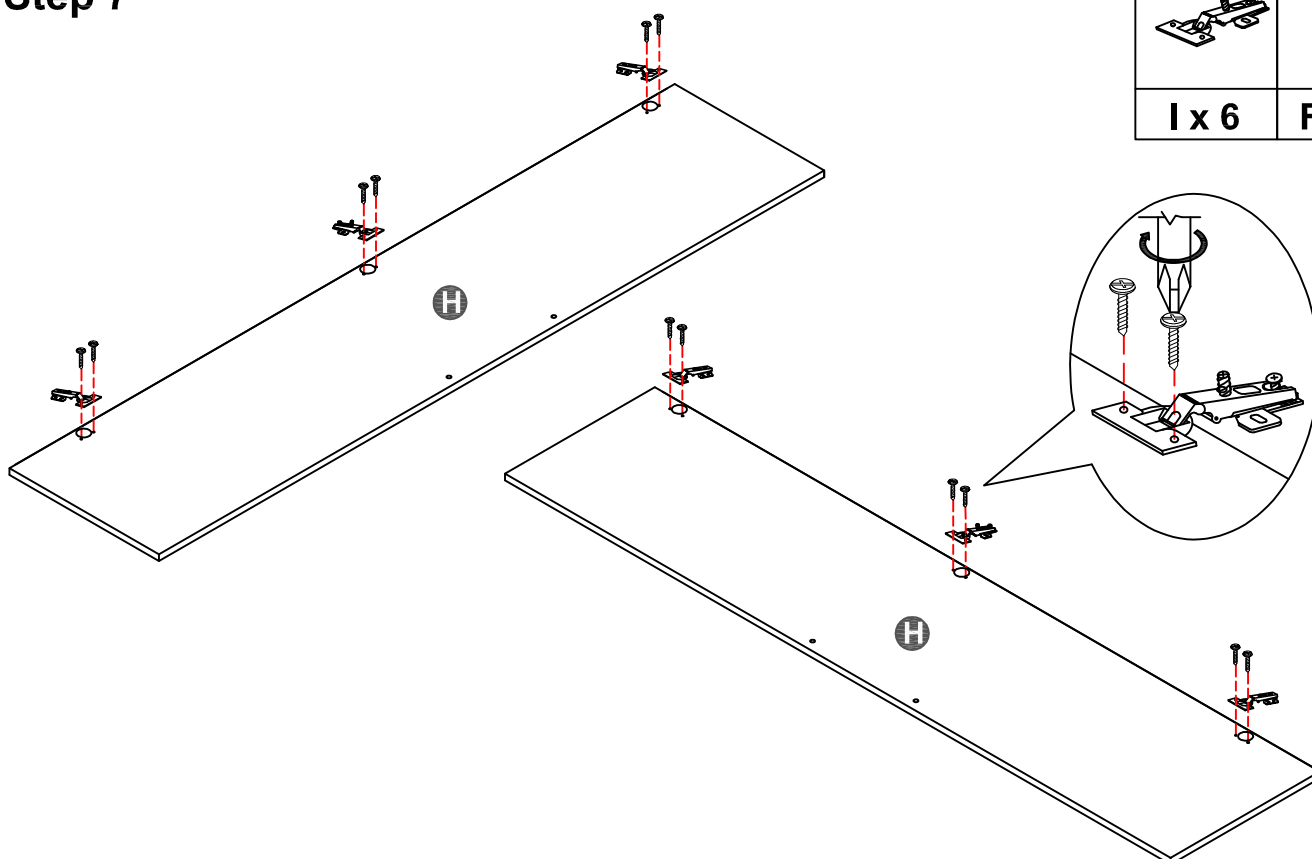


Step 7




	
I x 6	F x 12


		
F x 12	D x 4	K x 2

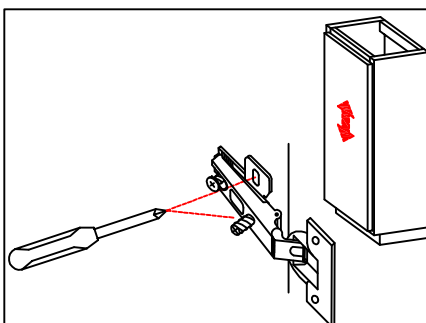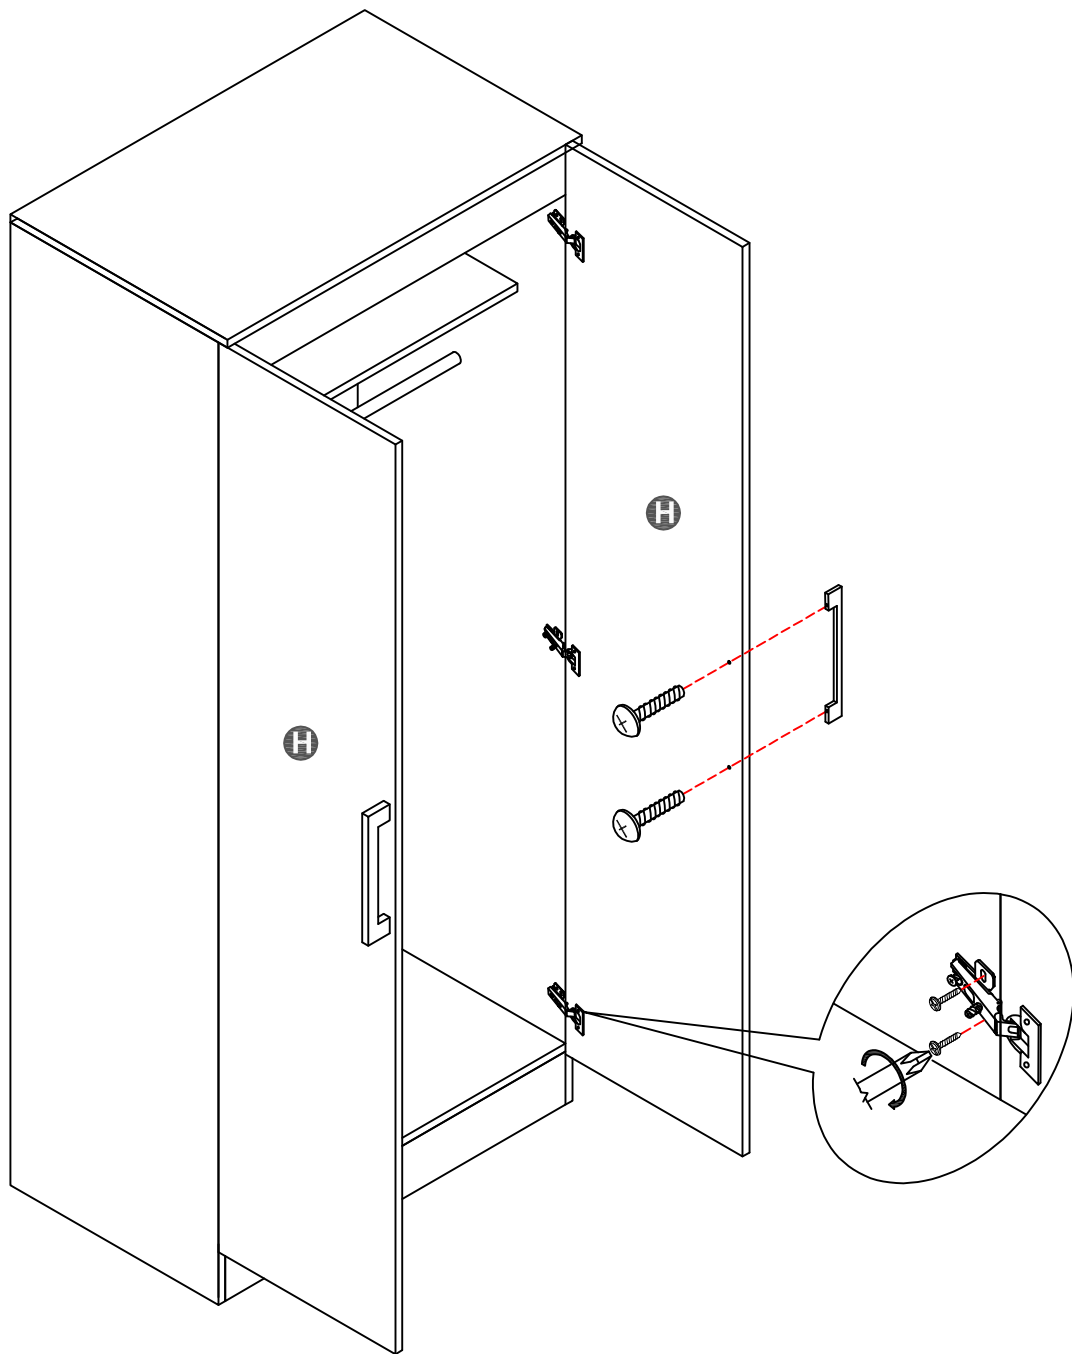

Vertical Adjustment

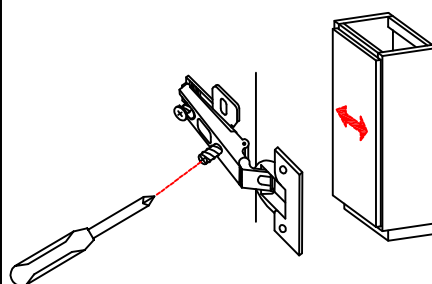


Lateral Adjustment

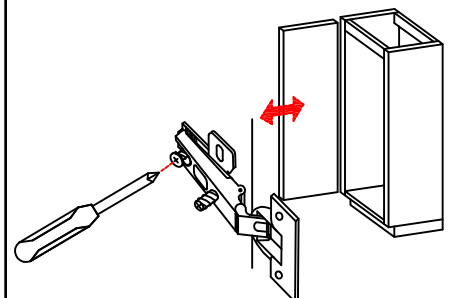


Horizontal Adjustment

FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:
Pull the screw in
the top panel hole
of your furniture

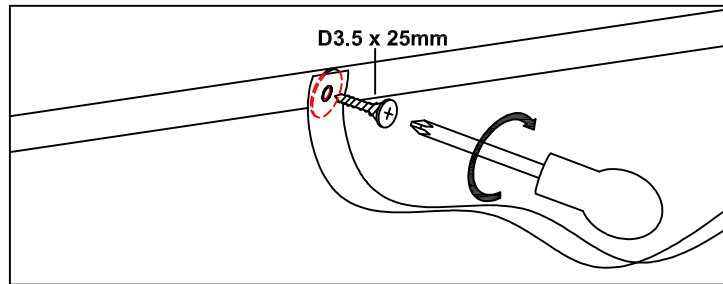

STEP 2:
Make a hole on
the wall and pull
the wall plug in

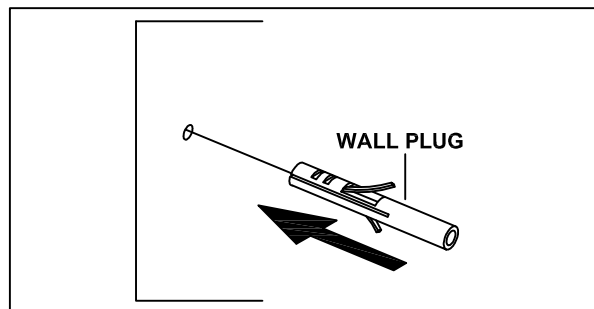

STEP 3:
Pull the screw in
the wall plug hole

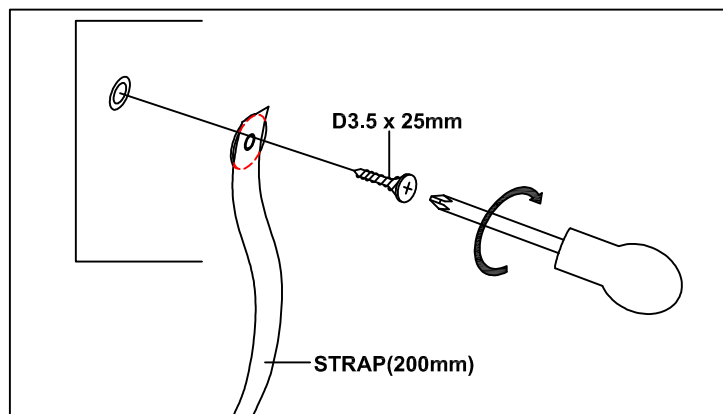

NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The straps and screws which to fix the strap on to the furniture are provided only.

HARDWARE LIST



STRAP(200mm)-1Pc



D3.5 x 25mm-1Pc