





Assembly Instructions

Please keep for future reference

GREY 3+2 Drawer Chest

CAT NO: OP783

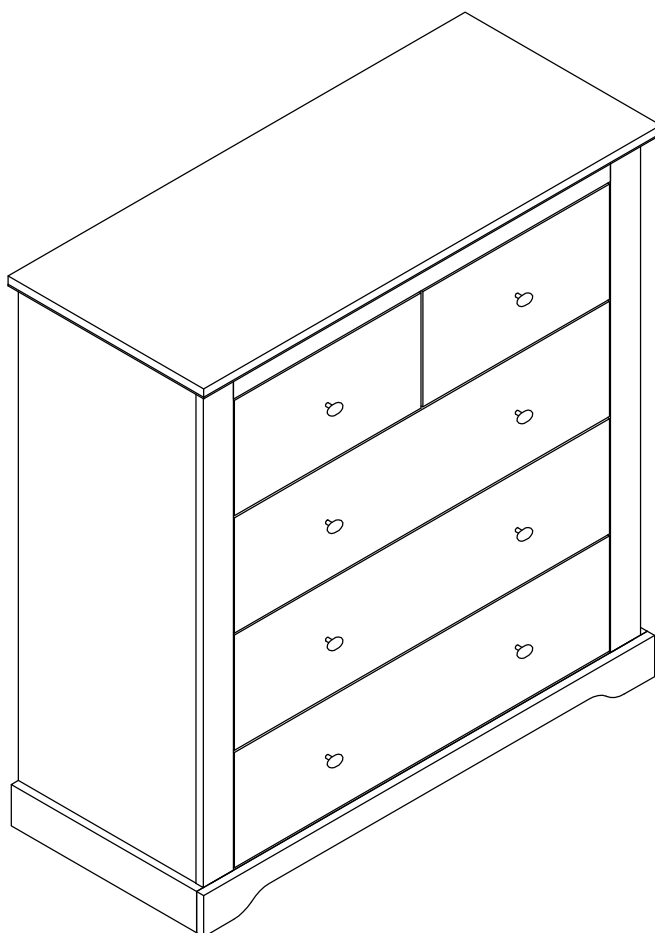


Dimensions	No. people	Assembly Time
Width: 1026mm Depth: 439mm Height: 1072mm		3 hrs

Important - Please read these instructions fully before starting assembly

If you need help damaged or missing parts, call the JDW Customer Helpline: 0871 231 2000

FSC® certified furniture

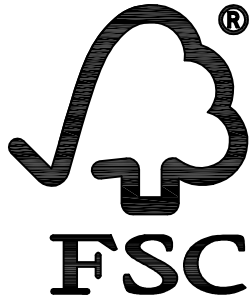

As a raw material for making furniture, wood has no equal - from its vibrancy through its aesthetics to its many design possibilities.

But the wood from which this furniture is made has even more to offer:

The FSC label proves that the wood used comes from forests managed to strict ecological, social and economic standards with lasting effect. This means, for example, that forest biodiversity is maintained and overexploitation does not take place.

Environmental organisations, forest owners, representatives of the wood industry and unions, amongst others, have come together in the FSC to support the responsible management of forests around the world.

Independent certification companies certify the origin of the wood and only award the quality mark if the principles and criteria of the FSC have been met. The tracking of the timber through processing chain from the forest to the market ensures that the seal of the FSC certificate can be trusted.

This represents a step towards the future, because sustainable management of our forests secures their long-term preservation, biodiversity and thus the quality of life for the generations of today and of tomorrow.

Your product development team

Dear customer,

Thank you for your order!

No matter if you bought a piece of furniture made from natural wood, a high-gloss front or a plastic front - every piece of furniture has unique characteristics.

This page provides some care tips for your piece of furniture so that you can enjoy it for a long time.

The following applies in general:

- Don't place any hot objects on the furniture.
- Don't place candles directly on the furniture.
- Immediately wipe off any spilled liquids.
- Regularly check if the screws and fittings are tight.
- Keep these notes in a safe place.

Care notes for furniture made of panel materials

We recommend using a soft, lint-free cloth or a shammy for conditioning your piece of furniture made of panel materials. Wipe off the surfaces with a slightly damp cloth or shammy.

The following applies in general:

Please don't use the following detergents or cleaning agents at all:

- **microfibre cloths or dirt erasers.** They often contain fine abrasive particles which can cause scratches on the surfaces;
- **aggressive chemical substances as well as abrasive cleaning agents or solvents.** They may damage the surfaces too;
- **scouring powder, steel wool or scouring pads.** They destroy the surface so badly that reconditioning is impossible;
- **vacuum cleaners.** The nozzles and brushes can cause scratches on the surfaces;
- **steam cleaners.** The surfaces may be damaged or separated from the ground due to the high pressure and heat of the water vapour.


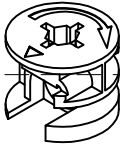
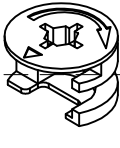
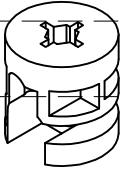


Your product development team








PART LIST





NO.	PARTS LIST	DIMENSIONS	QTY
(1)	LEFT SIDE PANEL	1056x400x16	1
(2)	RIGHT SIDE PANEL	1056x400x16	1
(3)	DRAWER LEFT PANEL	350x150x12	5
(4)	DRAWER RIGHT PANEL	350x150x12	5
(5)	DRAWER BACK PANEL	366x150x12	2
(6)	DRAWER BACK PANEL	797x150x12	3
(7)	LEFT SIDE PANEL	416x80x16	1
(8)	RIGHT SIDE PANEL	416x80x16	1
(9)	FRONT PANEL	1012x80x16	1
(10)	TOP FRONT PANEL	846x60x16	1
(11)	MIDDLE FRONT PANEL	948x50x16	1
(12)	FRONT SIDE PANEL	976x68x16	2
(13)	FRONT DRAWER PANEL	419x224x16	1
(14)	FRONT DRAWER PANEL	419x224x16	1
(15)	FRONT DRAWER PANEL	842x224x16	3
(16)	BACK PANEL	948x80x16	1
(17)	MIDDLE DIVIDER PANEL	282x372x16	1
(18)	TOP PANNEL	1026x439x38	1
(19)	BACK PANEL	1060x478x3	1
(20)	BACK PANEL	1060x478x3	1
(21)	DRAWER BOTTOM	376x347x3	2
(22)	DRAWER BOTTOM	807x347x3	3
(23)	SIDE PANEL	756x51x30	4
(24)	LATH	L=1048	1






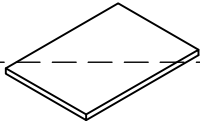


HARDWARE LIST

					
56x	18X 15x12mm	30x 15x10mm	8x 15x16mm	24x 8x35mm	8x
A	B	C	D	E	F
CAM BOLT	CAM LOCK	CAM LOCK	CAM LOCK	DOWEL	HANDLE

						
8x M4x22mm	22x	26x 3x20mm	1x	2x 3.5x16mm	1x 4.5x45mm	20x 7x50mm
G	H	I	J	K	L	M
BOLT	HOLDER	SCREW	ANGLE BRACKET	SCREW	SCREW	CONFIRMAT

	SLIDE B ATTACH TO DRAWER BASE				
					
FRONT 	BACK SLIDE A ATTACH TO CARCASS				
BACK 					FRONT
5x Left / 5x Right					
L=350					
N					
ROLLER RUNER					

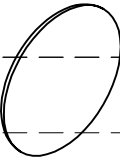					
20x 3x13mm	20x 3.5x13mm	30X D20mm	20X	6X M6x25mm	2x 70x50mm
O	P	Q	R	S	T
SCREW	SCREW	CAM LOCK COVER	SLEEVE	BOLT	FELT PAD

TOP TIPS BEFORE YOU START!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

Care and Maintenance of your Furniture

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on this item.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.






Please do not drag and pull your furniture.

STEP 1

10x
A
CAM BOLT

8x
15x12mm
B
CAM LOCK




8x
8x35mm
E
DOWEL

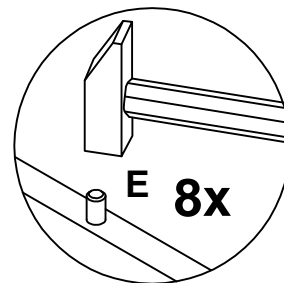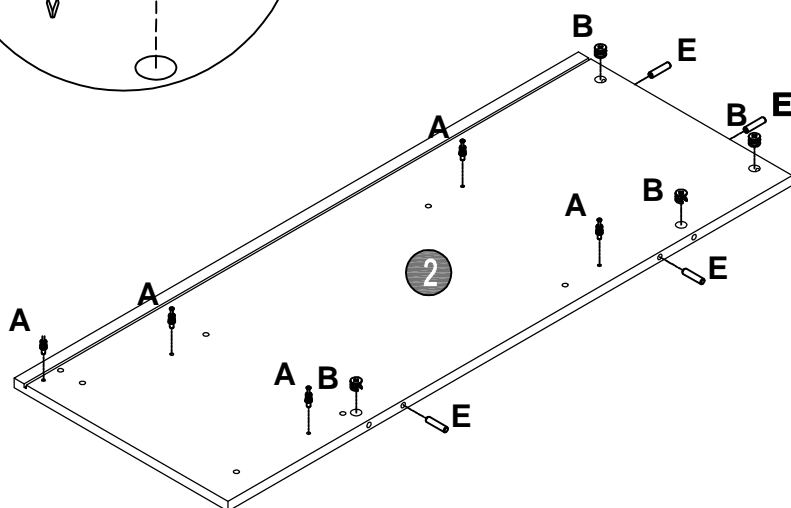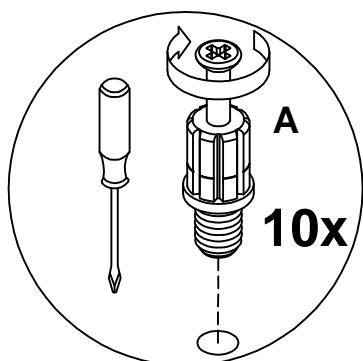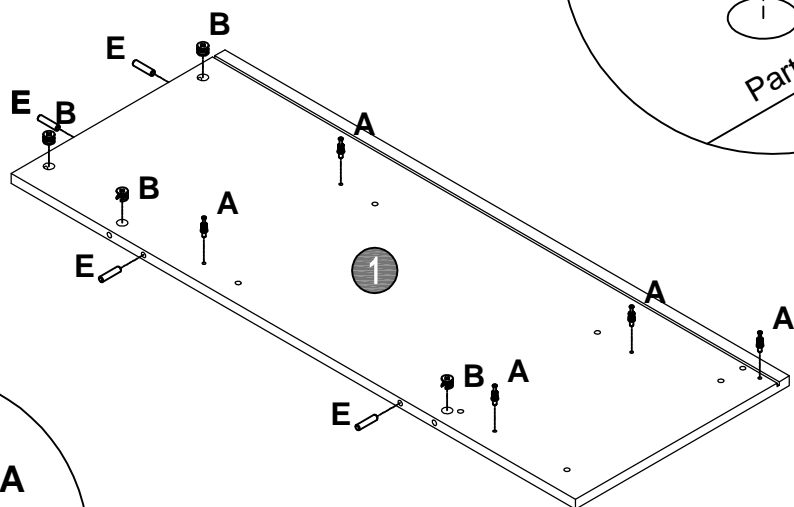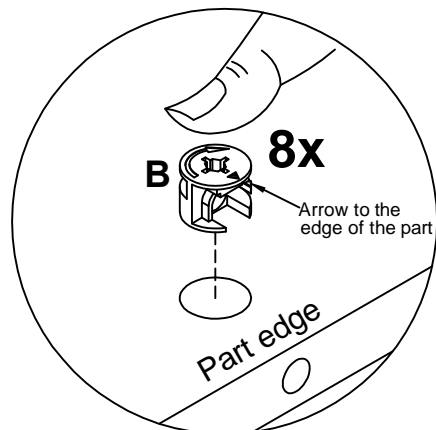

STEP 2



2x
15x12mm
B
CAM LOCK

2x
8x35mm
E
DOWEL

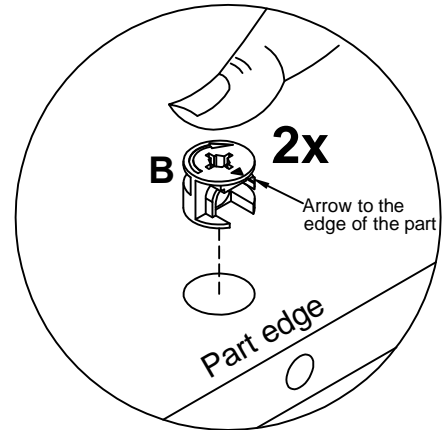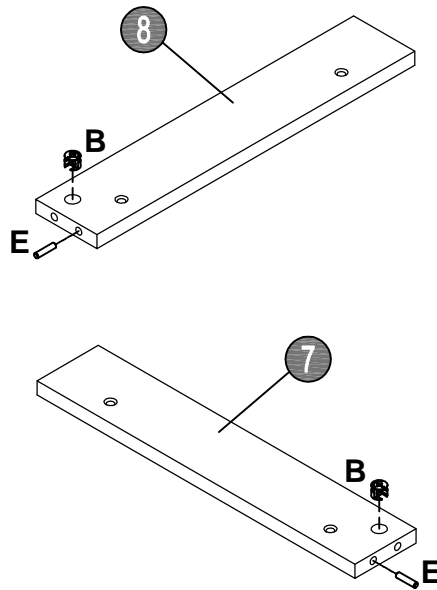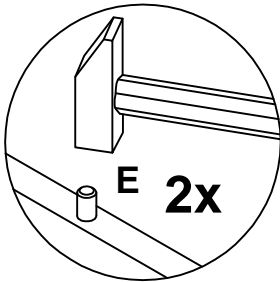



STEP 3

2x
A
CAM BOLT

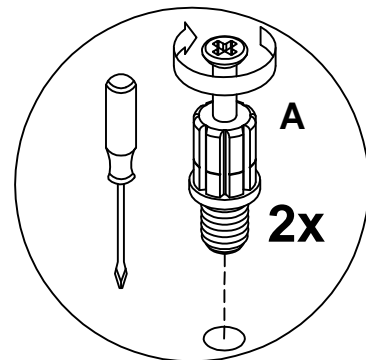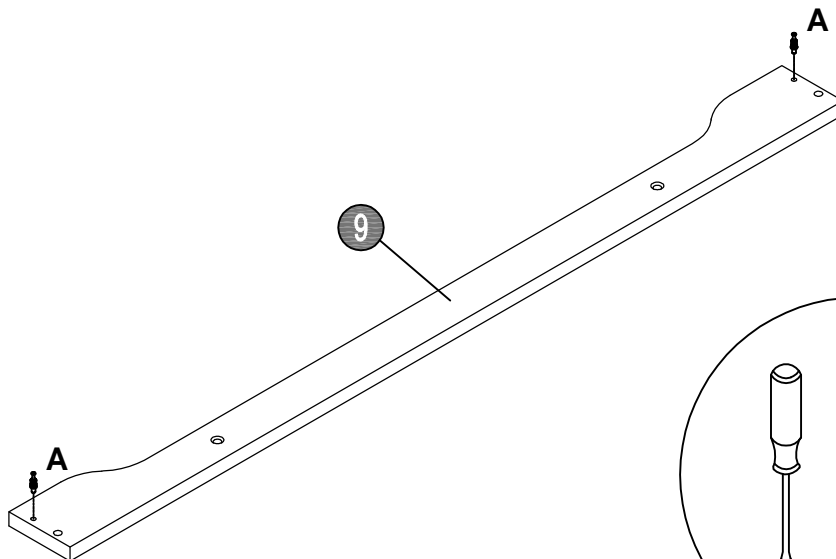

STEP 4



4x
15x12mm
B
CAM LOCK

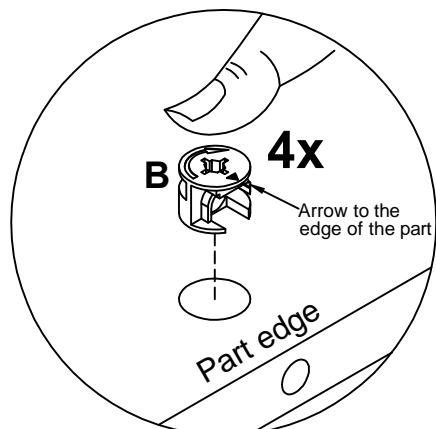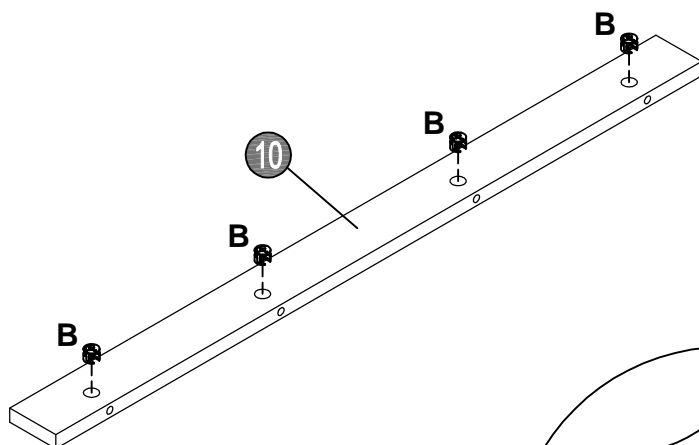





STEP 5 x2

4x
A
CAM BOLT



2x
8x35mm
E
DOWEL

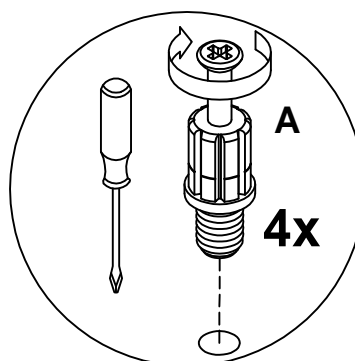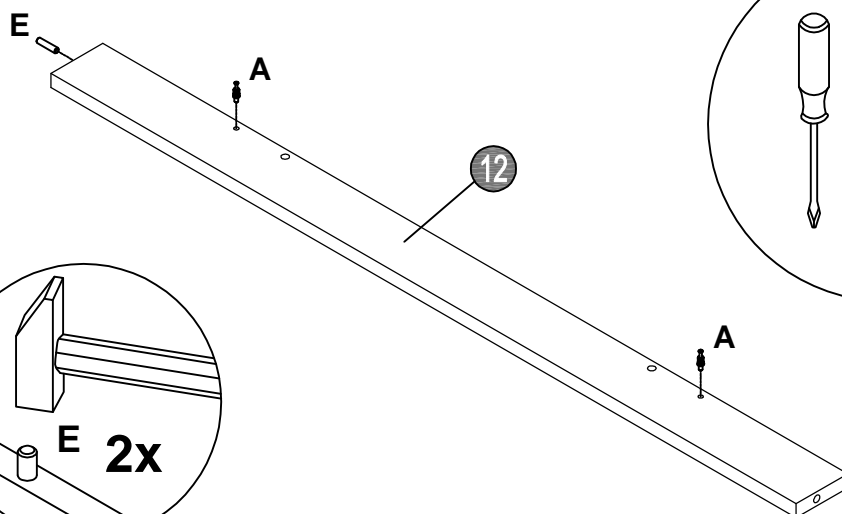










STEP 6

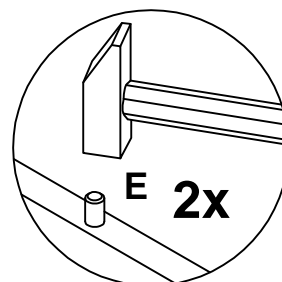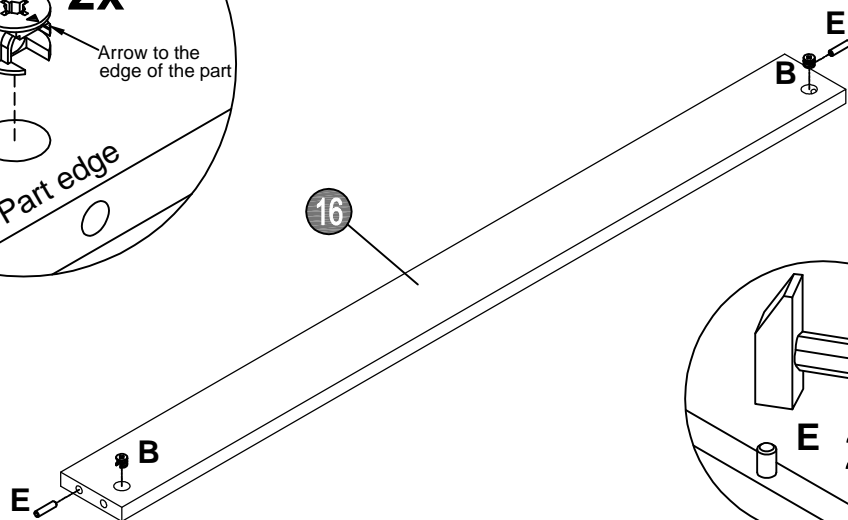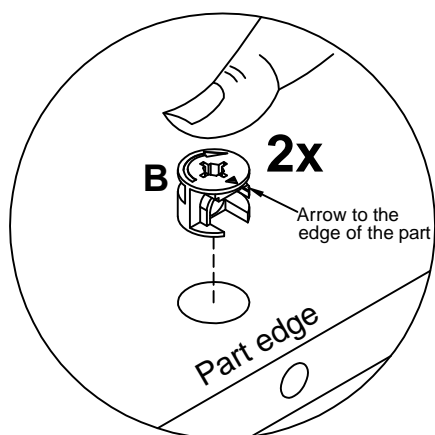




STEP 7

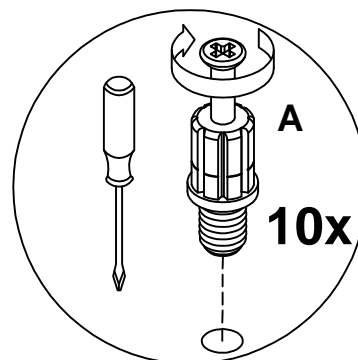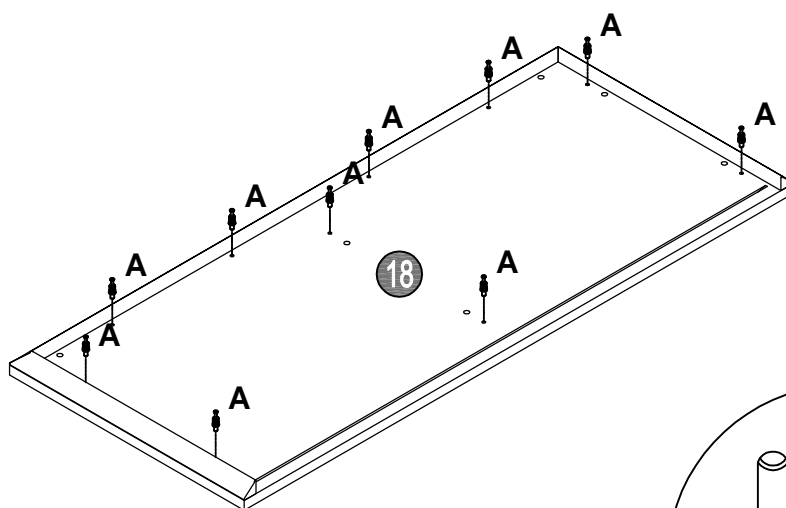




STEP 8

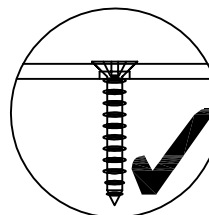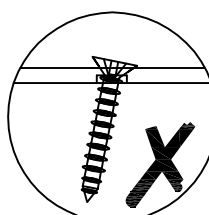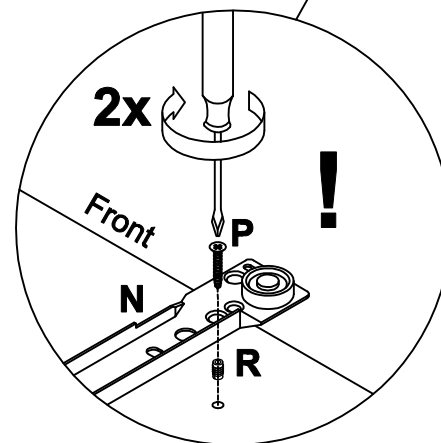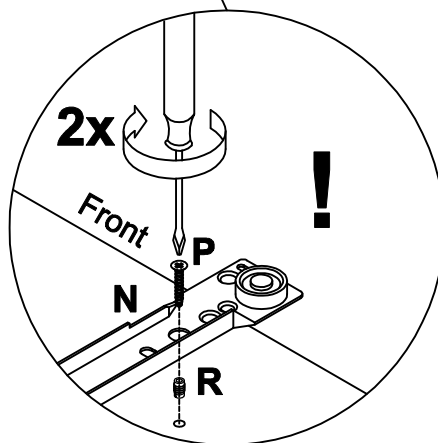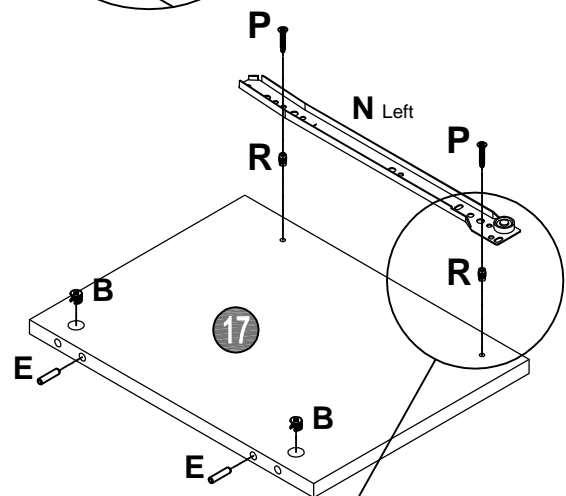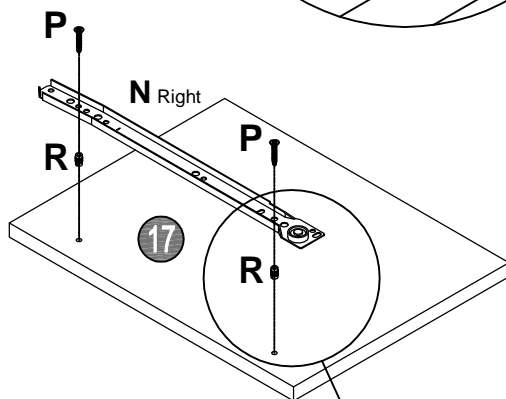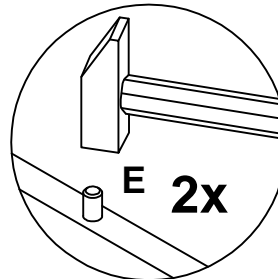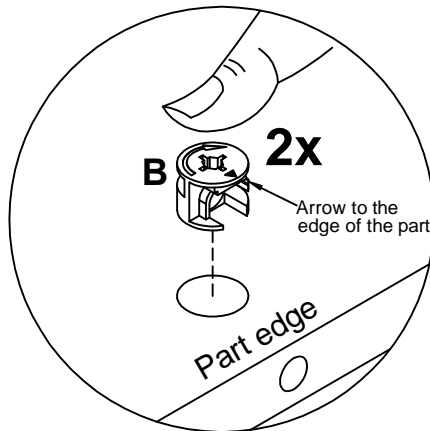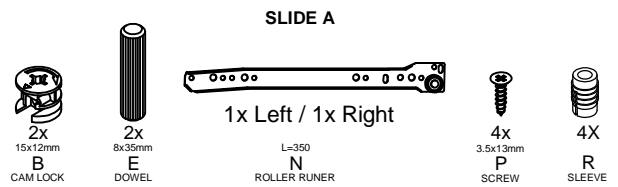


STEP 9 x4

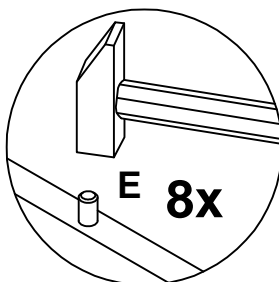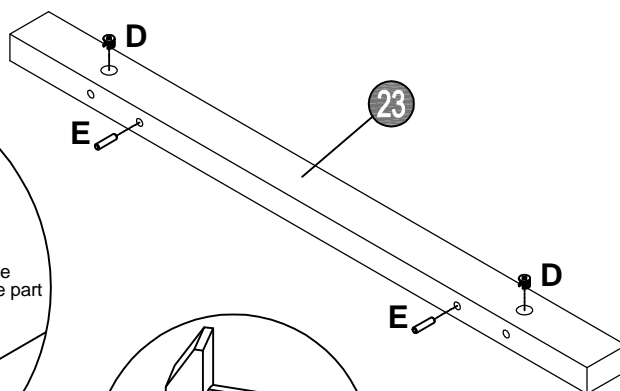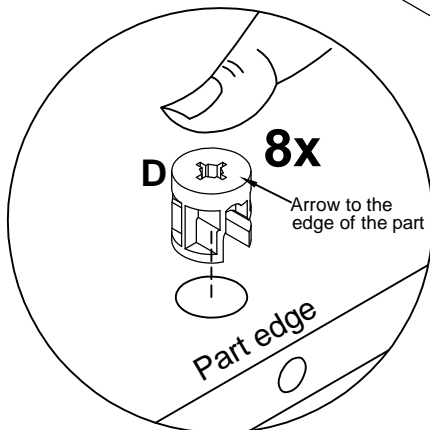


STEP 10

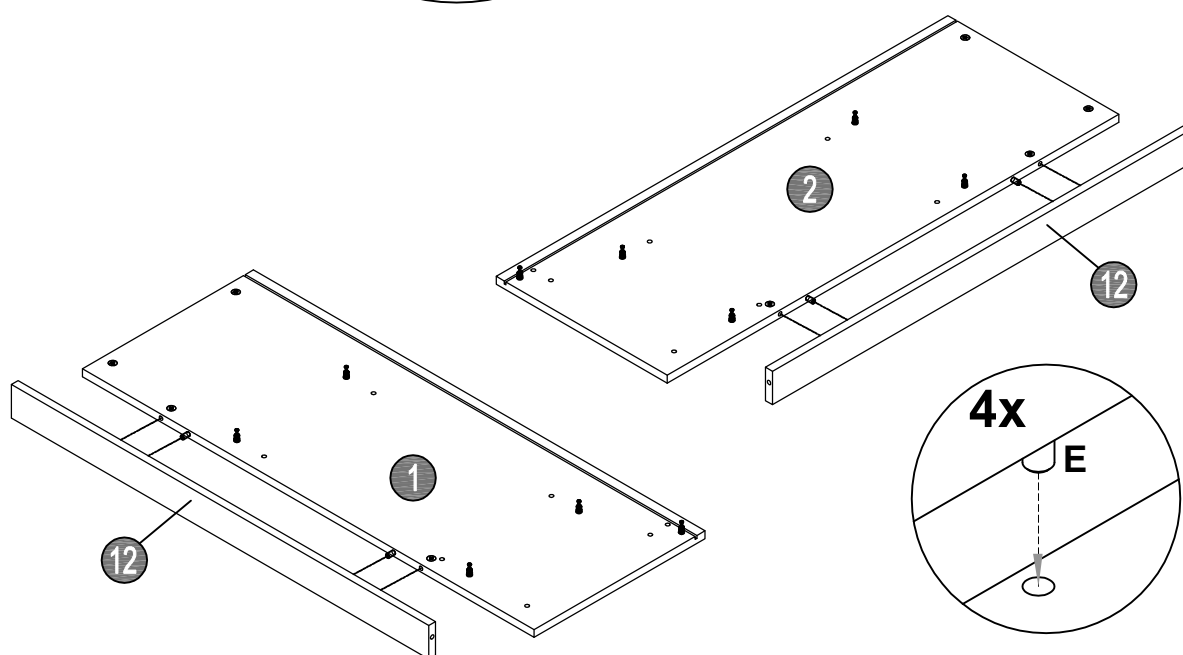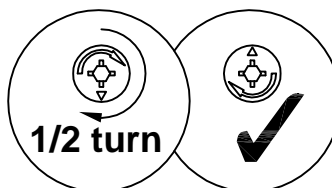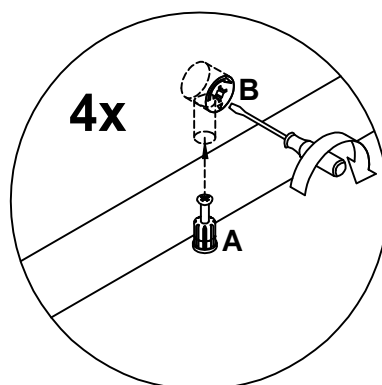


STEP 11

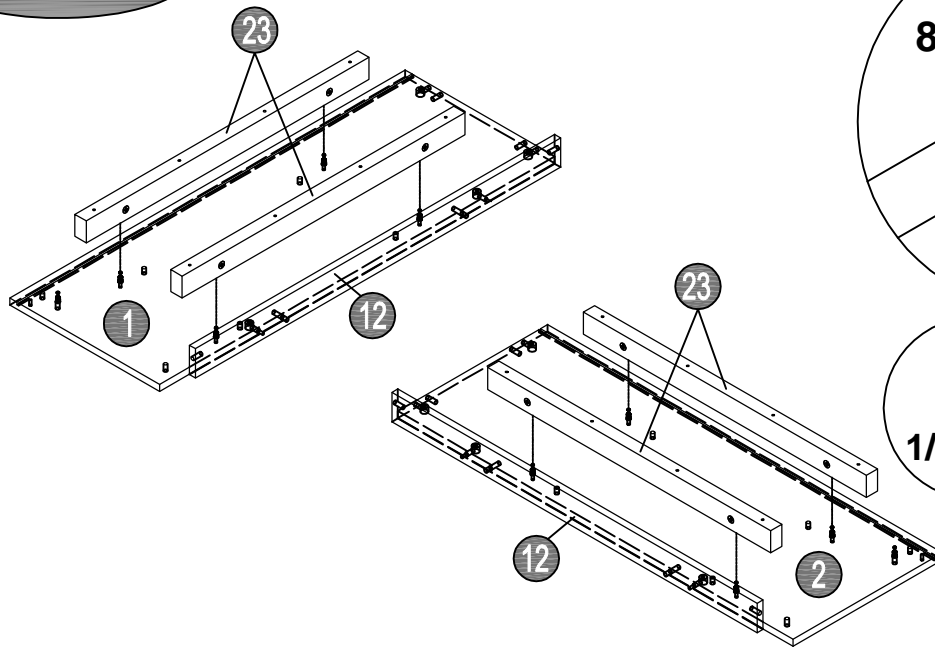

STEP 12

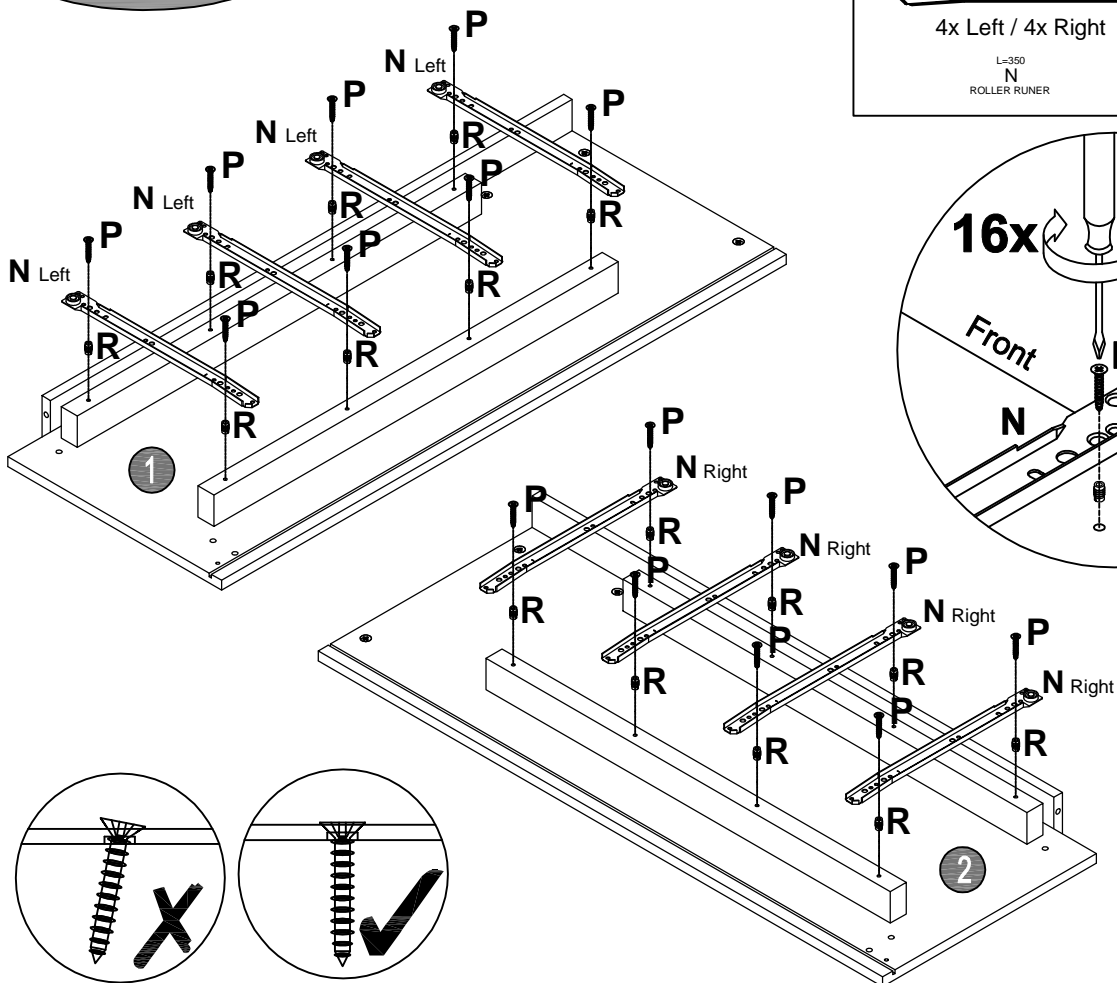

SLIDE A



4x Left / 4x Right


L=350
N
ROLLER RUNNER




16x
3.5x13mm
P
SCREW




16X
R
SLEEVE

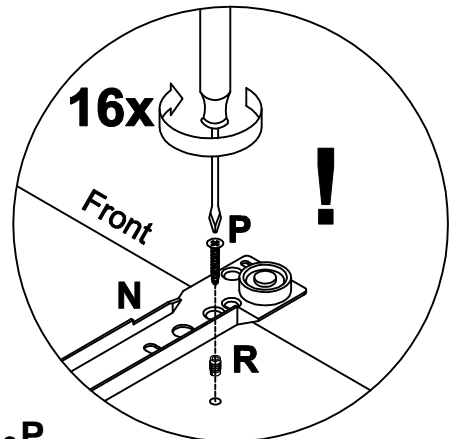



STEP 13

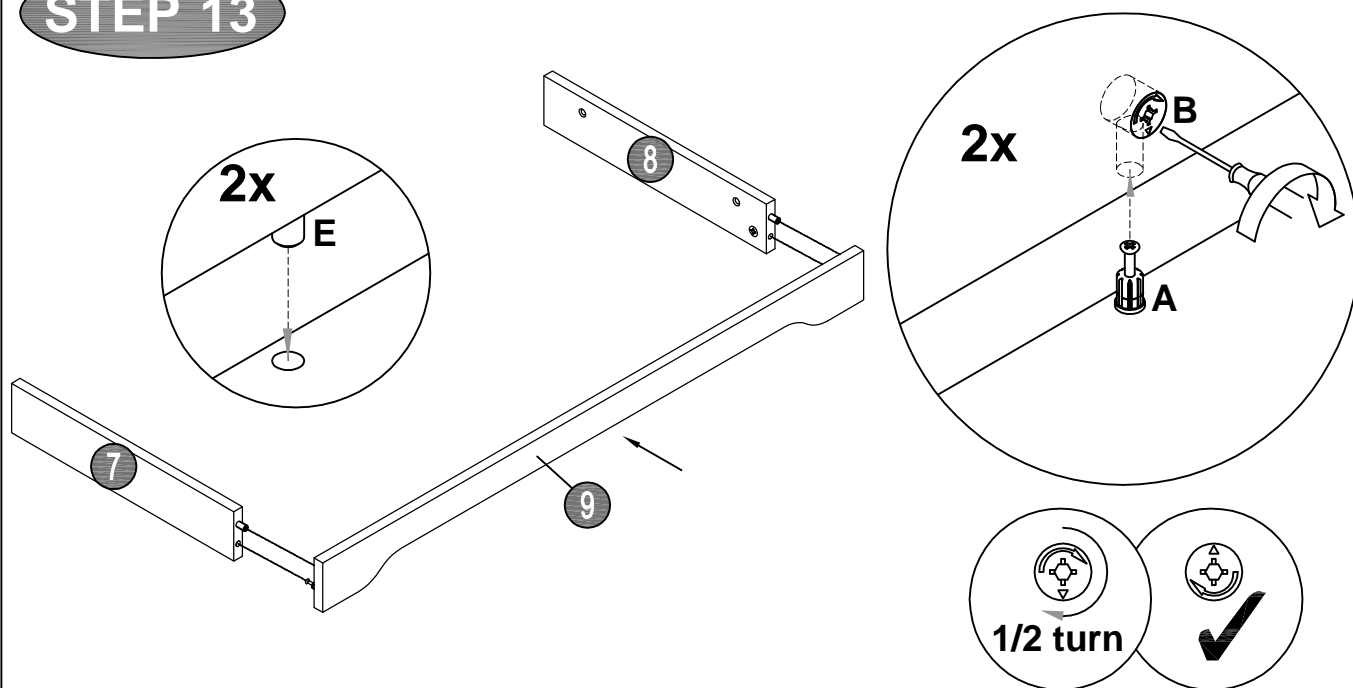


STEP 14

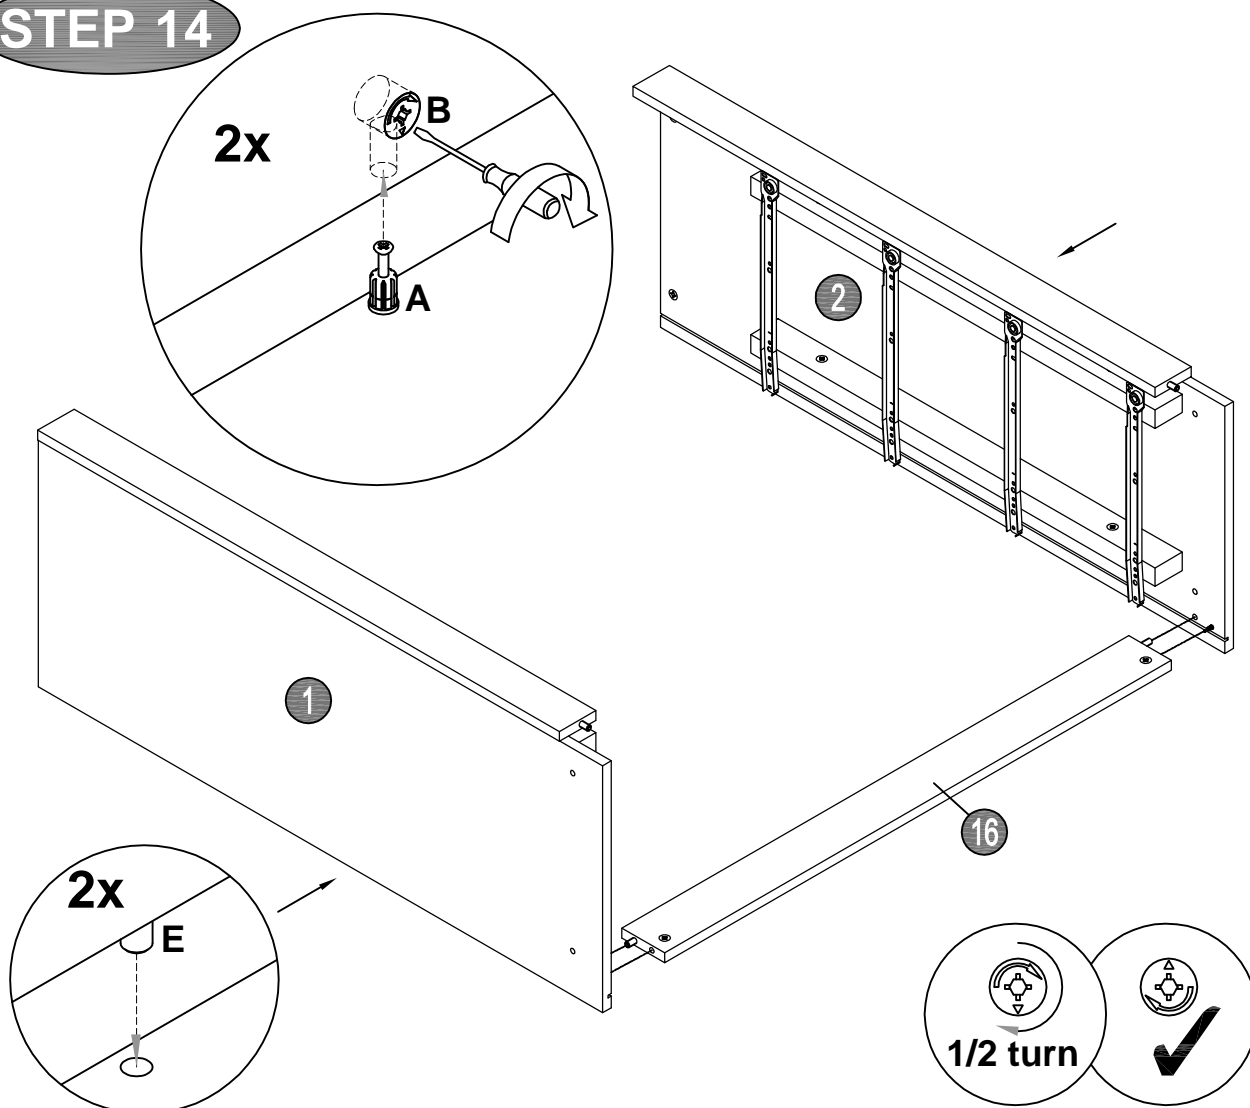

STEP 15

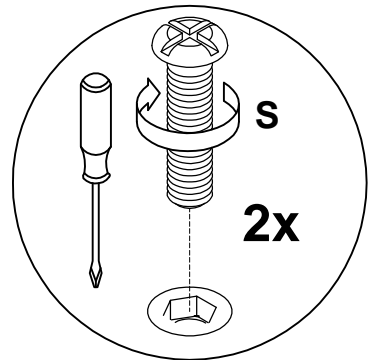
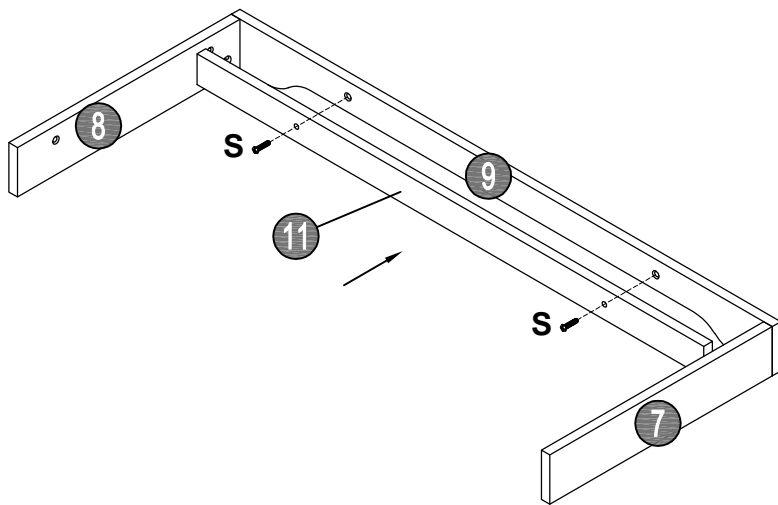


STEP 16

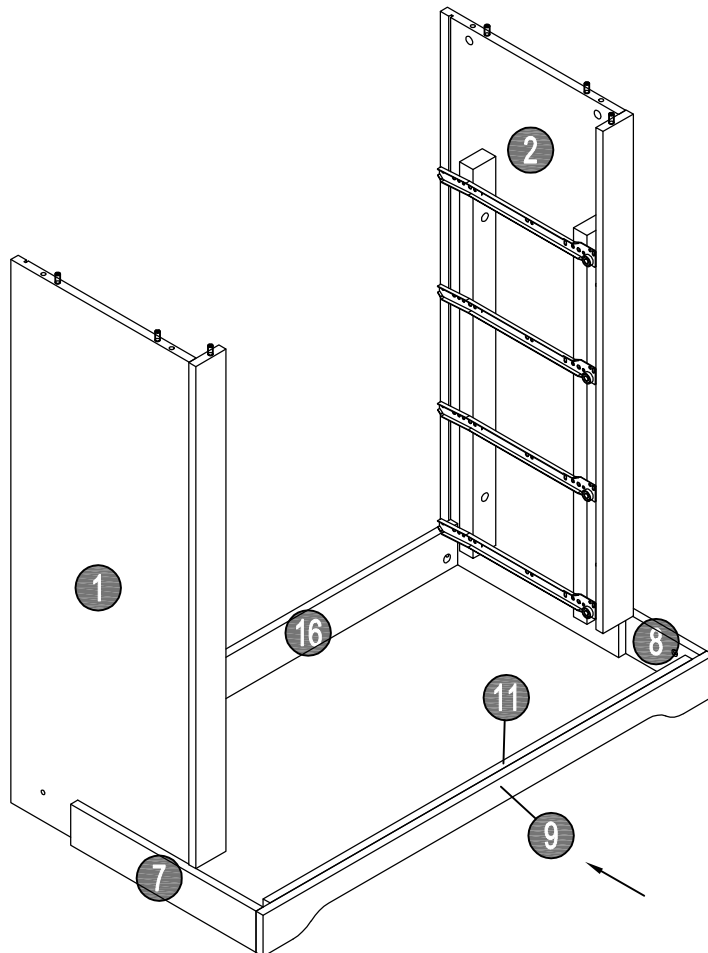


STEP 17


4X
M6x25mm
S
BOLT

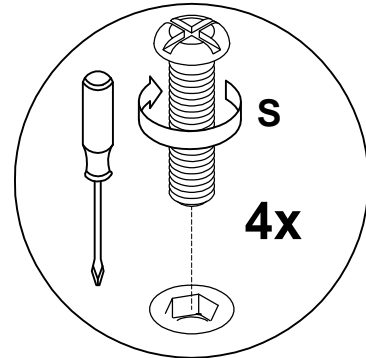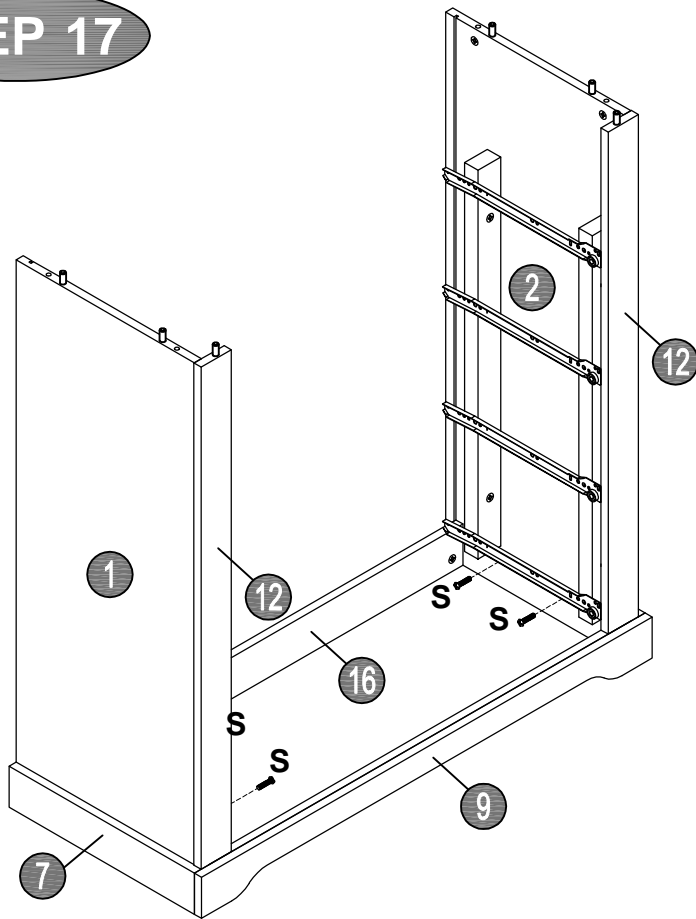


STEP 18

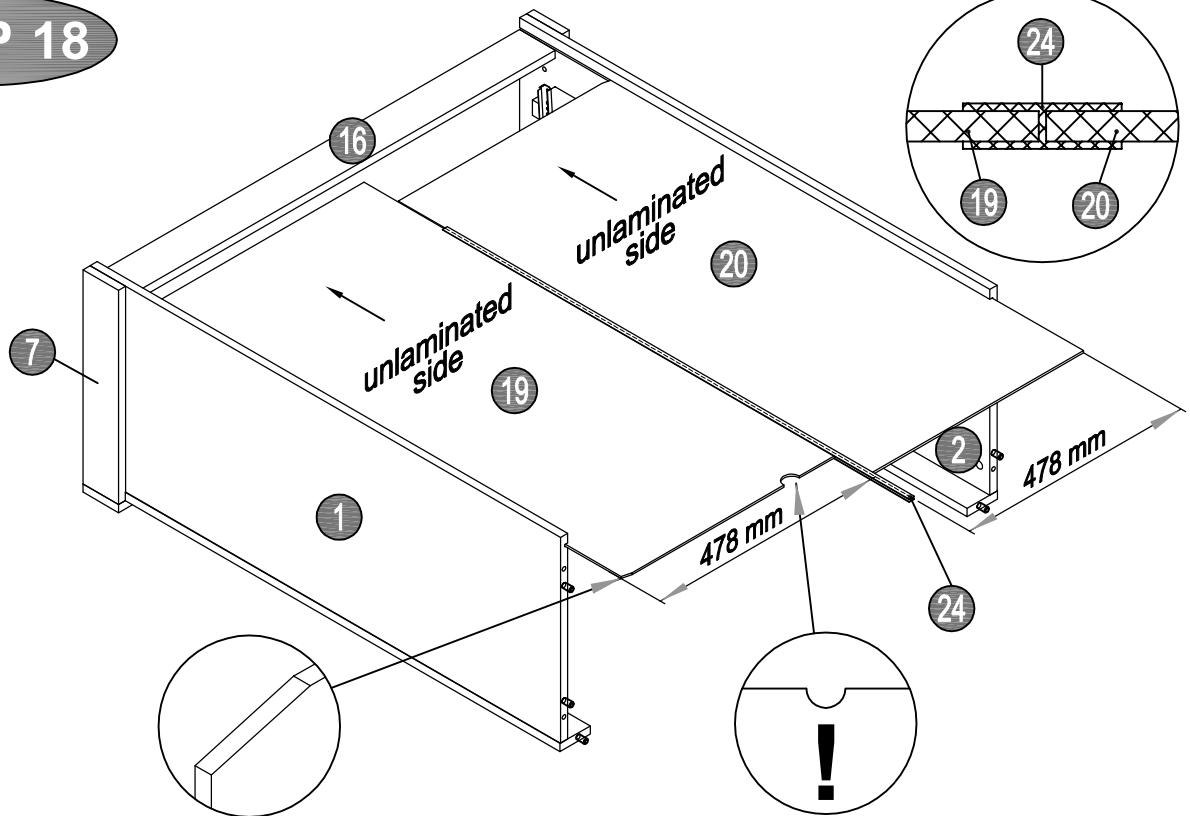

STEP 19

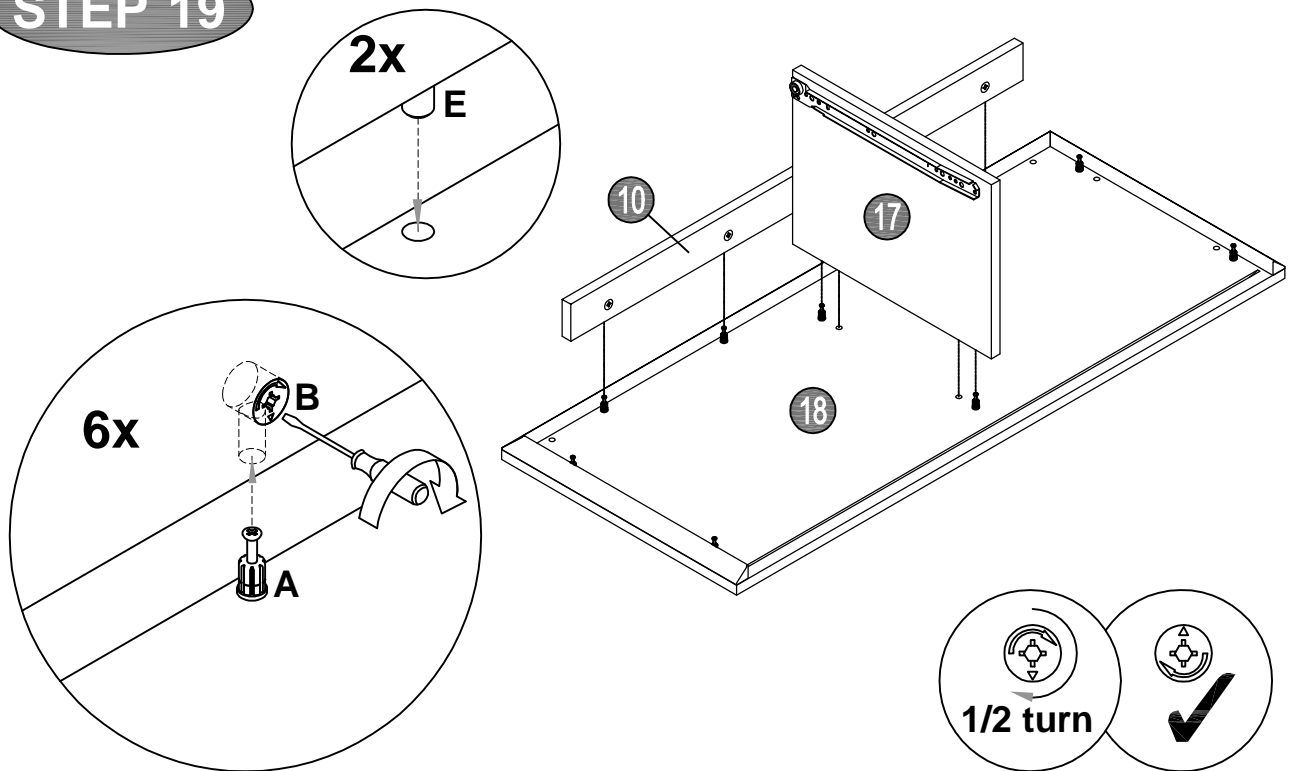

STEP 20

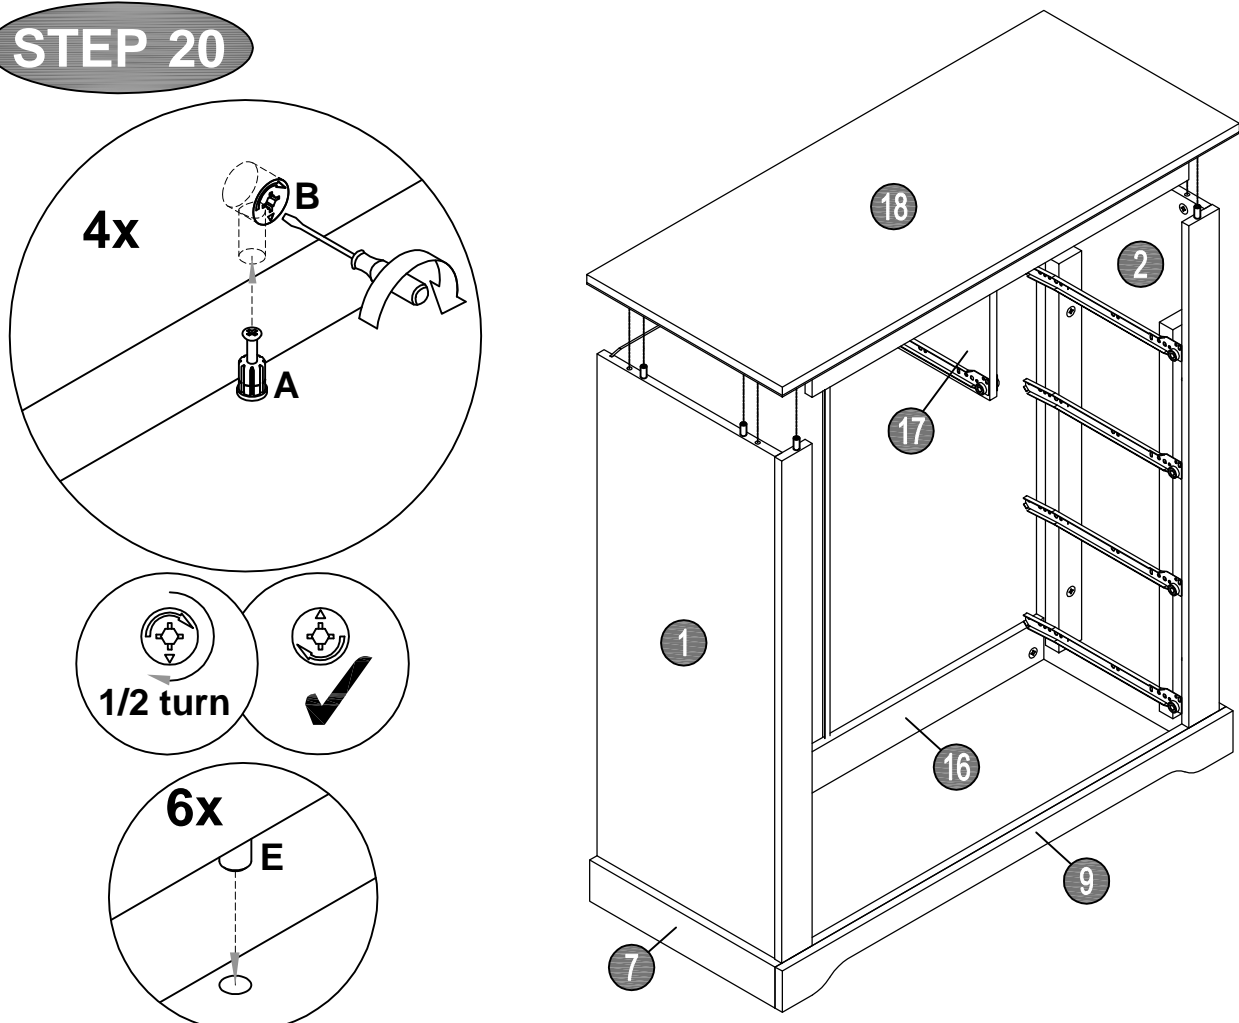

STEP 21

L1=L2




10x

H
HOLDER






14x
3x20mm








I
SCREW



2x
70x50mm
T
Felt pad

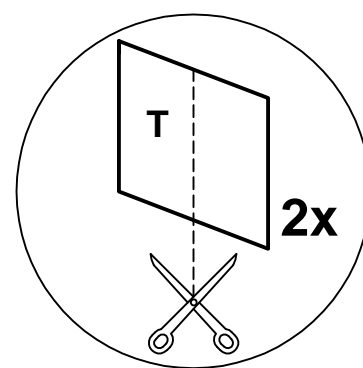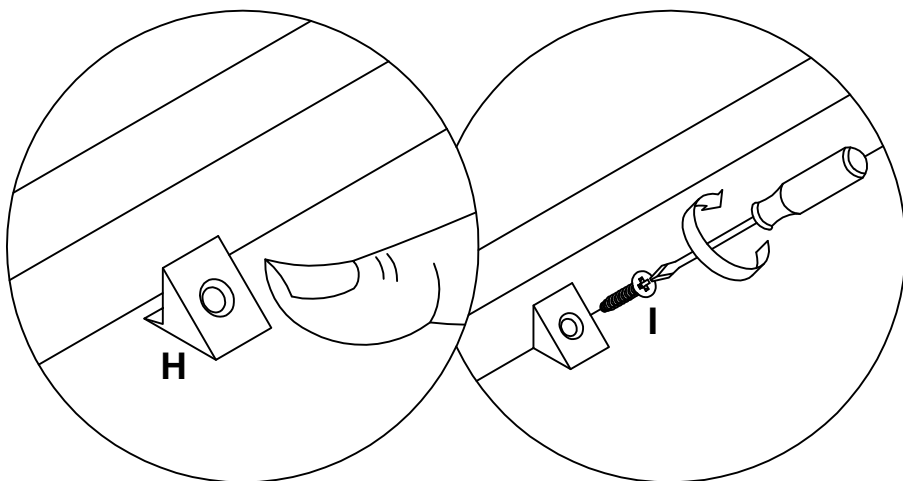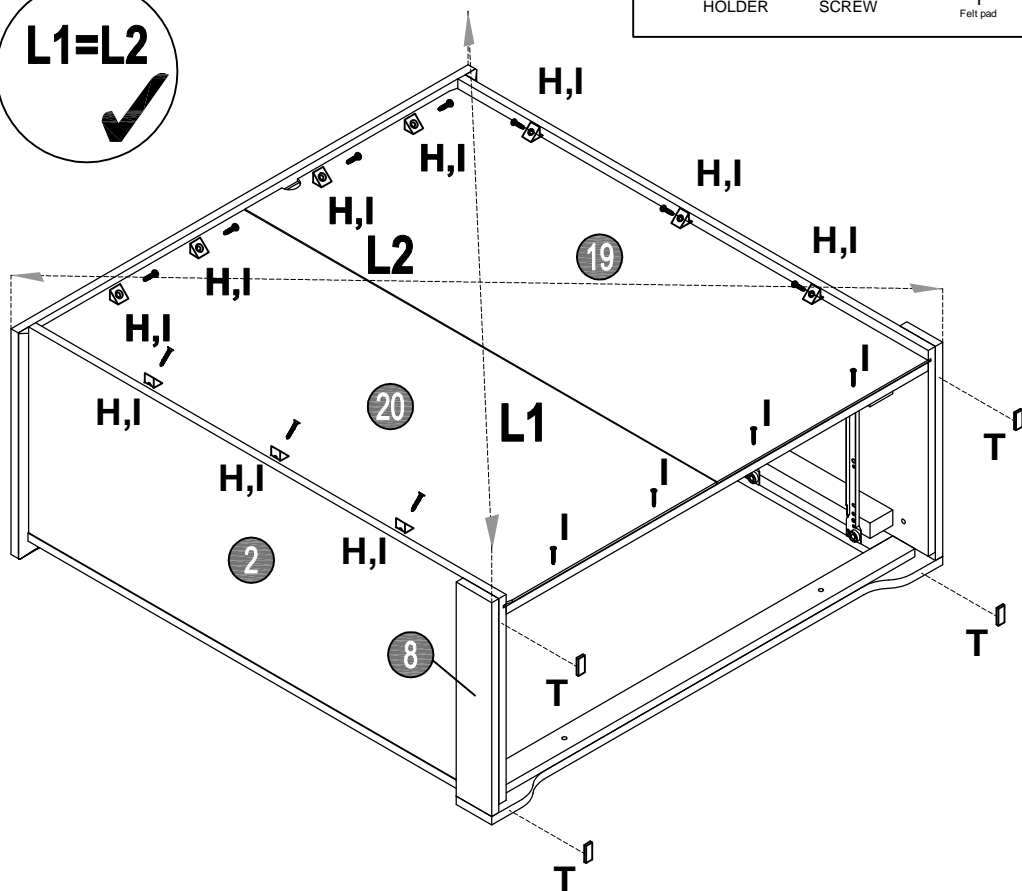


STEP 22

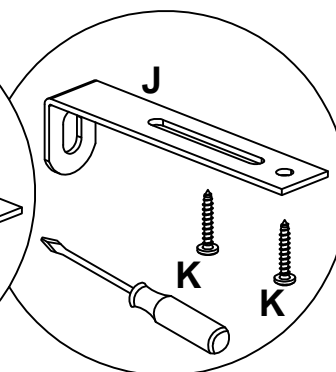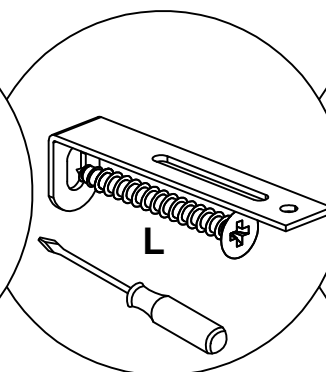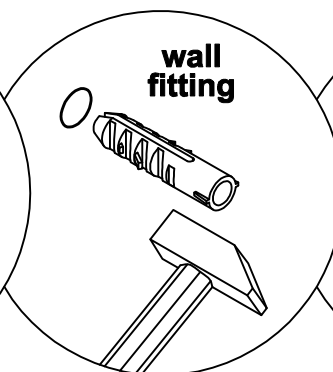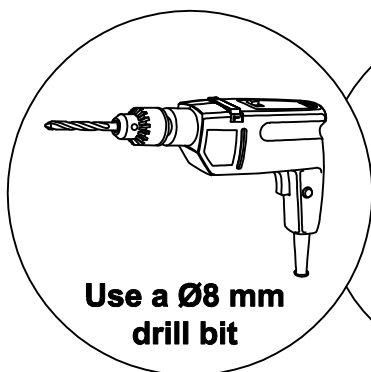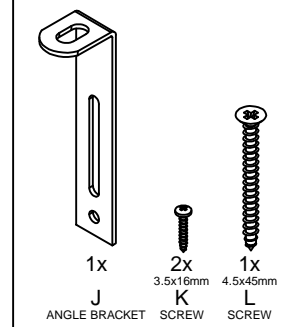
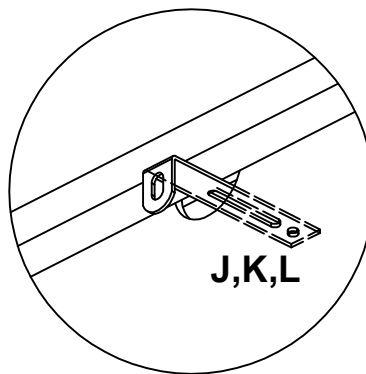
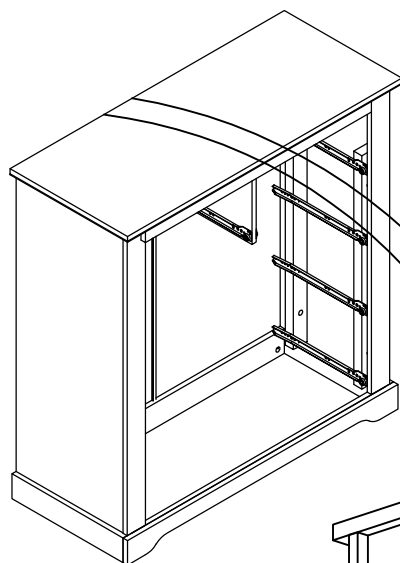


Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs used on brick work). You **must use** fixing devices suitable for the type of wall you intend to mount this product to.





Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

STEP 23 x5




30x
15x10mm
C
CAM LOCK

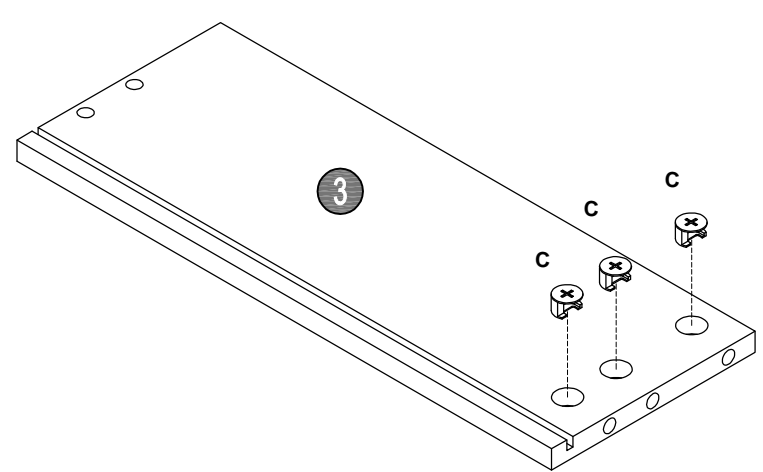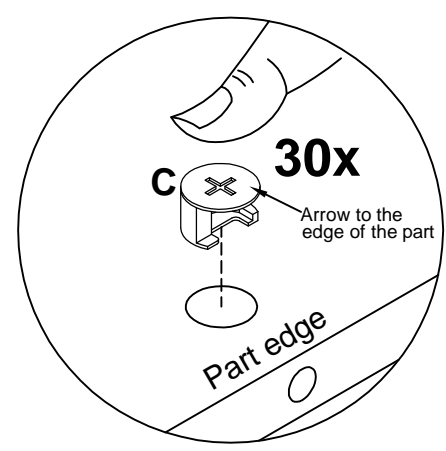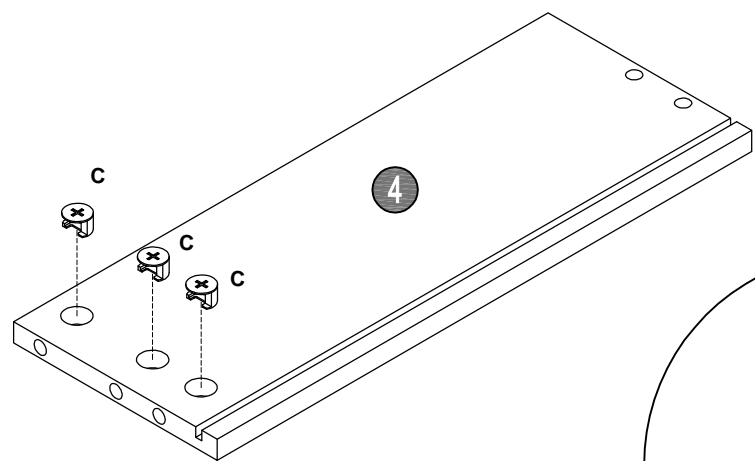



STEP 24

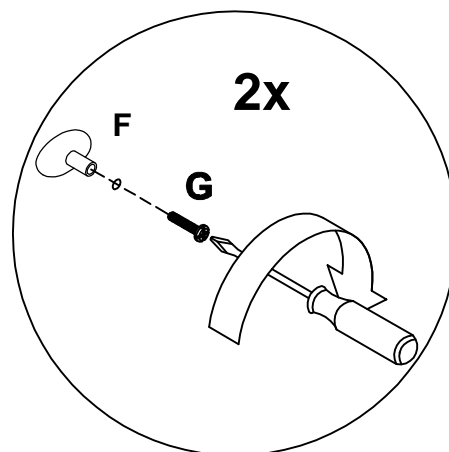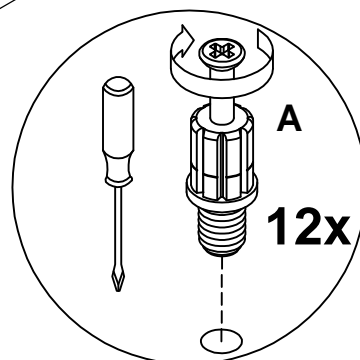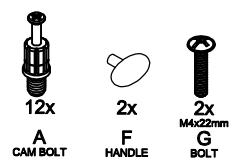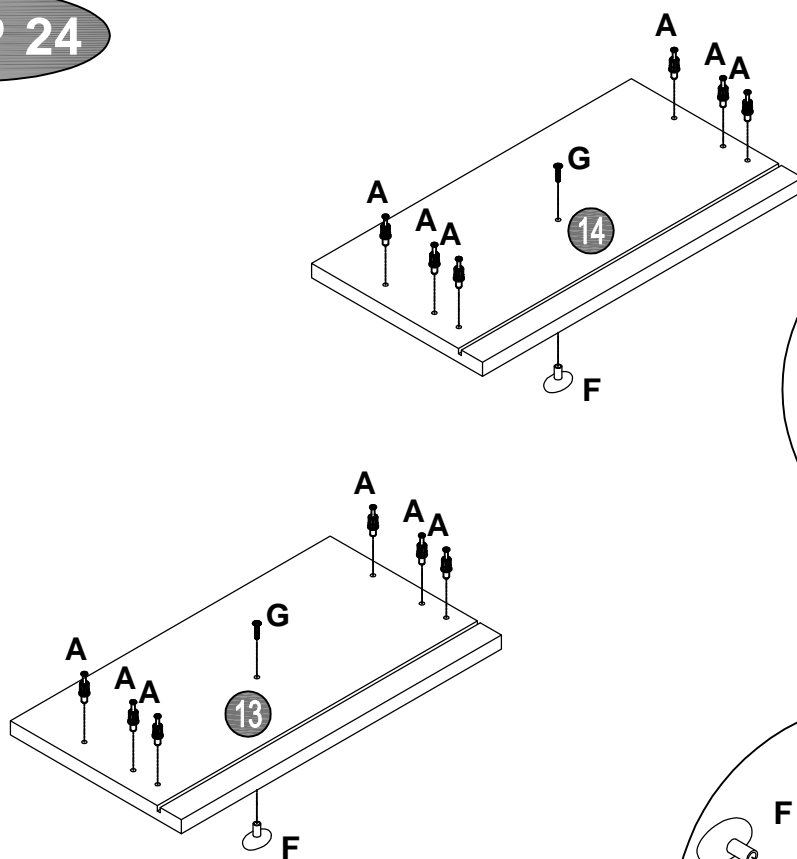


STEP 25 x2

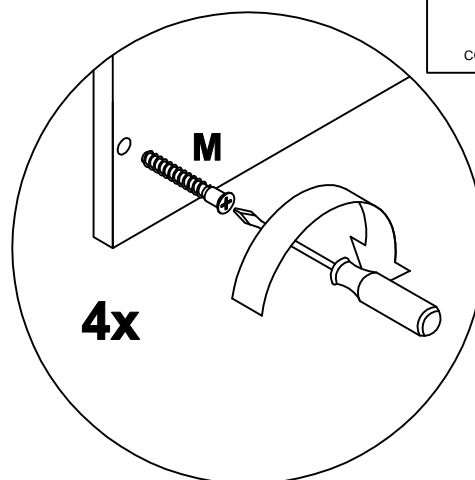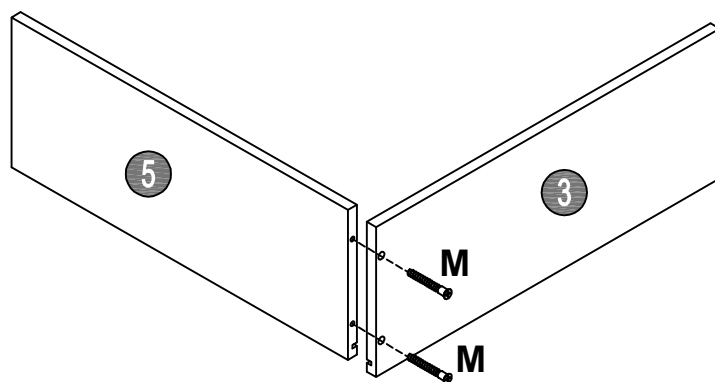


STEP 26 x2

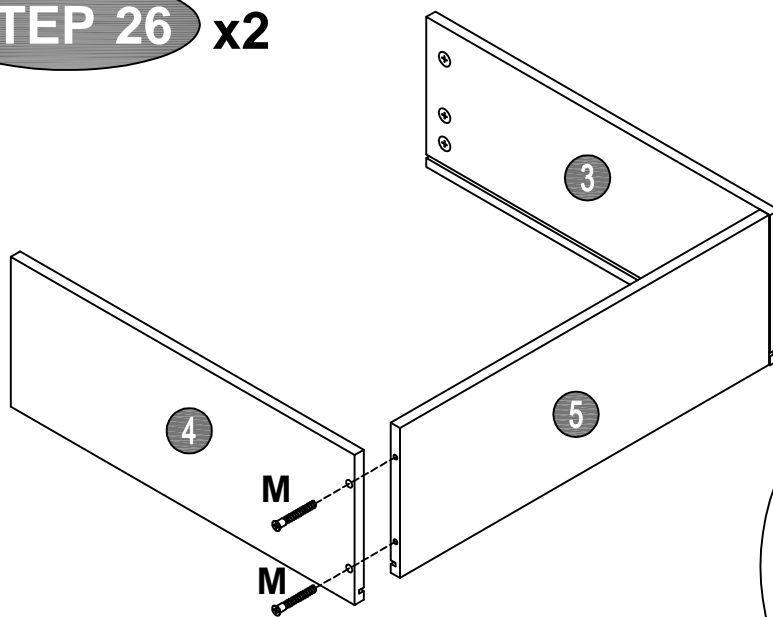





4x
7x50mm
M
CONFIRMAT

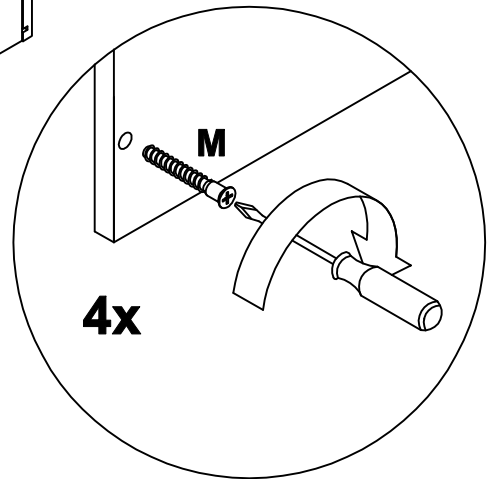


STEP 27 x2



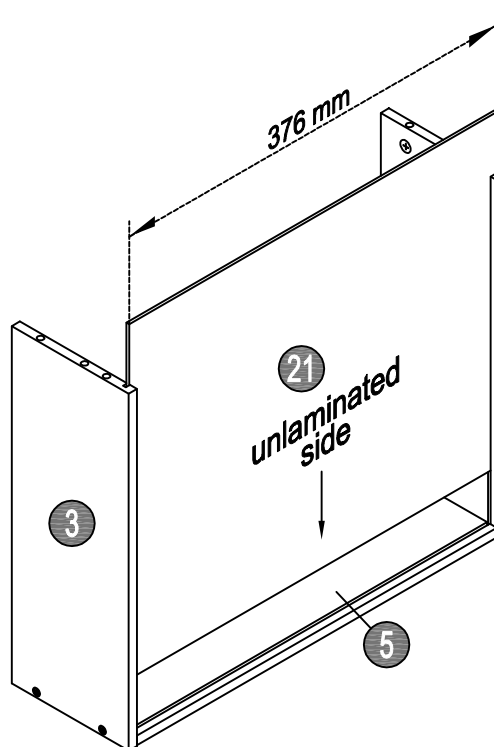


STEP 28

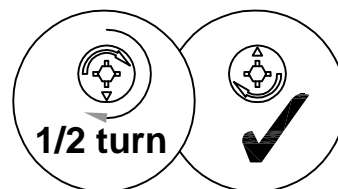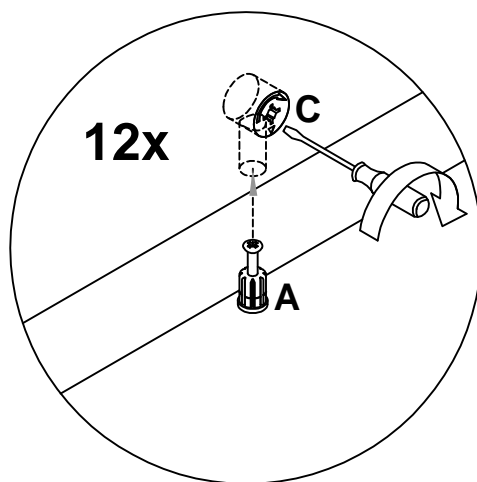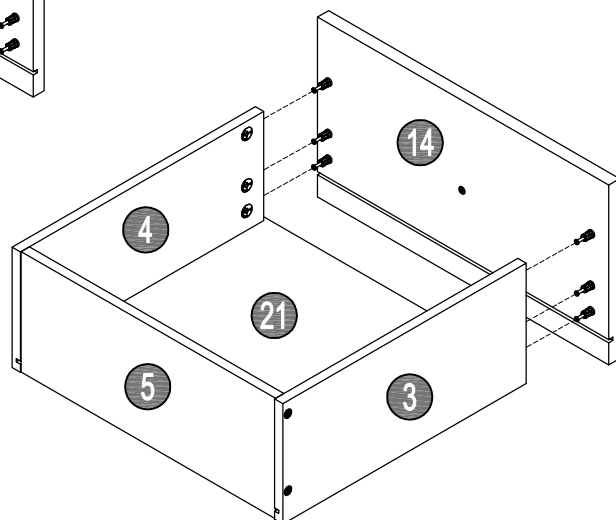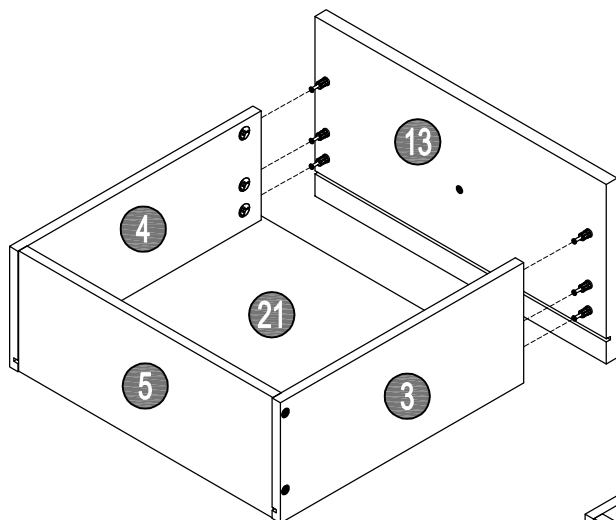

STEP 29


12x
D20mm
Q
CAM LOCK COVER

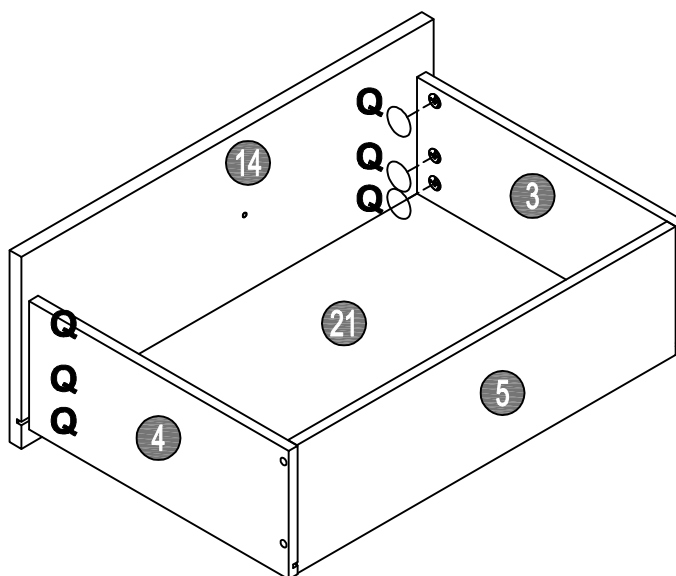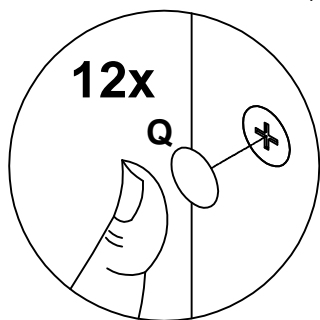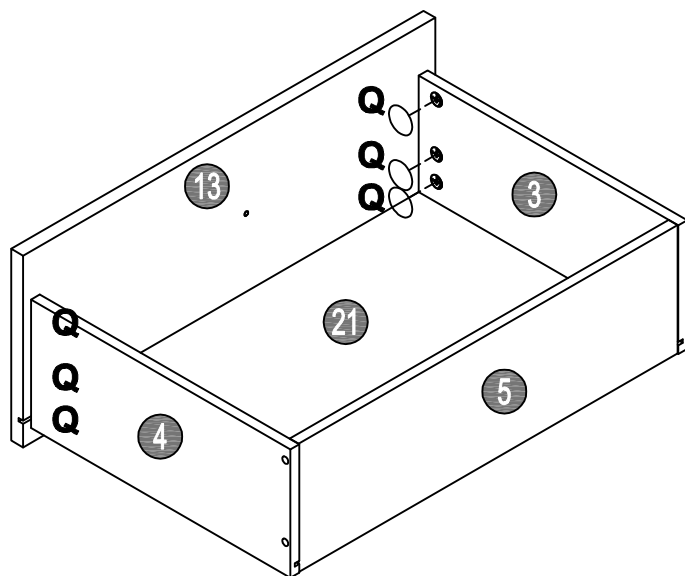






STEP 30

SLIDE B





8x
3x13mm
O
SCREW

2x Left / 2x Right




L=350
N
ROLLER RUNNER

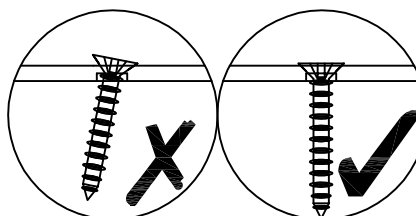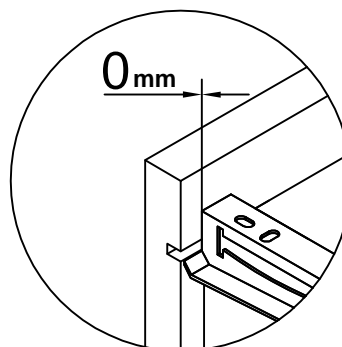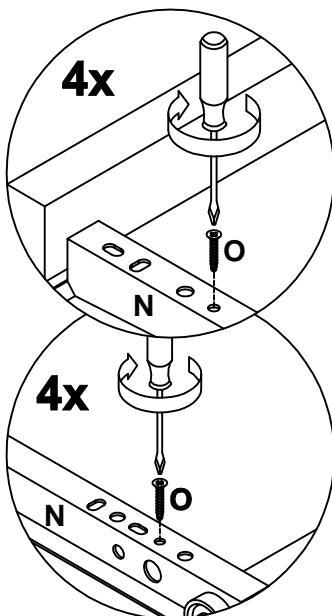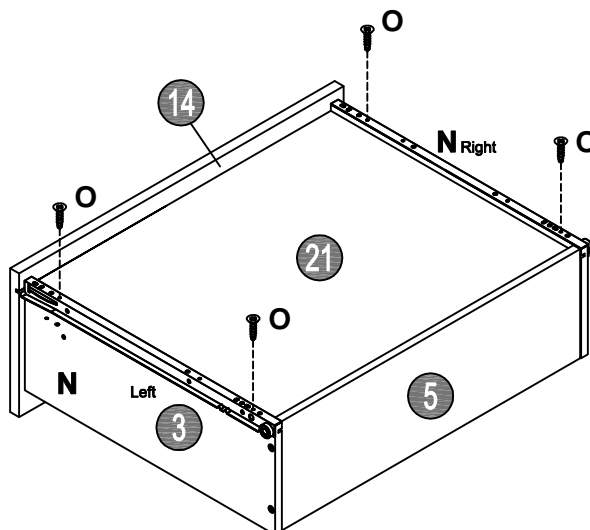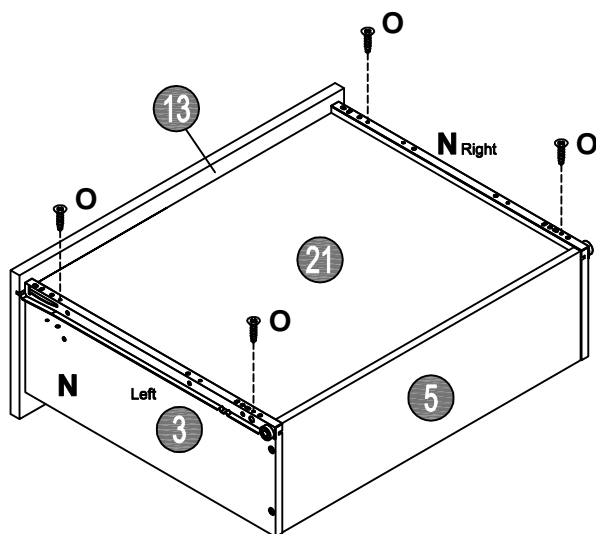


STEP 31 x3

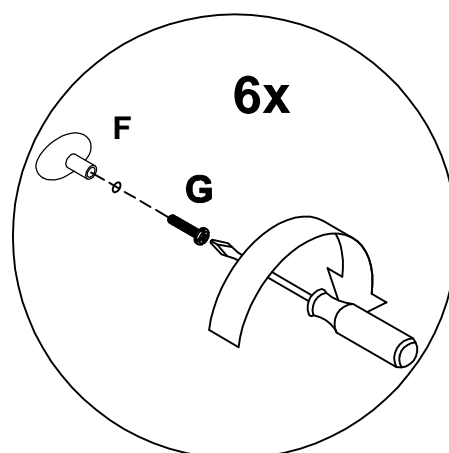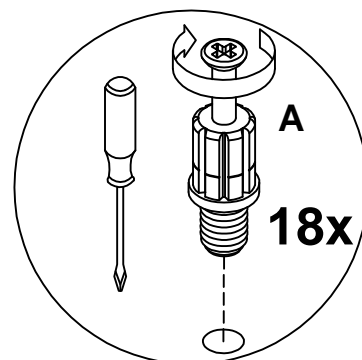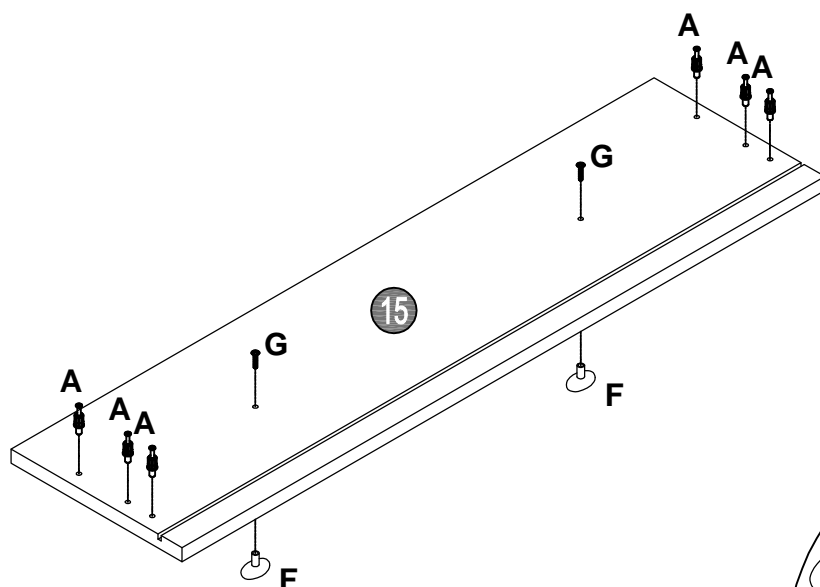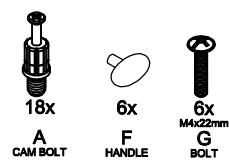


STEP 32 x3

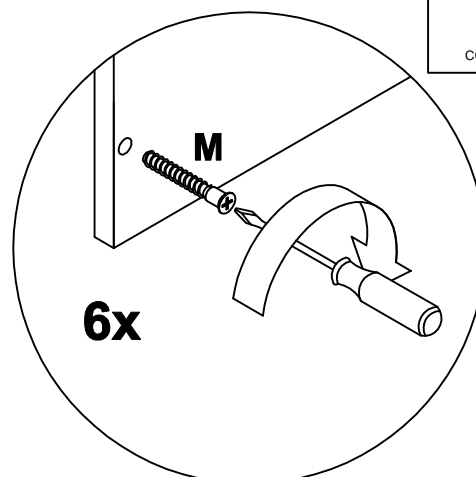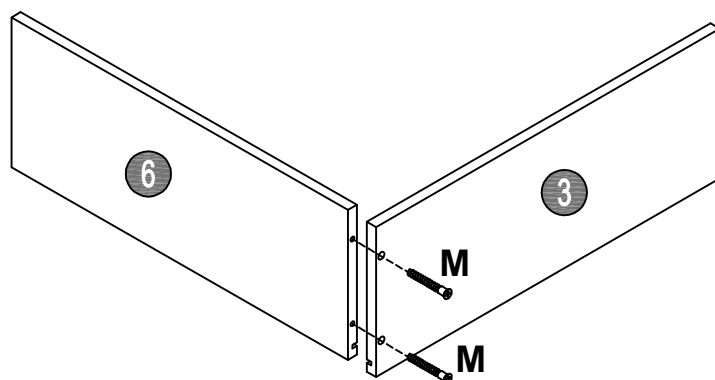


STEP 33 x3

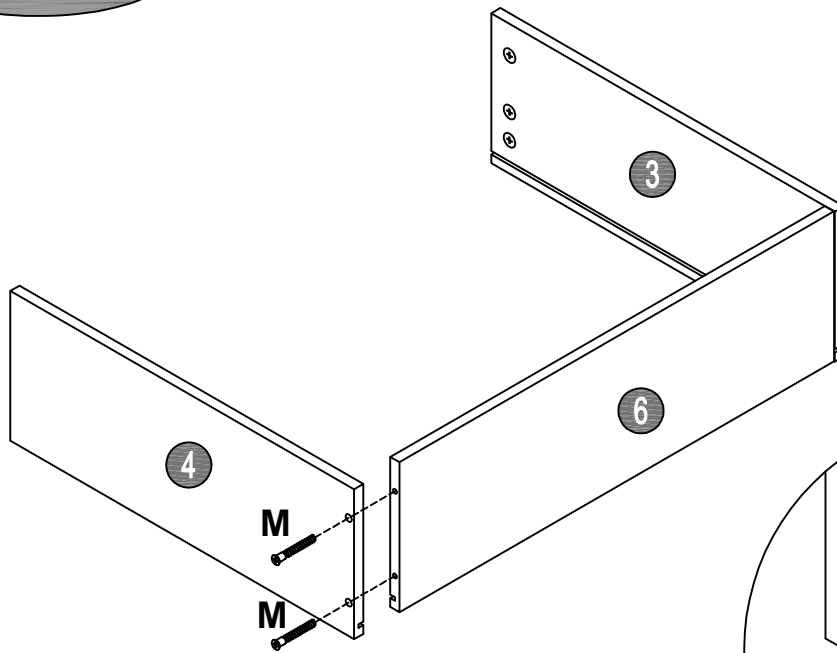




6x
7x50mm
M
CONFIRMAT

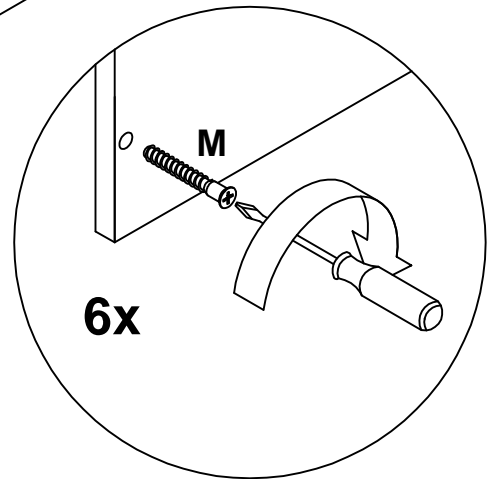

STEP 34 x3


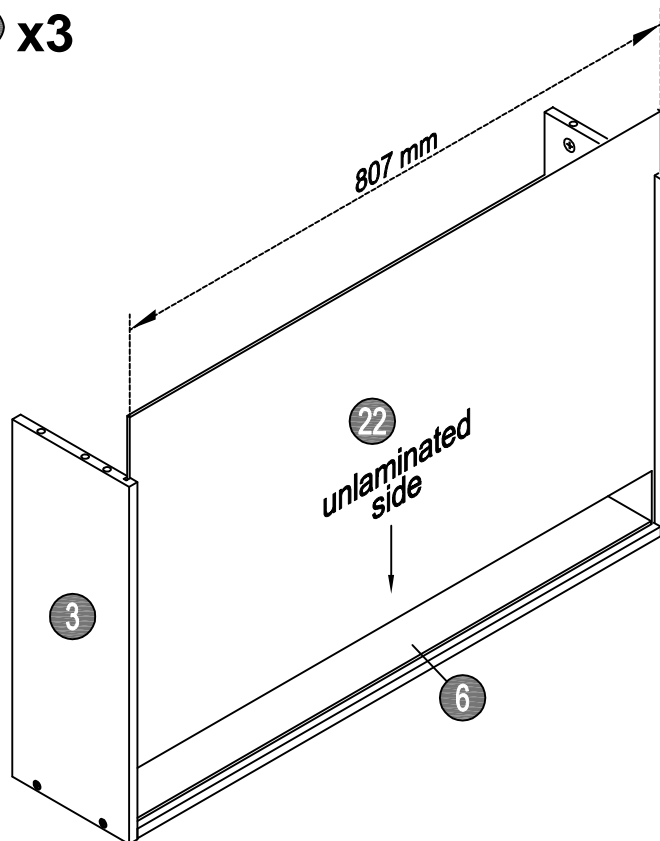


STEP 35 x3

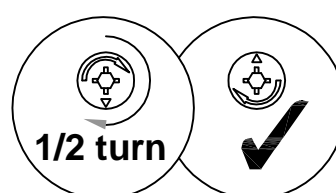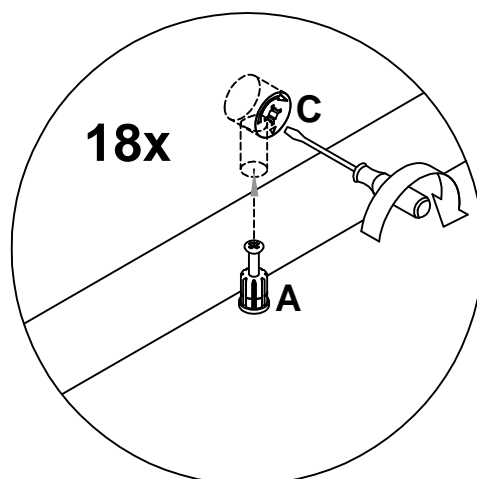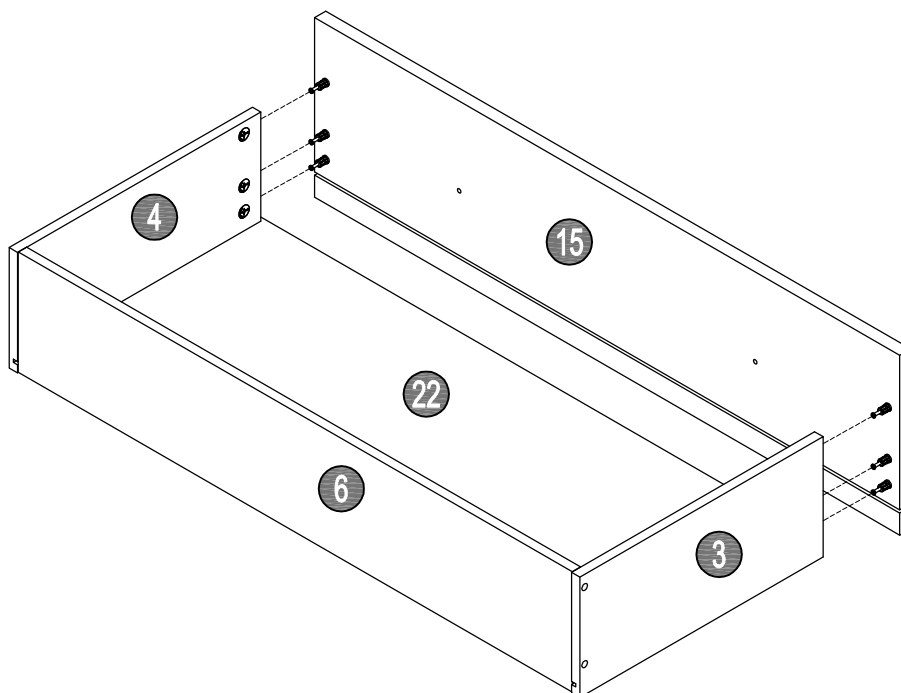

STEP 36 x3

18x
D20mm
Q
CAM LOCK COVER

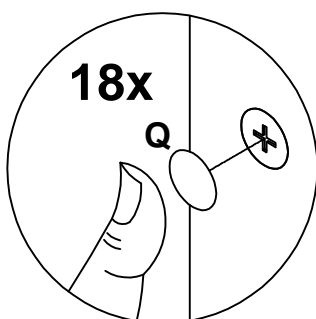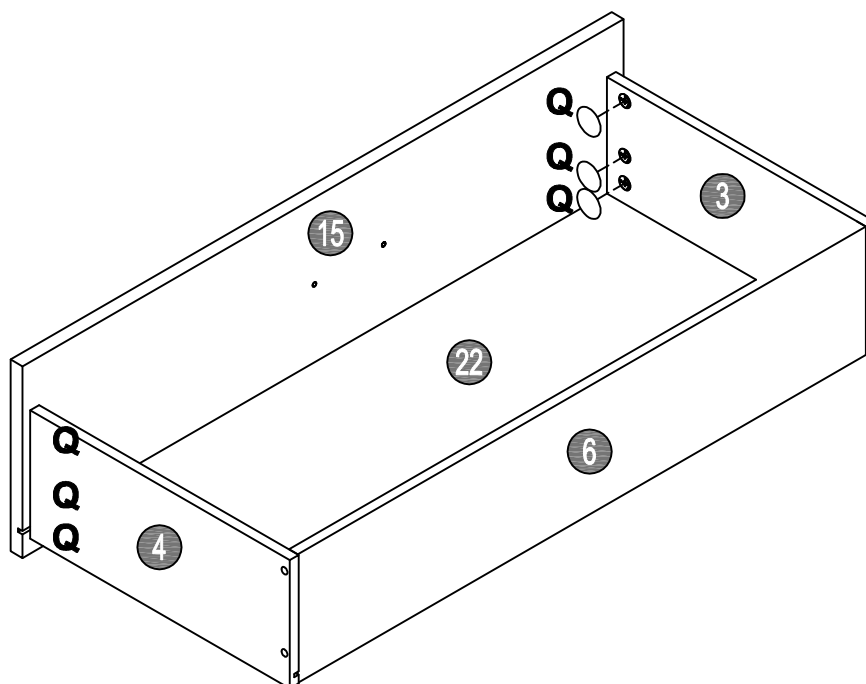

STEP 37 x3



12x
H
HOLDER








12x
3x20mm
I
SCREW



12x
3x13mm
O
SCREW

SLIDE B
3x Left / 3x Right
L=350
N
ROLLER RUNNER

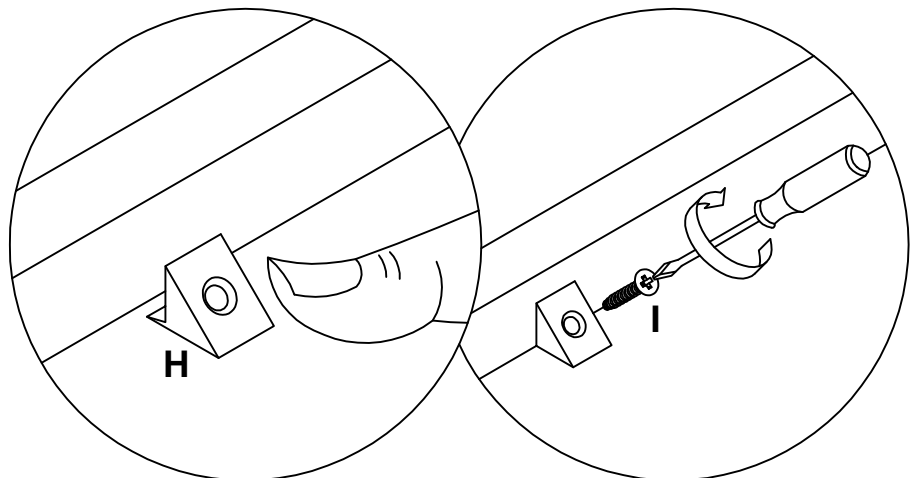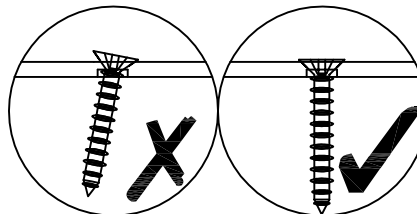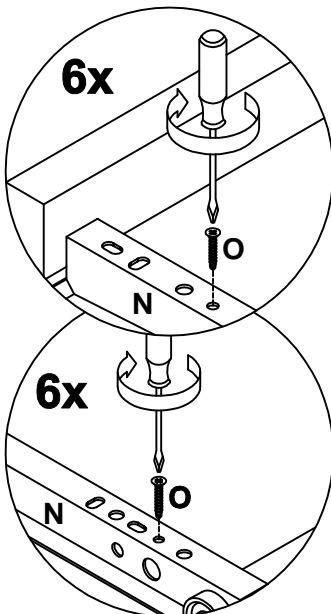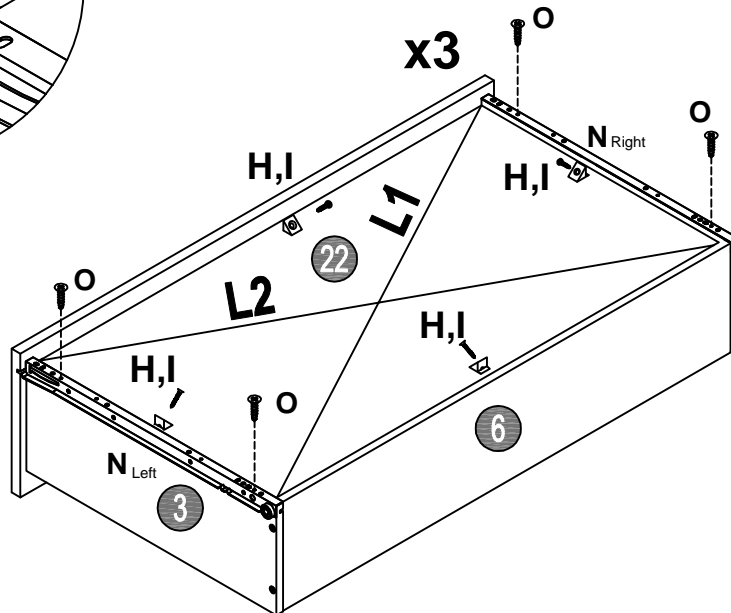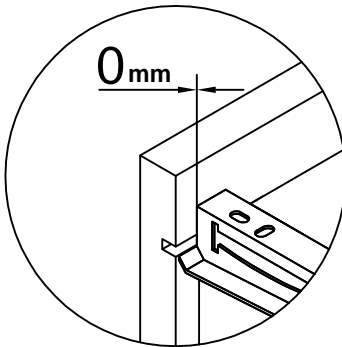

STEP 38

