


# New England Toilet Brush and Holder

Assembly Instructions - please keep for future reference

QN915

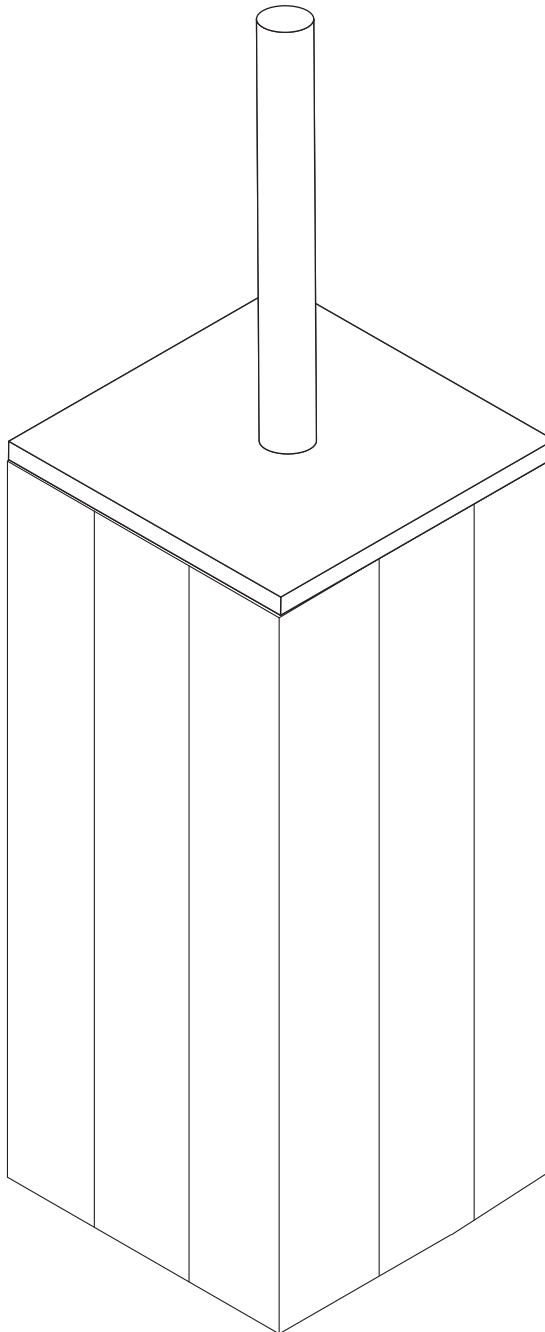

## Dimensions

Width - 11cm

Depth - 11cm

Height - 35.5cm

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



the using. Only use hand screwdrivers

- We do not recommend the use of power drill/drivers for inserting screws, as this could damage

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- Regularly check and ensure that all bolts and fittings are tightened properly.

# Components - Panels & Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

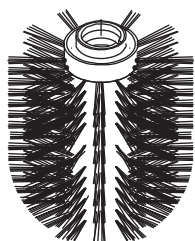


1 X1




2 X1




3 X1

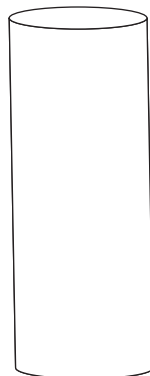


4 X1

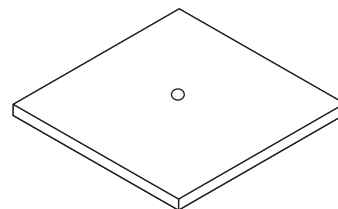

5 X1

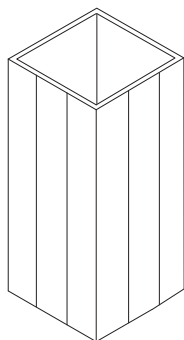

6 X1



A X4


## Tools required

None

# Using Camlocks

## Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

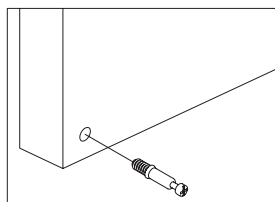

## Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

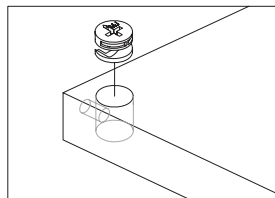

## Step 3

Push the male camlock into the entry hole.

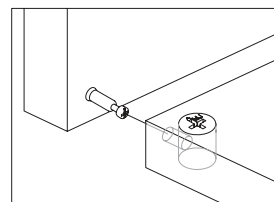


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

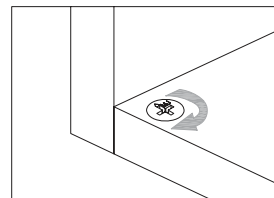

# Assembly Instructions


## Step 1

Connect Brush head **1** to part **2** for as shown

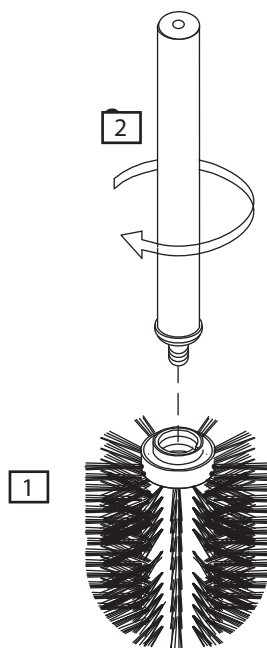


## Step 2

1. Connect Part **3** and part **2** together as shown with panel **5** sandwiched between

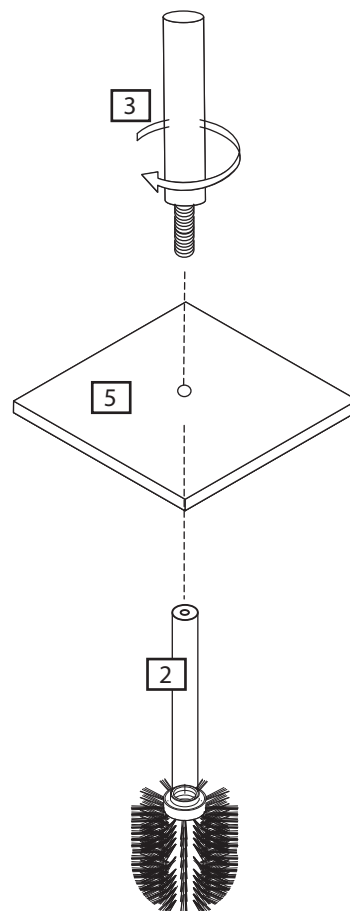

## Step 3


1. Insert Part **4** into Holder **6**

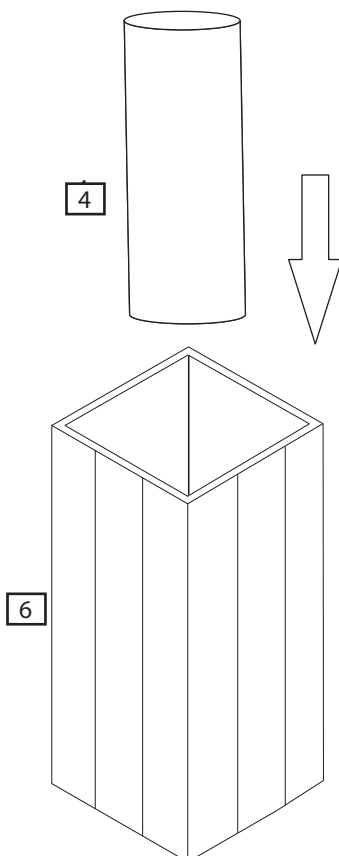

# Assembly Instructions

## Step 4

1. Locate brush and handle into holder

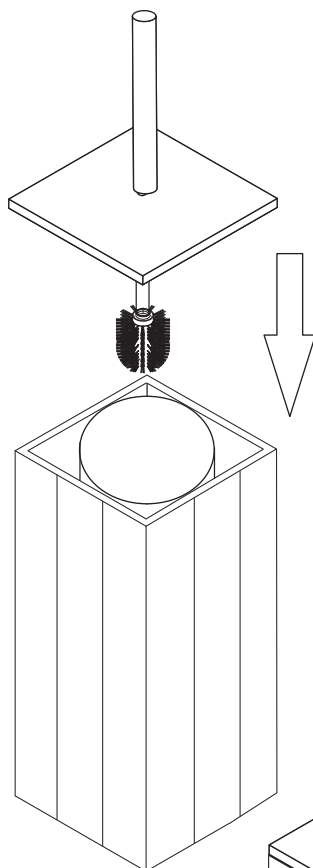

## Step 5

1. Attach 4 x Protective feet **A** as shown

Assembly Complete

