


Shoe Storage Cabinet

Assembly Instructions - Please keep for future reference

045 xx 5525

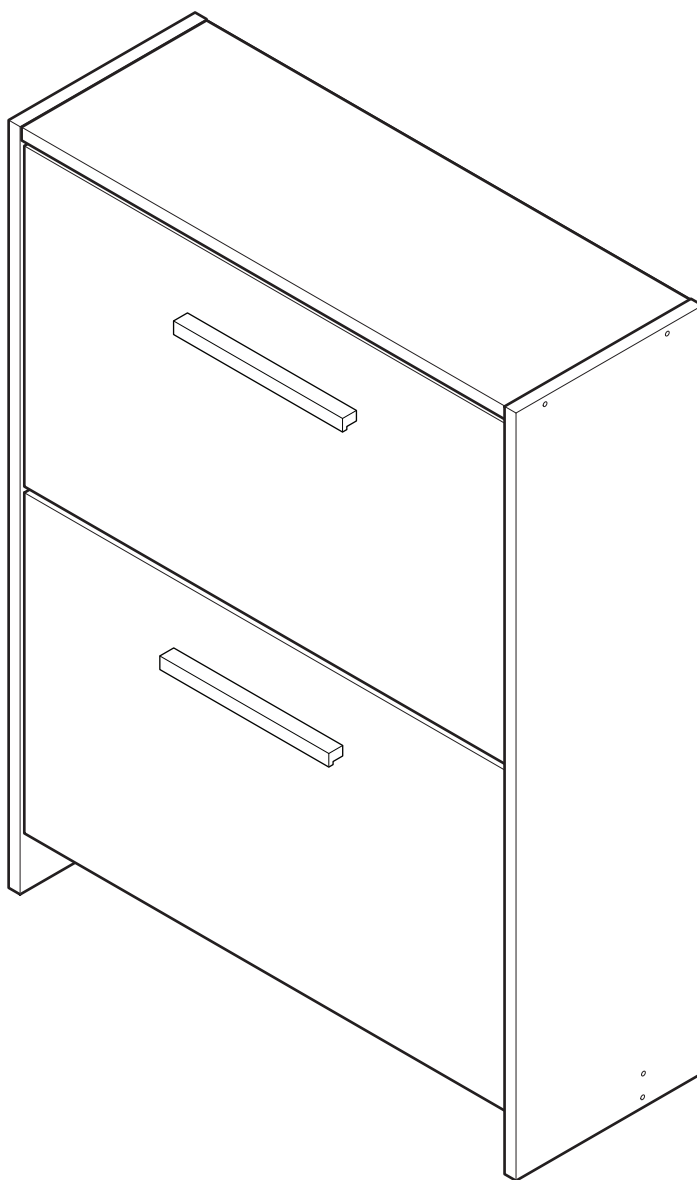

Dimensions

Width - 66.4cm

Depth - 24cm

Height - 87cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 01709 534 123**
Please turn to back page for important information when contacting Customer Helpline.



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 4.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Do Not dispose of packaging until assembly complete.**

- Dispose of all packaging carefully and responsibly when assembly complete.

Care and maintenance

- To protect the furniture, position the furniture out of direct sunlight and away from direct heat sources such as radiators and fires.

- Do not place the furniture in excessively dry and humid conditions.

- From time to time check that there are no loose screws on this unit.

- Always lift furniture when moving it (do not drag) otherwise the joints may be damaged.

- Do not place hot or cold objects on the surface, always use protective mats to avoid marking the furniture.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

- Clean spills up immediately

- Dust surfaces with a soft, dry, lint free cloth.

- More stubborn marks can be removed using a damp (not wet) cloth. Wipe the surface dry immediately using a soft lint free cloth.


- Do not use detergents, abrasive cleaning products or cleaning products that contain ammonia, solvents or silicone as these may damage the surface finish.

Components - Panels

Please check you have all the panels listed below




Important - Thick lines ——— indicate finished edges

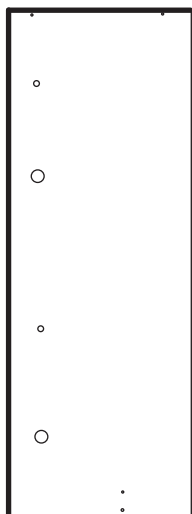

Left hand end (87x24.2cm)

Code - **9808**

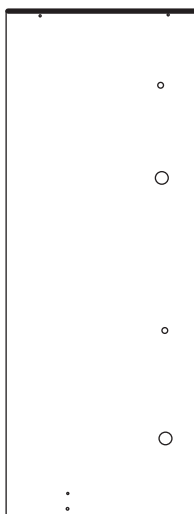

Right hand end (87x24.2cm)


Code - **9809**



Packing Panel (63.4x103cm)


Code - **8379**

Not required in build of unit.



Top (63.4x24cm)

Code - **8315**

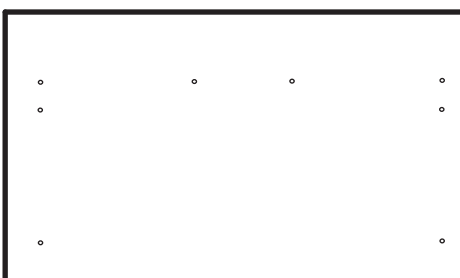

Shoe flap x 2 (63x38.6cm)

Code - **0709**



Plinth (63.4x92cm)

Code - **8316**



Large shoe rail x 4 (62.2x14.1cm)

Code - **8320**



Small shoe rail x 2 (62.2x8.8cm)

Code - **8321**




Backpanel (66x30cm)

Code - **8322**

Components - Exploded View



Important - Thick lines ——— indicate finished edges

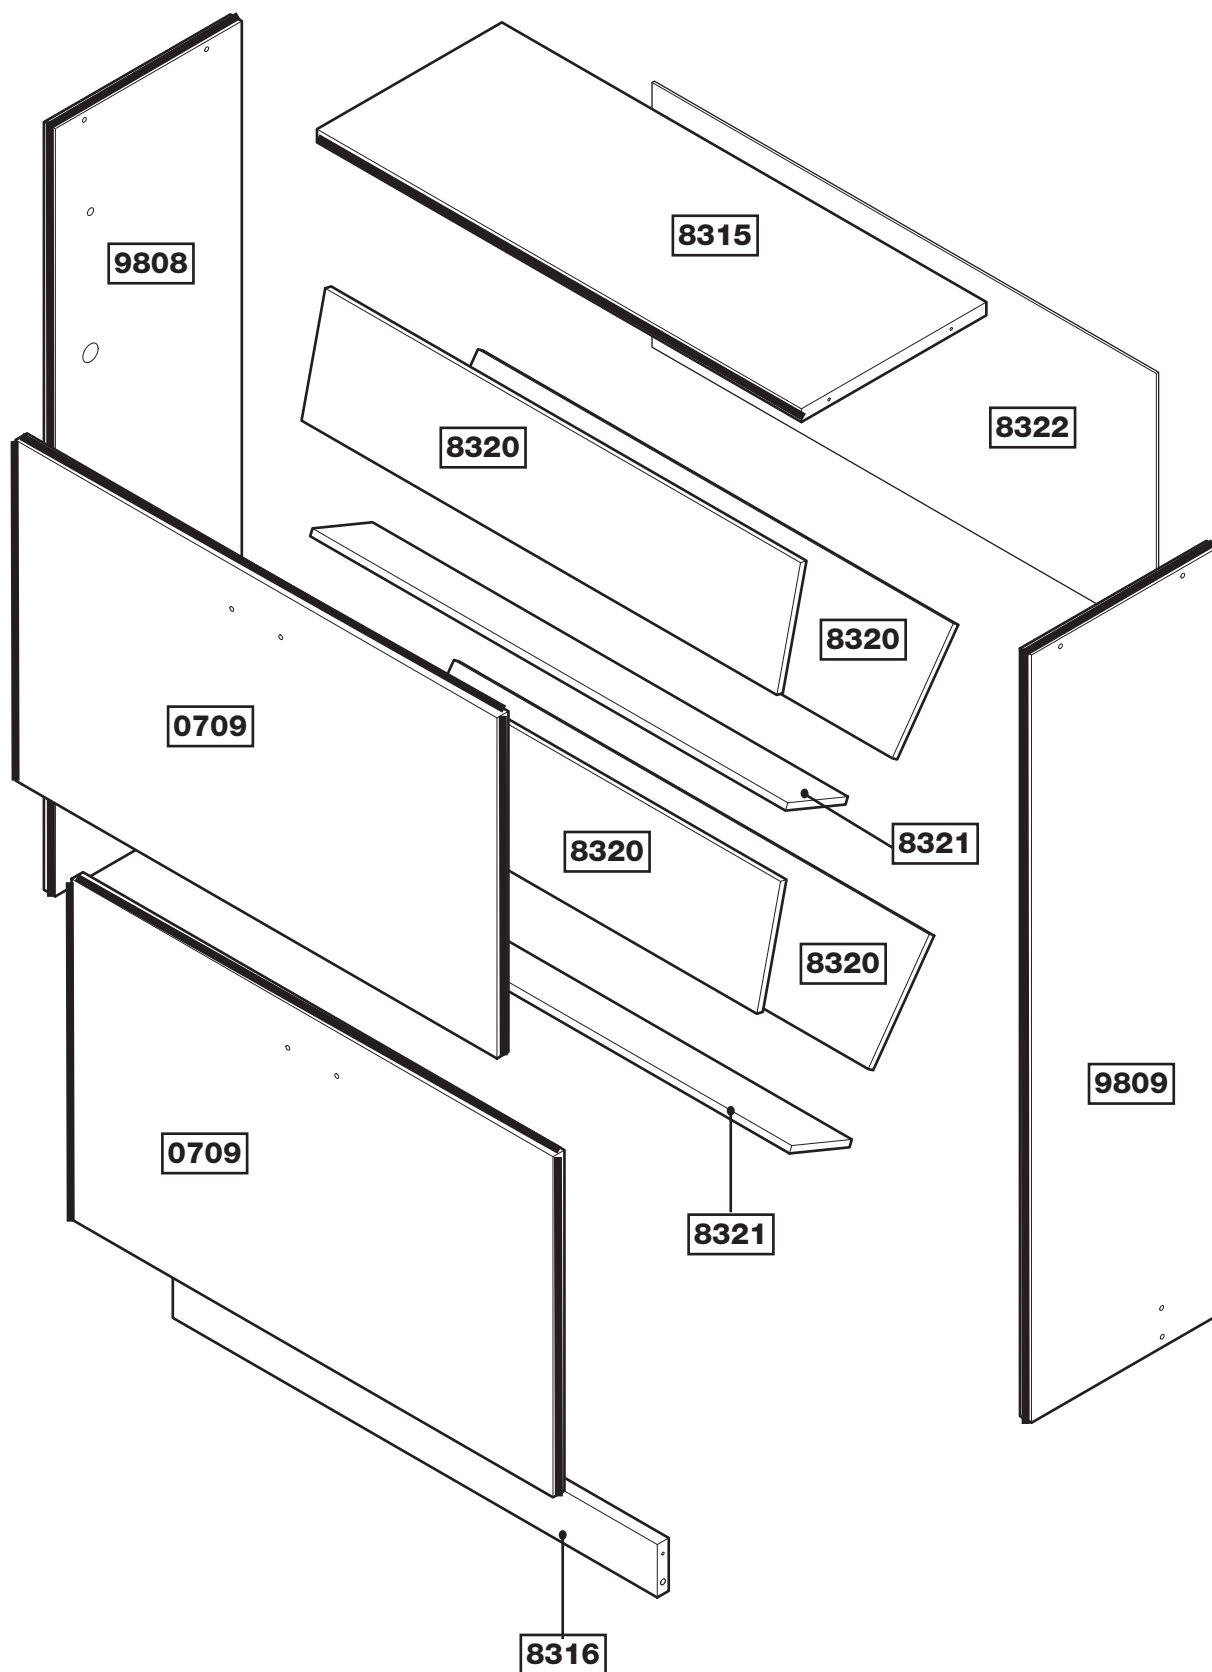




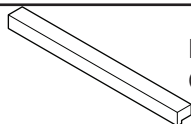






Components-Fittings

If you have damaged or missing components, call the **Customer Helpline: 01709 534 123** Please turn to back page for important information when contacting Customer Helpline.


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly, In some case more fittings may be supplied than are required.


D  12mm screw x 12- Code 690001008	E  Panel pin x 10 - Code 760001012	F  Panel pin guide x 1 Code 684004501
G  20mm bolt x 4 Code 700002006	H  13mm screw x 16 - Code 700006002	J  Handle x 2 Code 643005527
L  45mm screw x 8 - Code 690001075	Q  12mm screw x 2 - Code 690001099	R  L bracket x 1 Code 760001901
X  Cover cap x 8		



Important: Fittings S to W are supplied fastened together.

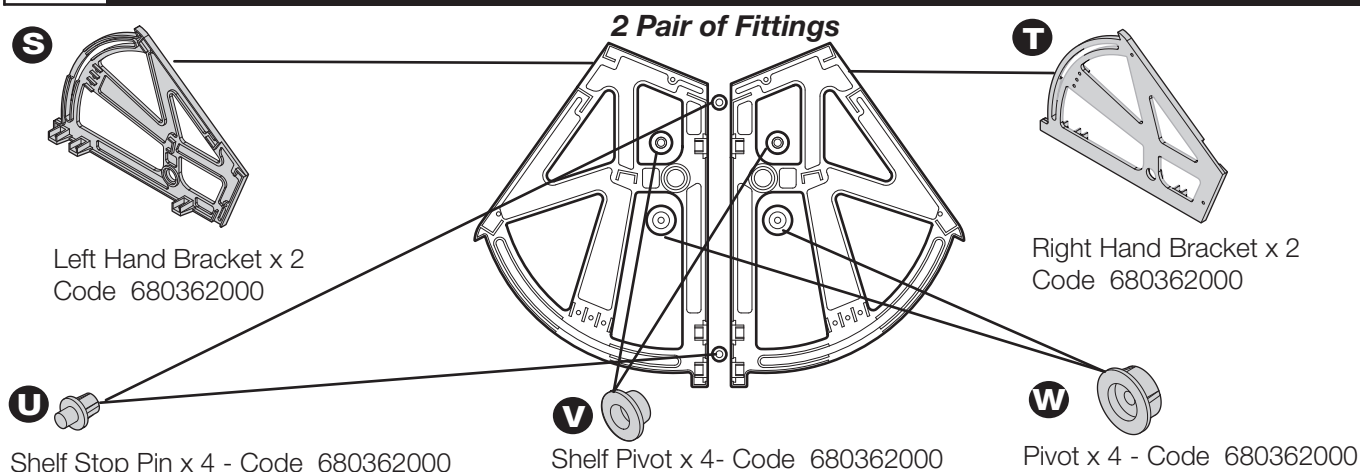

Tools required




Cross headed screwdriver
(large)



Tape Measure




Small Hammer

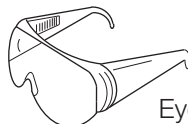

Eye protection
(when using a
hammer)


Ruler - Use this ruler to help correctly identify the screws

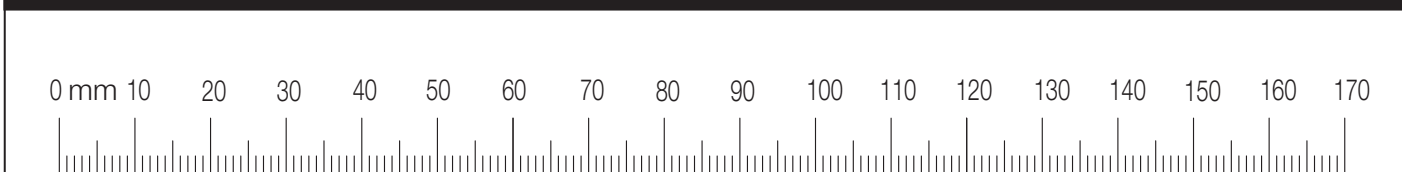

Assembly Instructions



Step 1

Separate all components and ensure all plastic sprue is removed from fittings

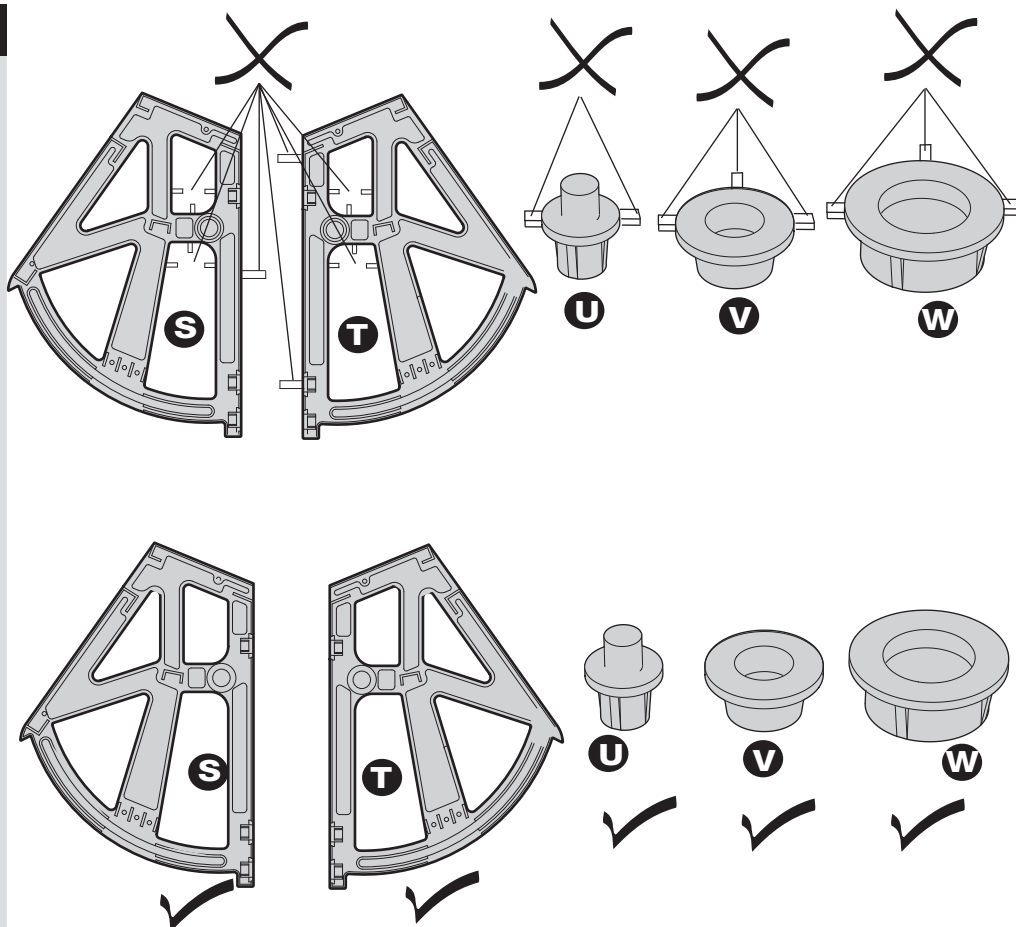



Step 2

Fitting pivot & shelf pin to left & right end panels

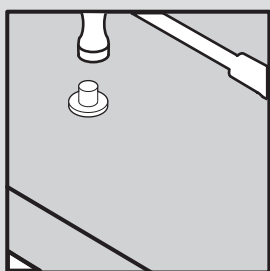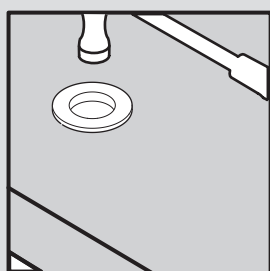

Note: Use a hammer to knock in pivots **W** and shelf pins **U** into holes.

Fittings you will need for this step:

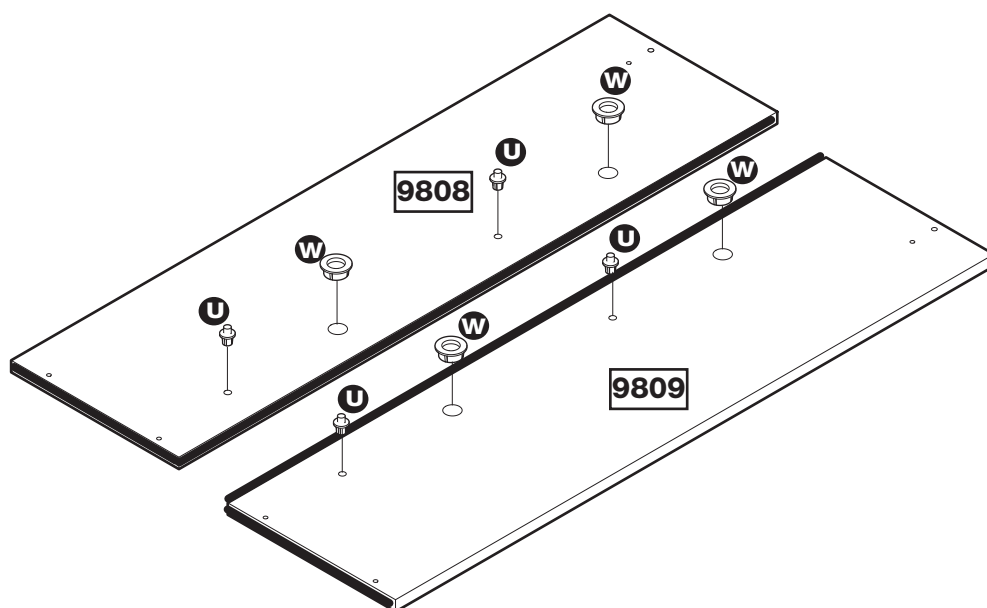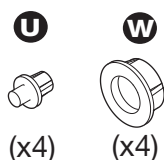


Assembly Instructions

Step 3

Attach plinth & top panel to right hand end panel.

Locate screw **L** through hole in rh end panel **9809** and screw into hole in plinth **8316**.

Locate screw **L** through holes in rh end panel **9809** and screw into holes in top **8315**.

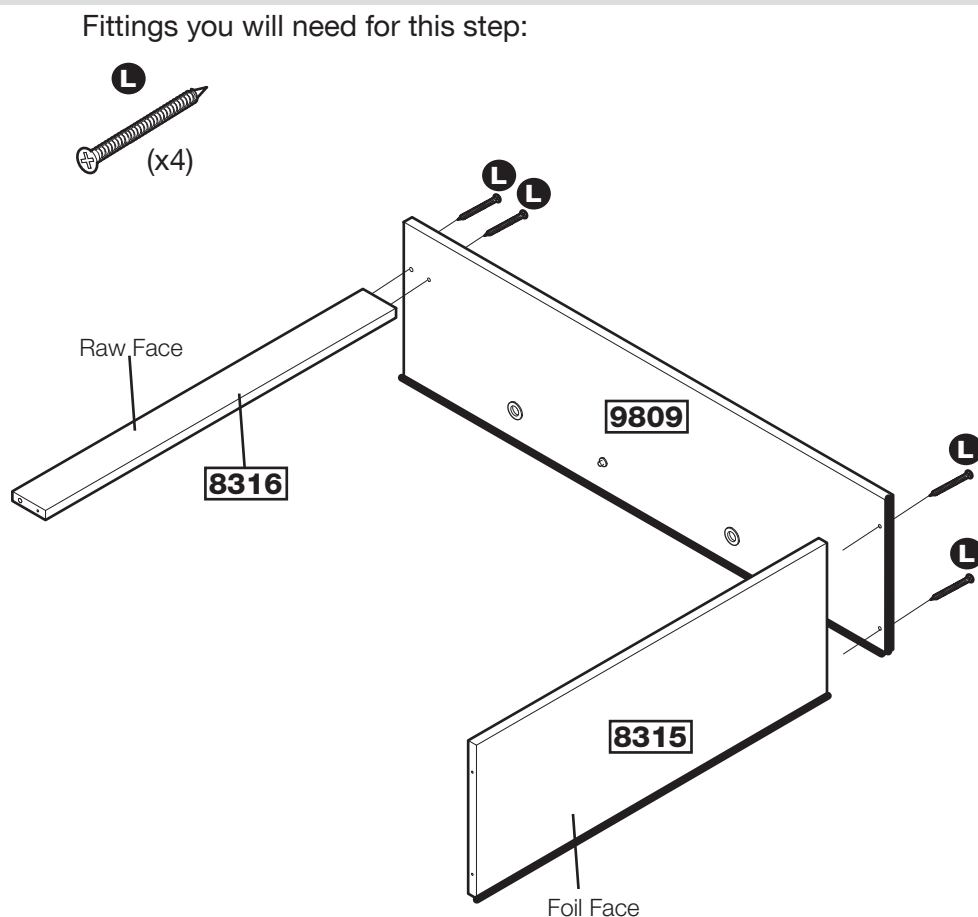


Step 4

Attach left hand end panel to plinth & top panel.

Locate screw **L** through hole in lh end panel **9808** and screw into hole in plinth **8316**.

Locate screw **L** through holes in lh end panel **9808** and screw into holes in top **8315**.

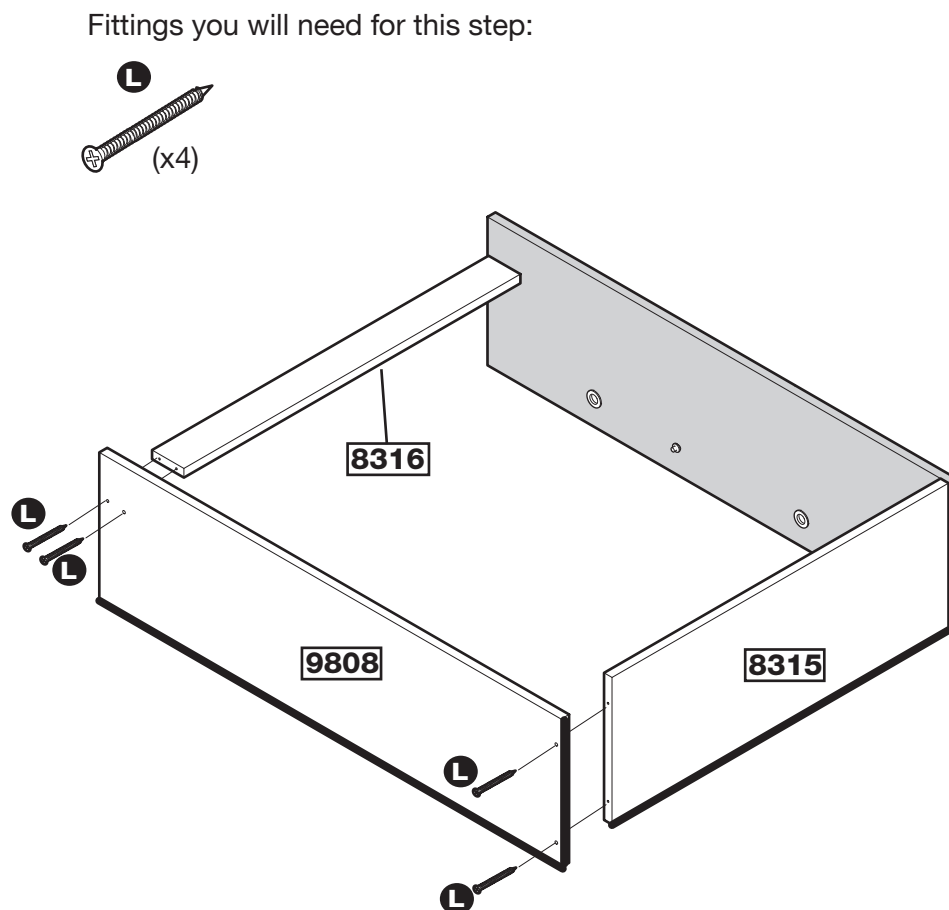

Assembly Instructions

Step 5

Square unit up




Important:

Ensure a **tape measure** is used to **square up** unit!

Before securing the back it is necessary to square up the unit.

You can do this by measuring between XX - XX and YY - YY ensuring these are the same (DIAG 1).

If they are not (DIAG 2) Apply slight pressure as indicated (DIAG 3) until they are the same.

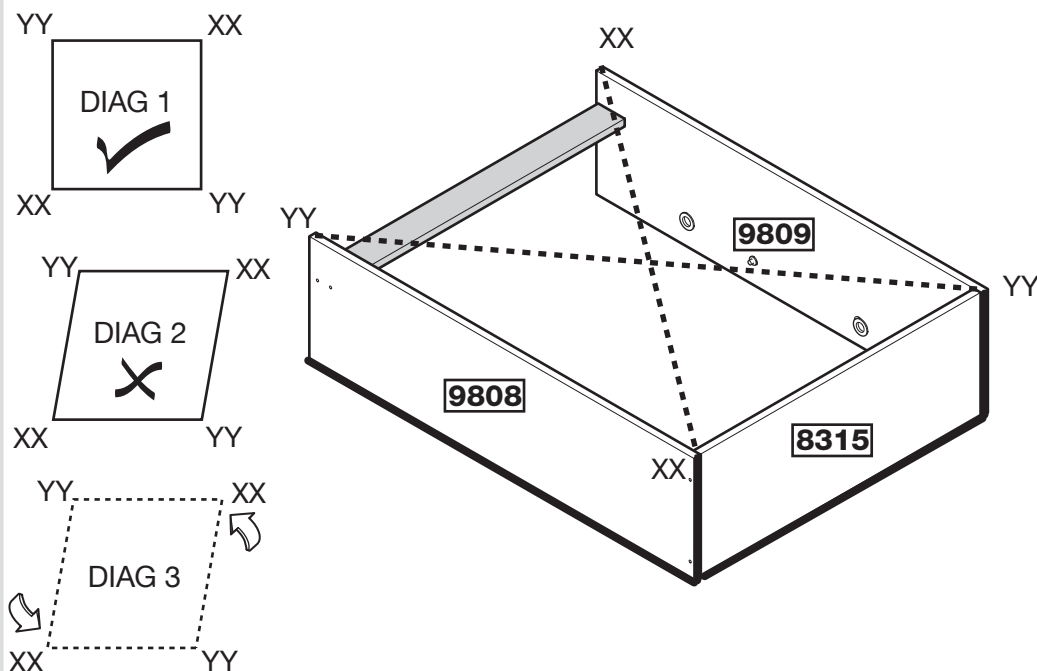

Step 6



Attach backpanel to ends and top

Align backpanel **8322** so that there is an equal gap from the edge of end panels **9808** and **9809**.

Then secure using panels pins **E**.

Use the panel pin guide **F** when locating the panel pins **E**. This will hold the panel pins vertical and ensure the correct distance from the edge.

Fittings you will need for this step:

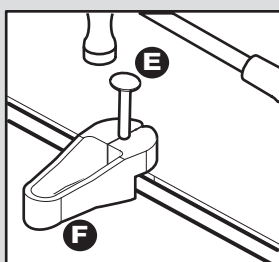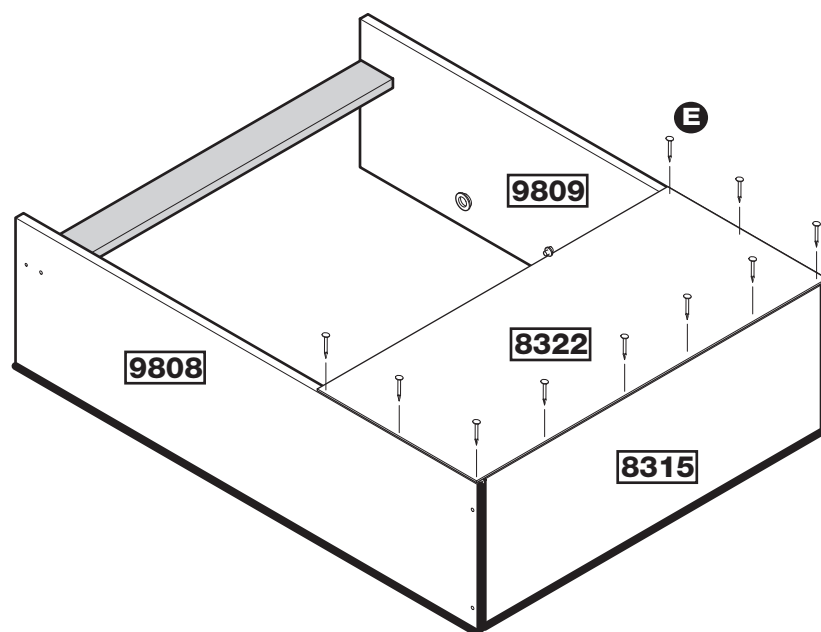

Assembly Instructions

Step 7






Important:
Before commencing
ensure step 1
has been followed
fully.

Attaching left and right hand brackets to flap

Align the left hand
bracket **S** with the
pre-drilled holes of flap
panel **0709**. Secure
using screws **H**.

Repeat this to attach the
right hand bracket **T**.

Fittings you will need for this step:

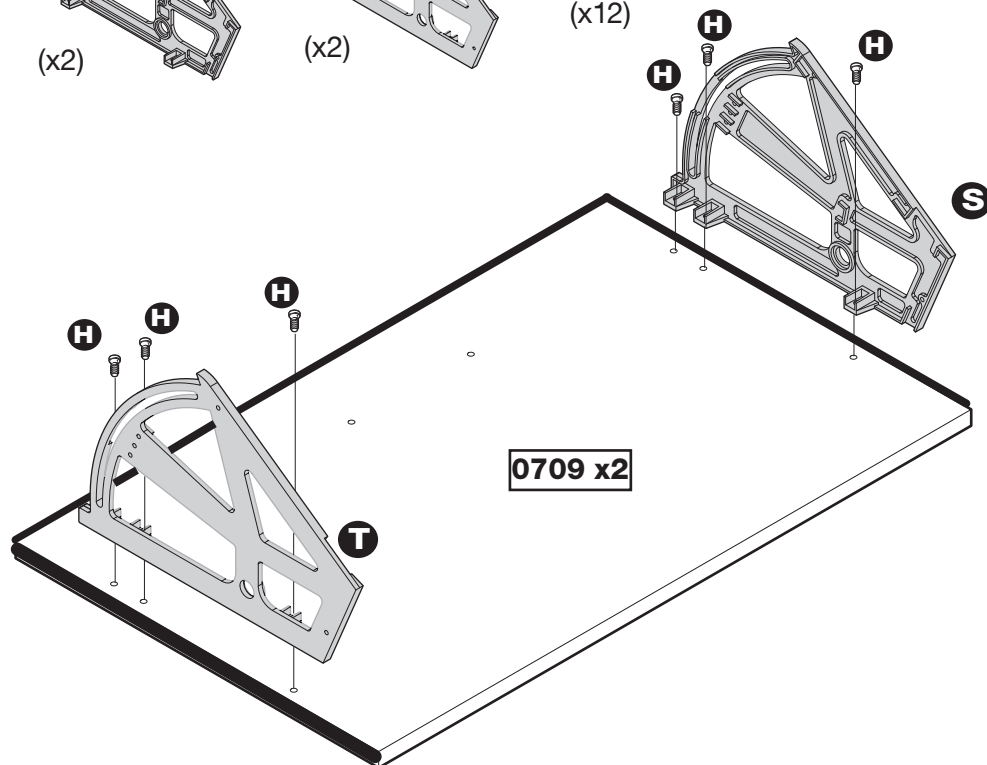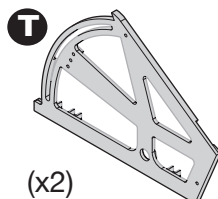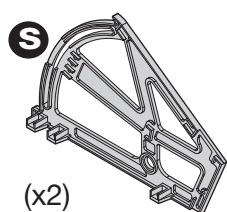

Step 8

Attaching small and large rail to left and right hand brackets

Locate the small rail
8321 in'between the left
& right hand brackets
as shown.

Secure the small rail
8321 to left and right
hand bracket using
screws **D**.

Locate the large rail
8320 in'between the left
& right hand brackets
as shown.


Secure the large rail
8320 to left and right
hand bracket using
screws **D**.

**Repeat on remaining
flap.**

Fittings you will need for this step:



Warning.
DO NOT OVERTIGHTEN

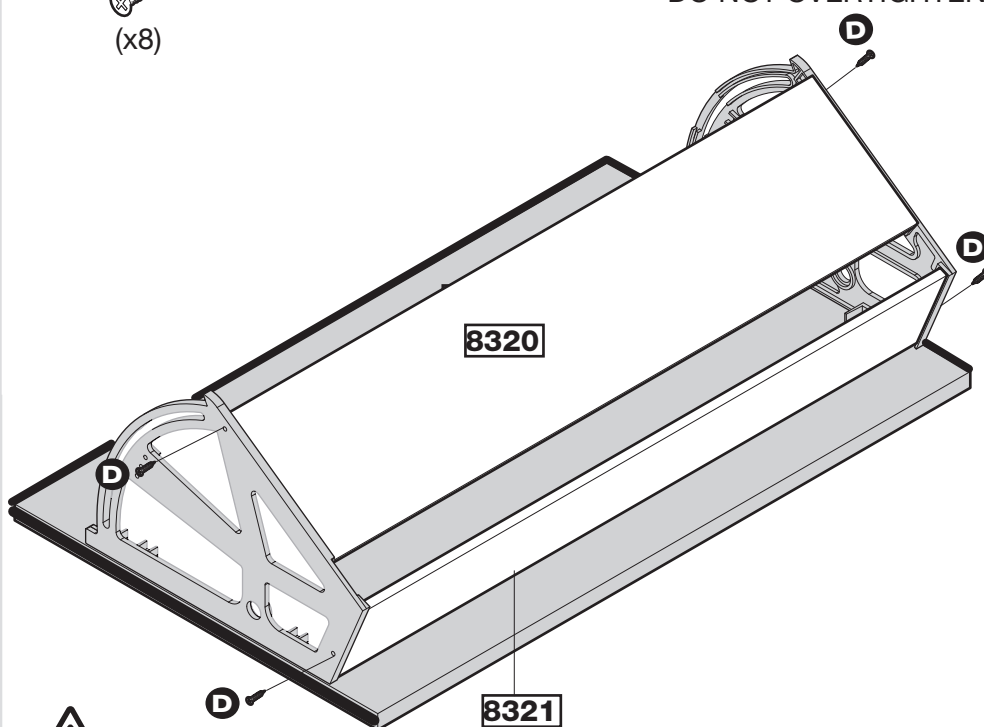

Warning.
DO NOT OVERTIGHTEN

Assembly Instructions

Step 9

Attach flap assemblies



Important:

2 people required.

a: Carefully stand the unit upright. Position the flap into the main unit as shown.




Warning.

Ensure fitting **W** already inserted in end panels is not dislodged.


b: Carefully pull the brackets in the direction shown by the arrows. This will allow you to line the curved slot in the brackets up with shelf stop pins **U** already inserted in end panels.

c: Carefully pull the brackets in the direction shown by the arrows. This will lock the brackets onto the shelf stop pins **U**.


a:

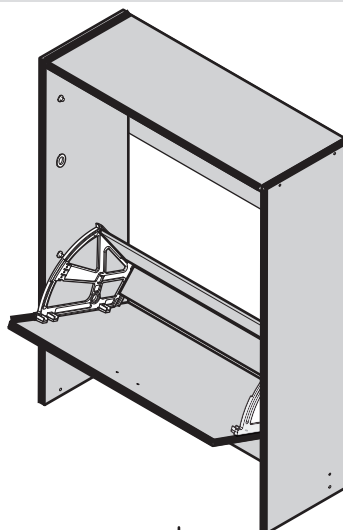

b:

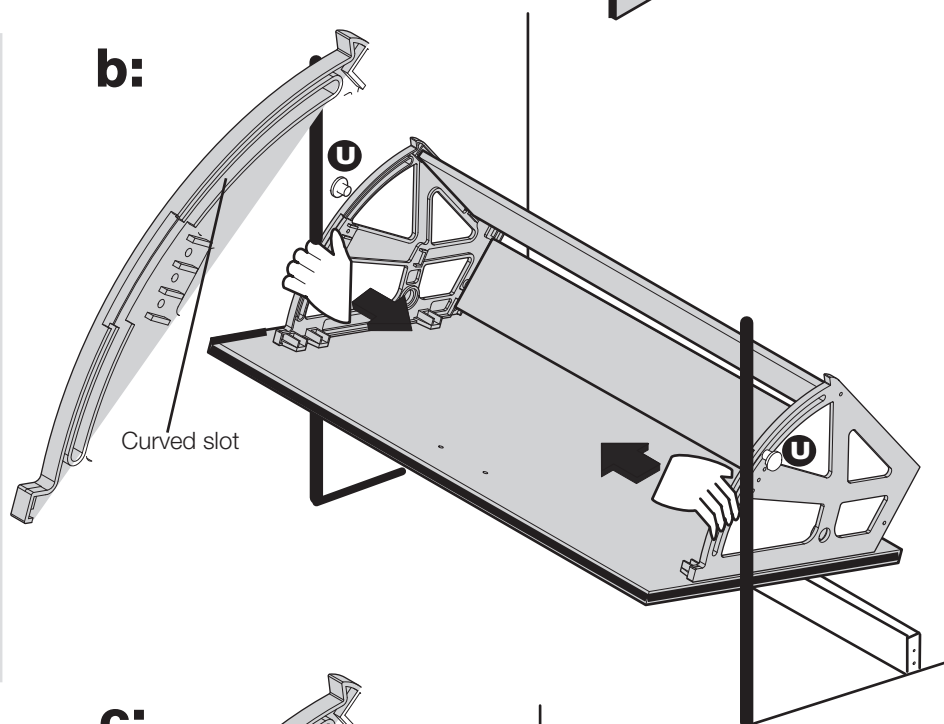

c:

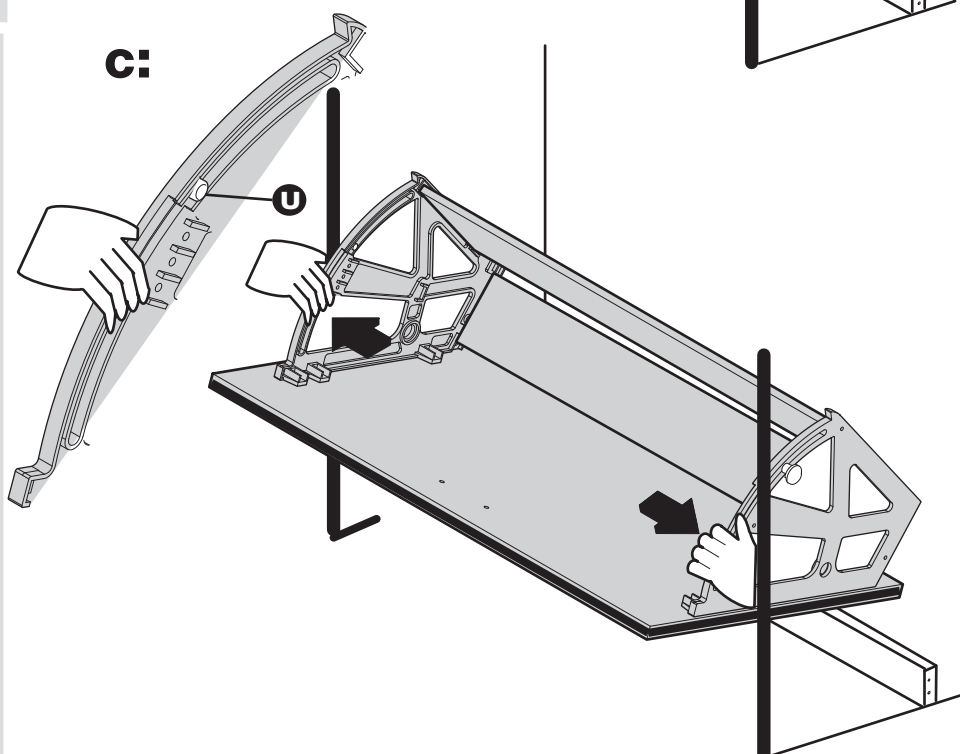

Continued on next page.


Assembly Instructions

Step 9 - Continued


d: To fix the flap assemblies to the lh end panel **9808** and right hand end panel **9809** through lh and rh brackets. Firstly, using a screwdriver insert **H** into **V**. As shown in (diag 1).

Now, While one person lines up the hole in the brackets with fitting **W** already inserted in end panels, the other person inserts and secures **H** and **V**. (diag 2).


Fittings you will need for this step:

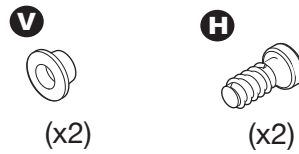


d:

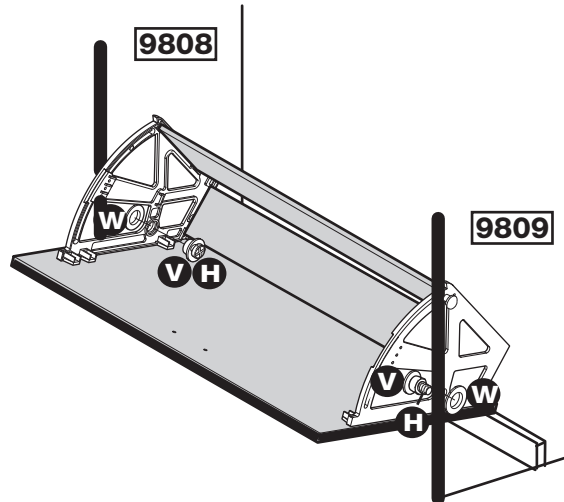

(diag 1)

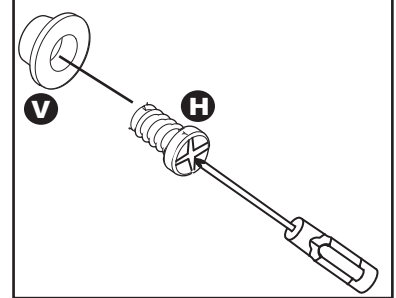

(diag 2)

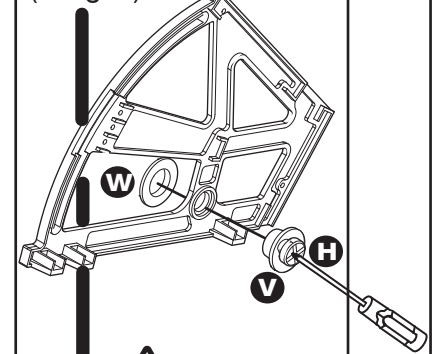

Warning.
DO NOT OVERTIGHTEN



Warning.

Ensure rail is inserted fully into slot in brackets. See diag 1,2 and 3.

e: Secure the large rail **8320** to left and right hand bracket using screws **D**. (diag 4)



Warning.


DO NOT OVERTIGHTEN

Fittings you will need for this step:




e:

(diag 1)

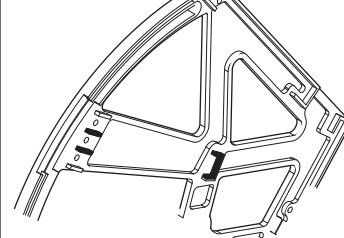


Position rail into slots.

(diag 2)

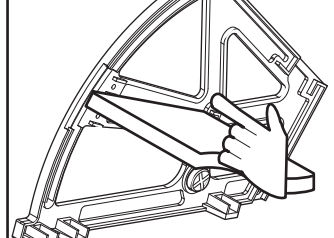


To ensure the rail fits correctly into the bottom slot, push the bracket on the area as shown above.

(diag 3)

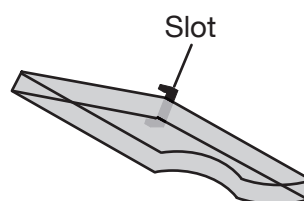

Note the rail now sits flush up to the slot.

(diag 4)

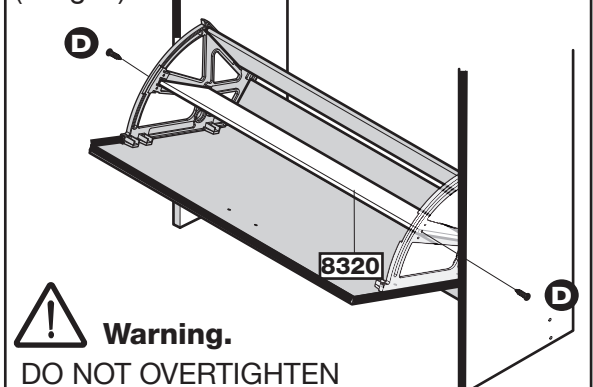

Warning.

DO NOT OVERTIGHTEN

Repeat step 9a - 9e on the remaining flap.




Assembly Instructions

Step 10

Attach handles


Secure handles **J** to
flap panels **0709**
using bolts **G**

Fittings you will need for this step:

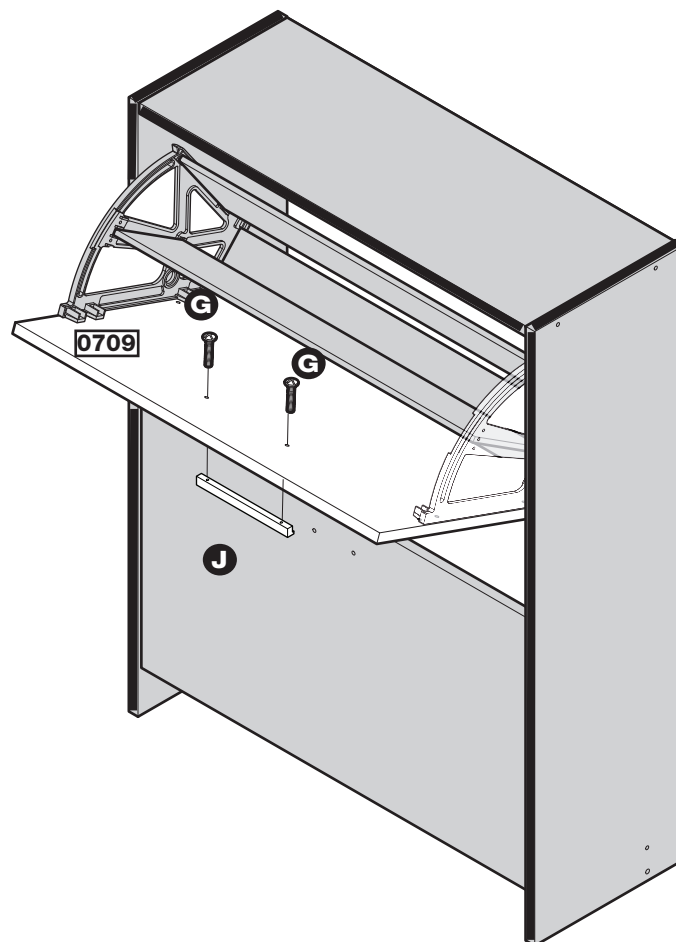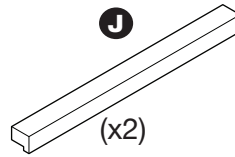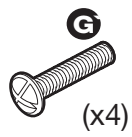

Assembly Instructions


Step 11

Cover exposed screw heads using caps .

Fittings you will need for this step:



(x8)

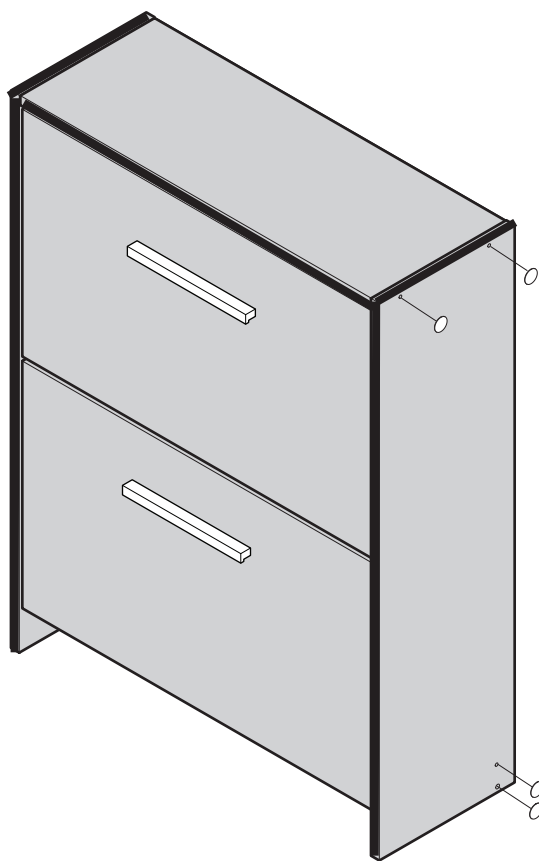

Assembly Instructions

Step 12

Fixing to wall

We recommend that this unit is fixed to a suitable wall to prevent possible overbalancing. We have included a fixing bracket for this. No fixing screws are provided as they will need to suit the wall type, and the length of screw will depend on the distance from the back of the unit to the wall. Please ensure fixings used are appropriate to your wall type. Locate the bracket to the top panel or to the end panel as close to top as possible. We do not specify exact location for the bracket, this is left to the customer's discretion.

With help move the unit into position.





Warning:
2 people to lift.
Lift with care.




Warning:

Please take care when drilling into the wall, avoiding any pipes and wires. Wear safety goggles when drilling. The use of residual current device (RCD) is recommended when working with tools. If in doubt consult a qualified person.

Fittings you will need for this step:

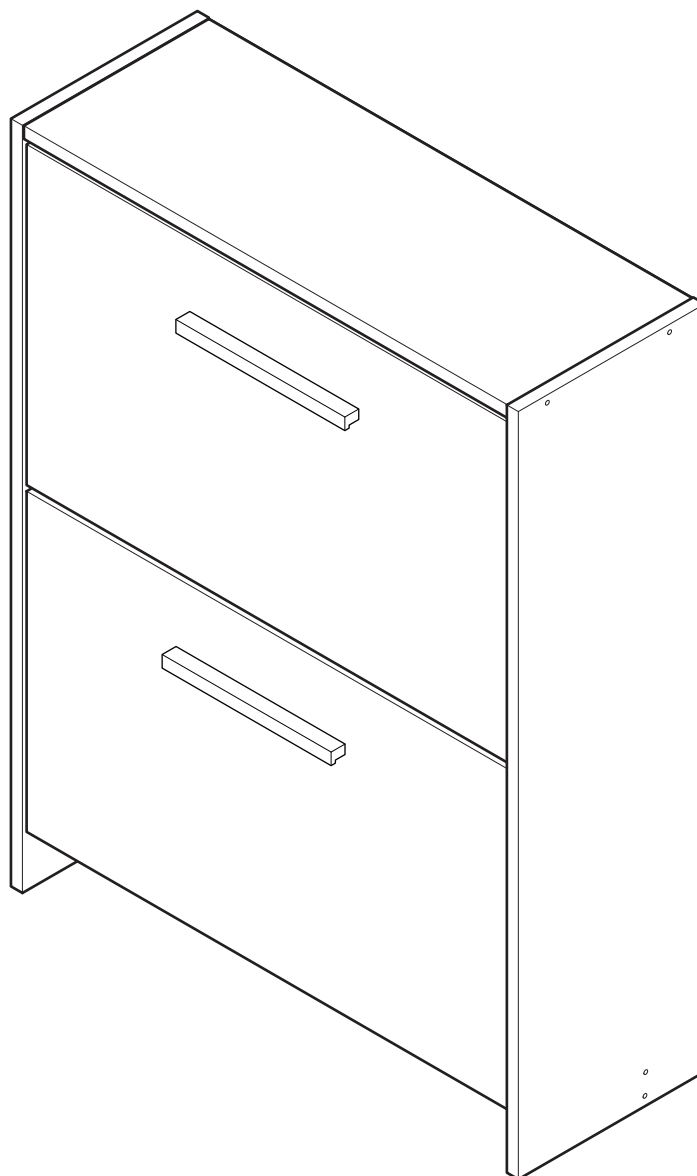

Congratulations! Your unit is complete

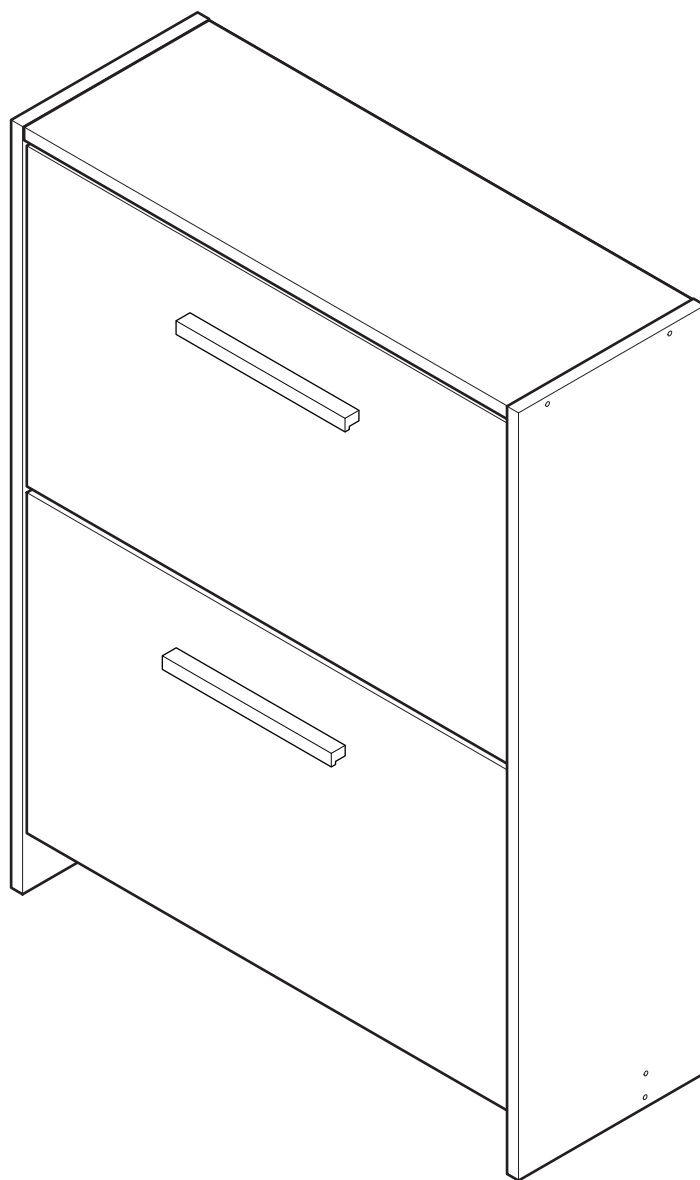

Note: Please turn over for important information.

Important Information

If you need help or have damaged or missing parts, call the **Customer Helpline: 01709 534 123**

Simply contact us on CUSTOMER HELPLINE : 01709 534123 Between 8am - 4.30pm
Monday to Thursday and 8am - 2.30p.m friday. Your statutory rights are not affected.

Please have the following information: Unit Description, Product Code, Product Colour,
Place of Purchase, Catalogue Ref. No., Item Code, and have the assembly instructions close
to hand.

We do have an answer machine should you contact us out of office hours, so in addition to
the above information could you leave your name, address, daytime telephone number and
the nature of your call on the answerphone. All calls will be actioned asap.

You can also e-mail your requests to us at: customer.helpdesk@addspacefl.co.uk

Alternatively Write to us at: Customer Service Department, Addspace Furniture Limited,
Braithwell Way, Hellaby Industrial Estate, Hellaby, Rotherham, South Yorkshire, S66 8QY.