


JD Williams

HALO 2 DOOR 3 DRAWER SIDEBORD

Assembly Instructions - Please keep for future reference

Cat No

XK028

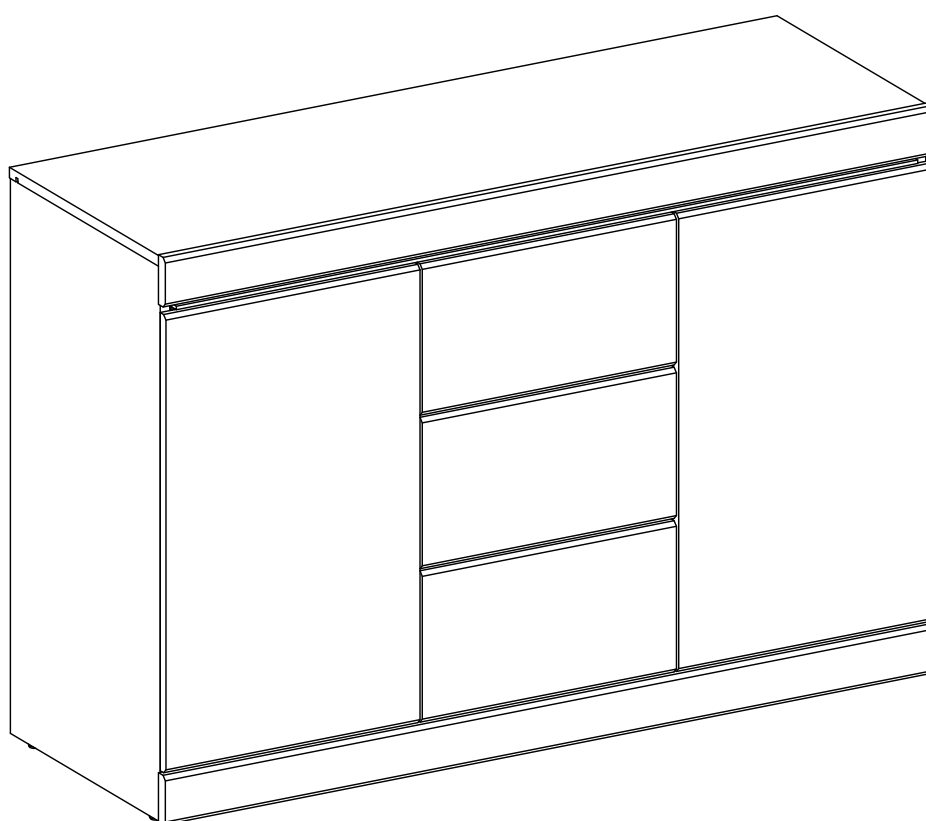

Dimensions	No. people	Assembly Time
Width: 117.2cm Depth: 41.4cm Height: 80.4cm		2.0 Hour (approx.)

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **JDW Customer Helpline: 0871 231 2000**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 4 and 5.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive clean
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you have damaged or missing components, call the
JD Williams Customer Helpline on 0871 231 2000**

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**

Exploded View

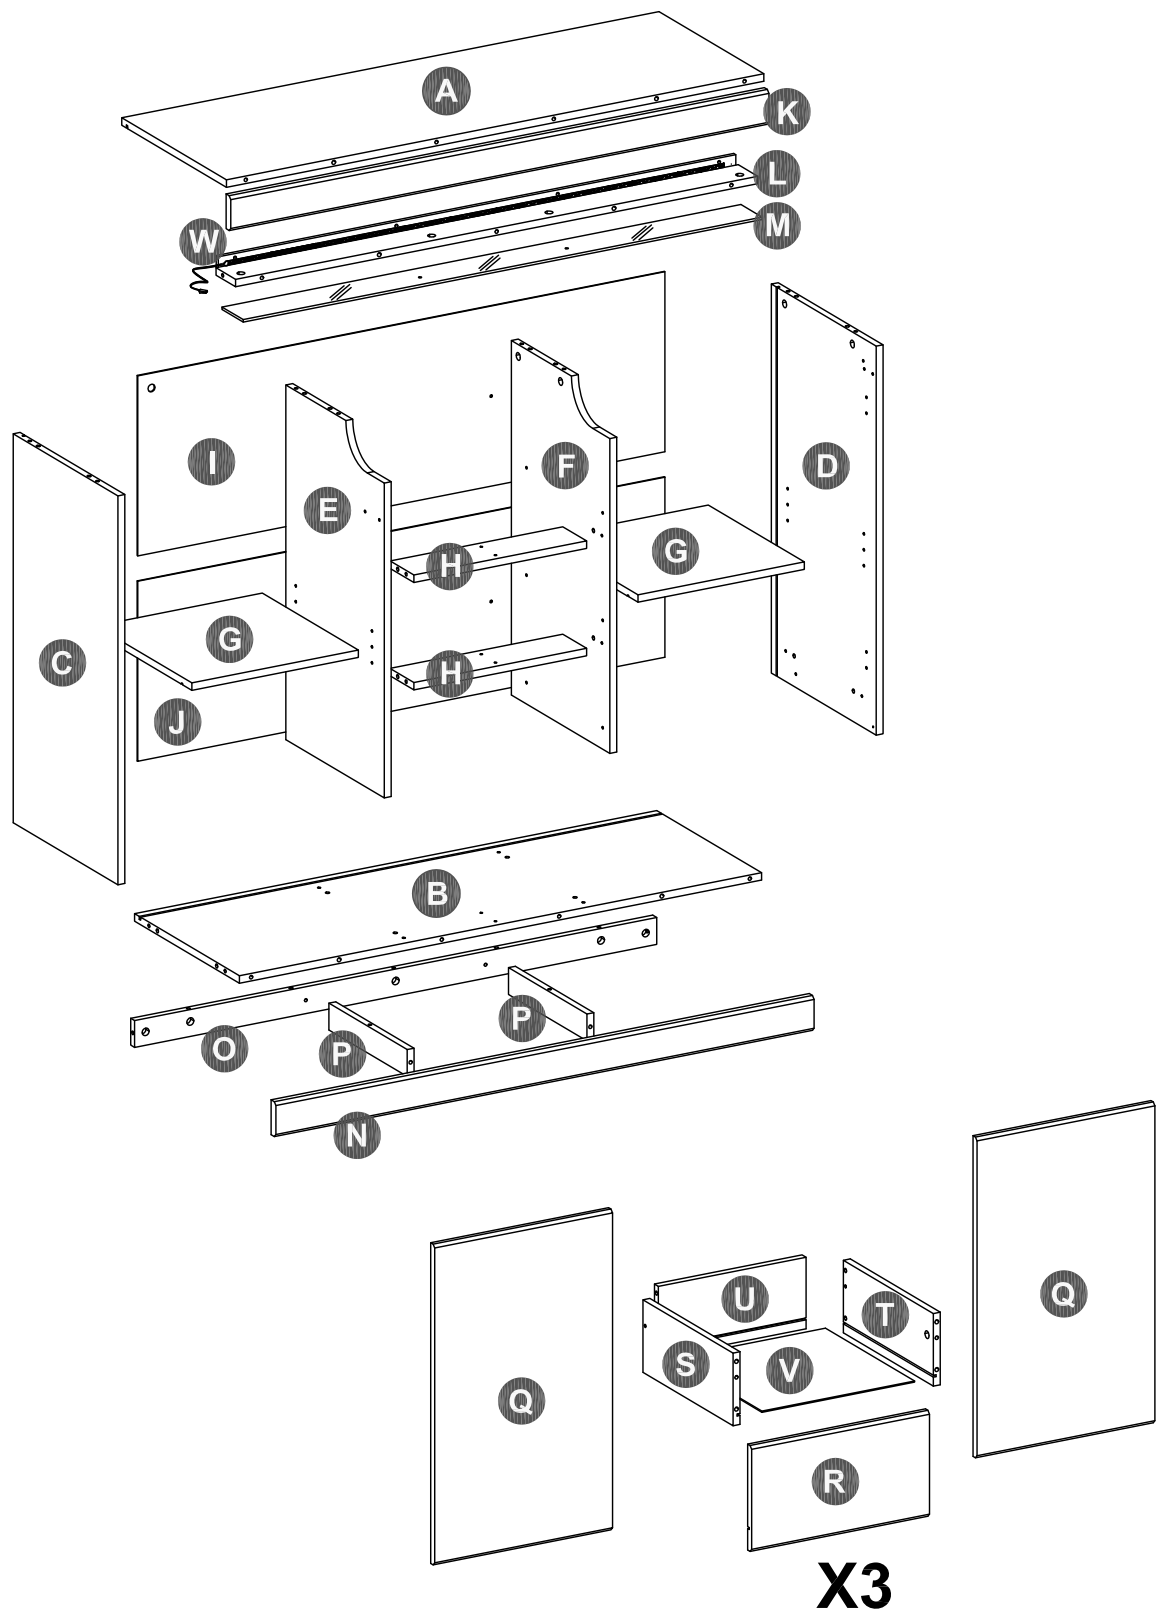

Components - Panels

Please check that you have all the components listed below before constructing your items.
























Part No	Description	Qty
A	Top Panel	1
B	Bottom Panel	1
C	Side Panel L	1
D	Side Panel R	1
E	Vertical panel - L	1
F	Vertical panel - R	1
G	Adjustable Shelf	2
H	Support Drawer Panel	2
I	Top Rear Panel	1
J	Bottom Rear Panel	1
K	Front Panel	1
L	Panel Support	1
M	Glass LED Support	1
N	Front Bottom Support	1
O	Rear Bottom Support	1
P	Middle Bottom Support	2
Q	Door	2
R	Drawer Front Panel	3
S	Drawer Left Panel	3
T	Drawer Right Panel	3
U	Drawer Rear Panel	3
V	Drawer Bottom Panel	3
W	LED Panel Support	1

Components - Fixings

Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	Minifix Cam	(B)	Minifix Bolt	(C)	Minifix Cover	(D)	Dowel M8 x 32mm
							
	44 units		44 units		40 units		52 units
(E)	Screw M6 x 13mm	(F)	Screw M10 x 33.5mm	(G)	Screw M4 x 19mm	(H)	Backply Stopper
							
	36 units		16 units		20 units		20 units
(I)	List H	(J)	Shelf Support	(K)	Push To Open	(L)	Screw M4 x 15mm
							
	1 unit		8 units		5 units		2 units
(M)	Ring Plastic	(N)	Door Buffer	(O)	Hinge	(P)	Glass Shelf Clip
							
	2 units		4 units		4 units		4 units
(Q)	Adaptor	(R)	Drawer Slide	(S)	Cable Holder	(T)	Corner Bracket
							
	1 unit		3 set		2 units		2 units
(U)	Screw M4 x 12mm	(V)	Anti-Tip Bracket	(W)	Screw M4 x 10mm		
							
	8 units		2 units		8 units		

Tools Required





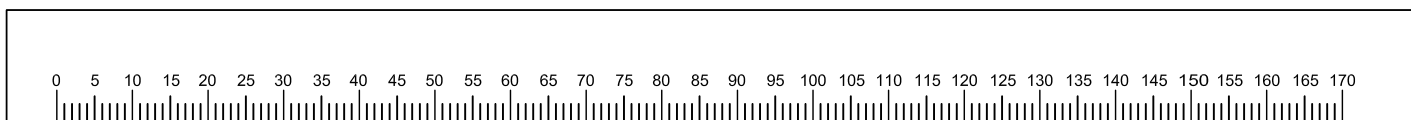






Ruler - Use this to measure your screws (mm)




Assembly Instructions

Step 1


						
A x 34	B x 34	D x 20	E x 6	K x 3	T x 2	U x 2

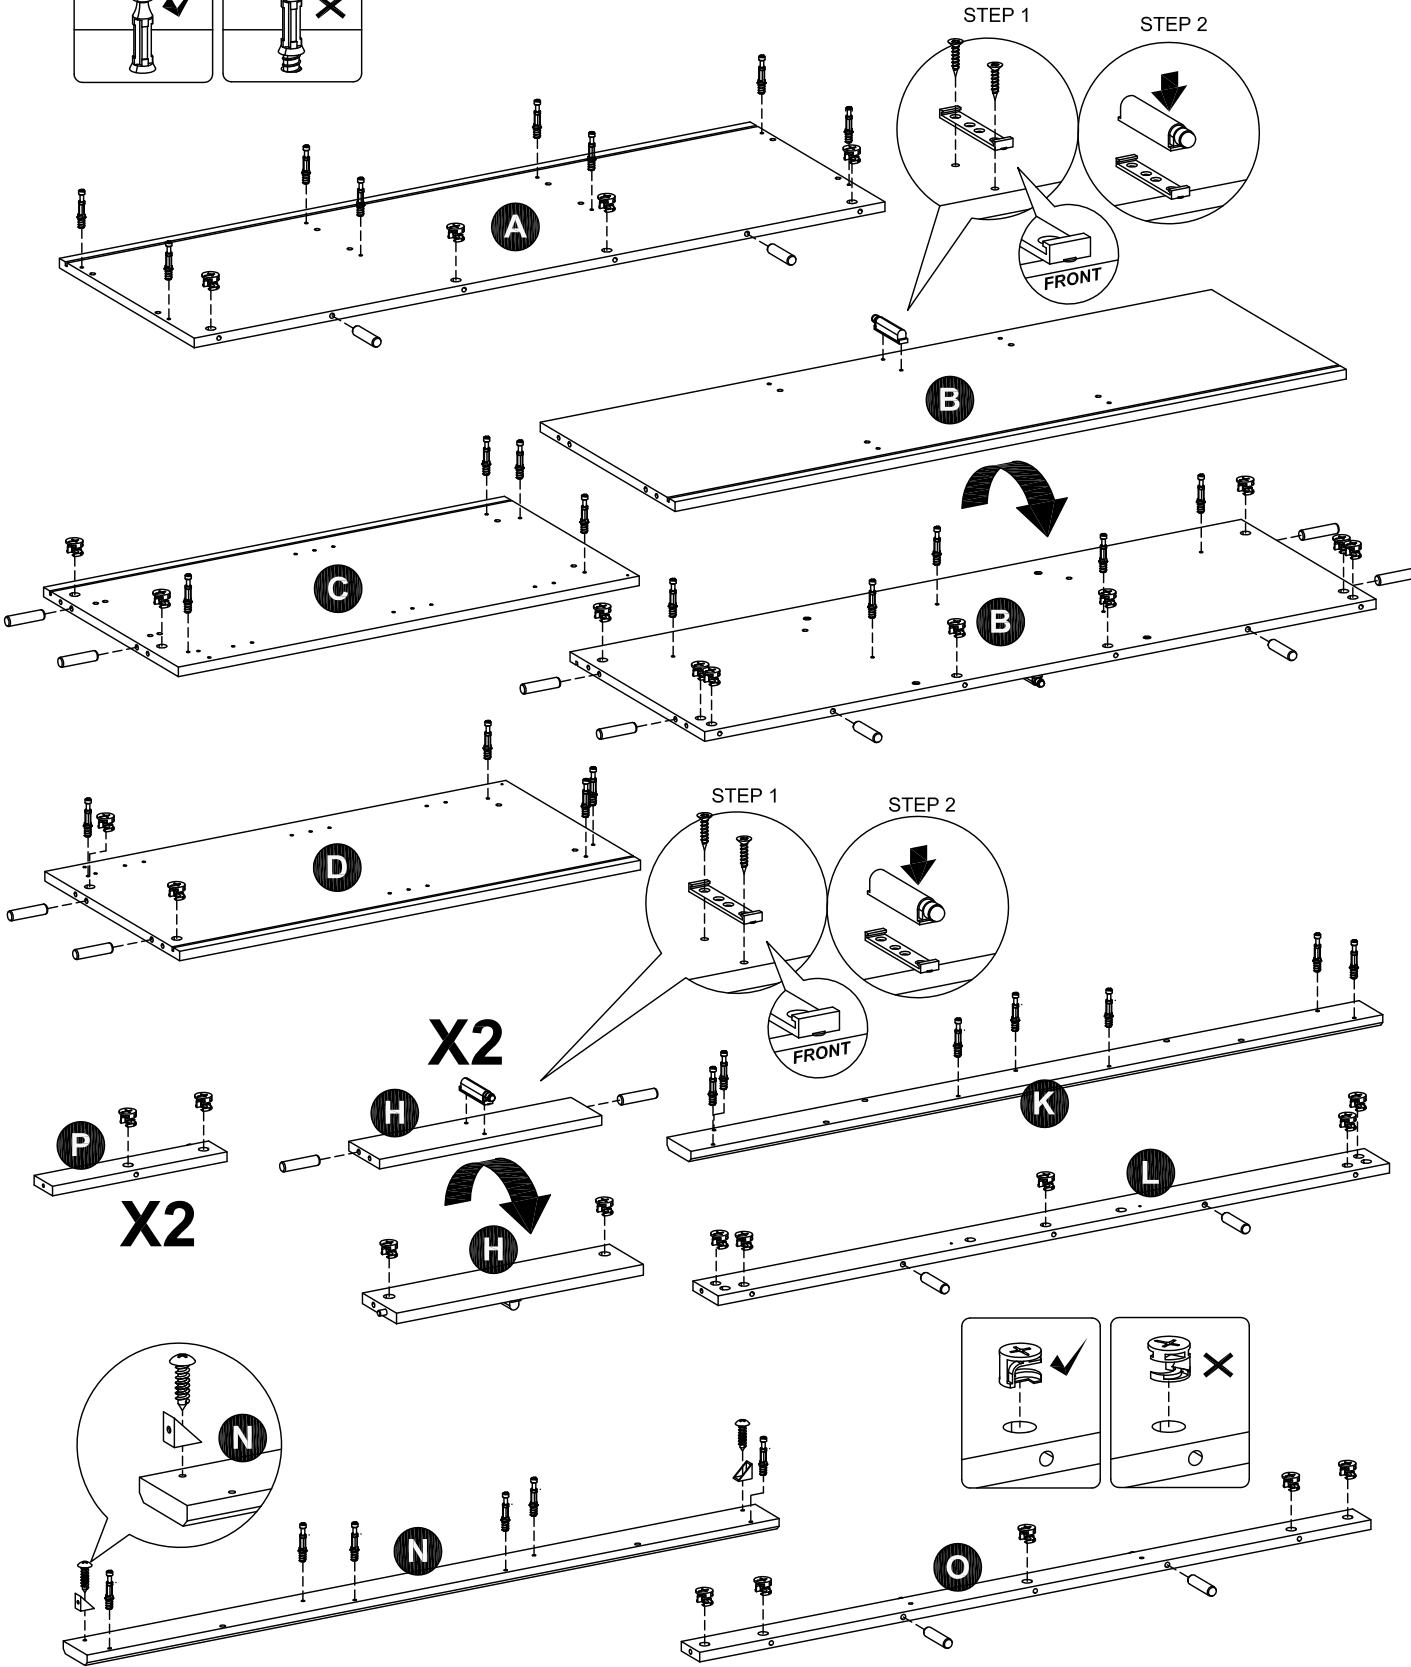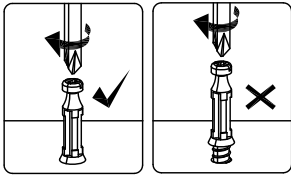


Step 2

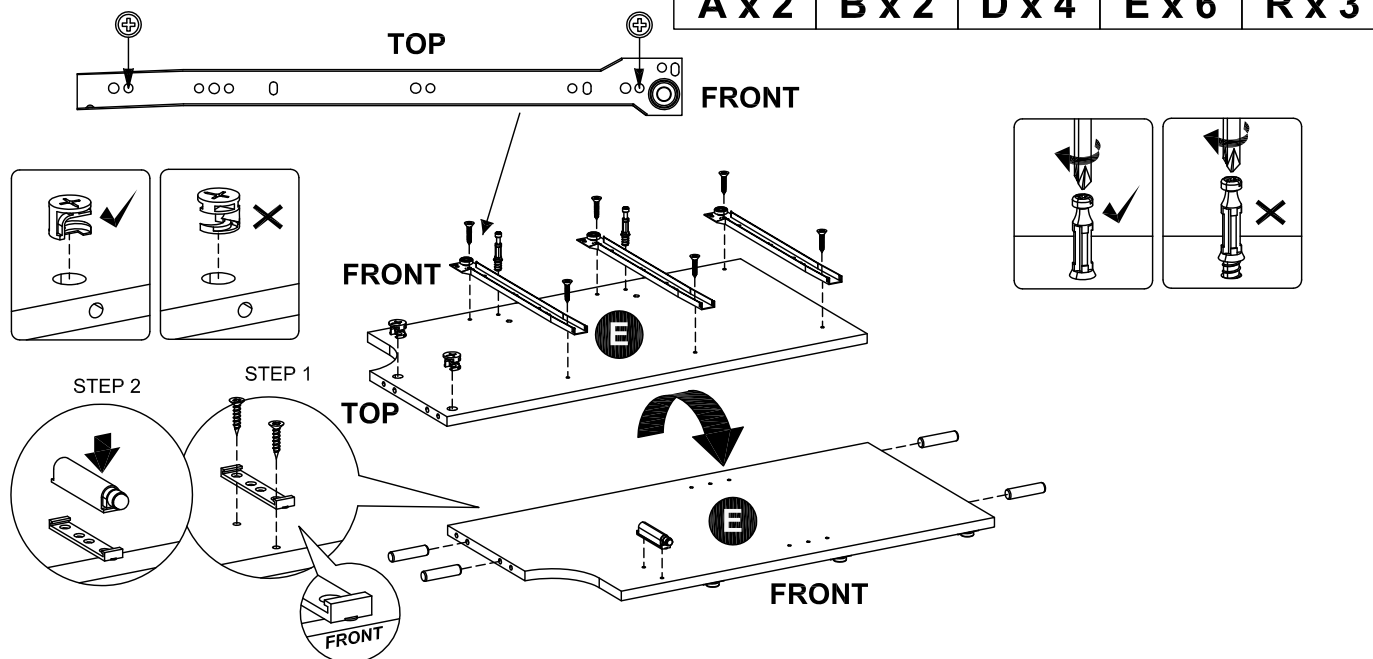


Step 3

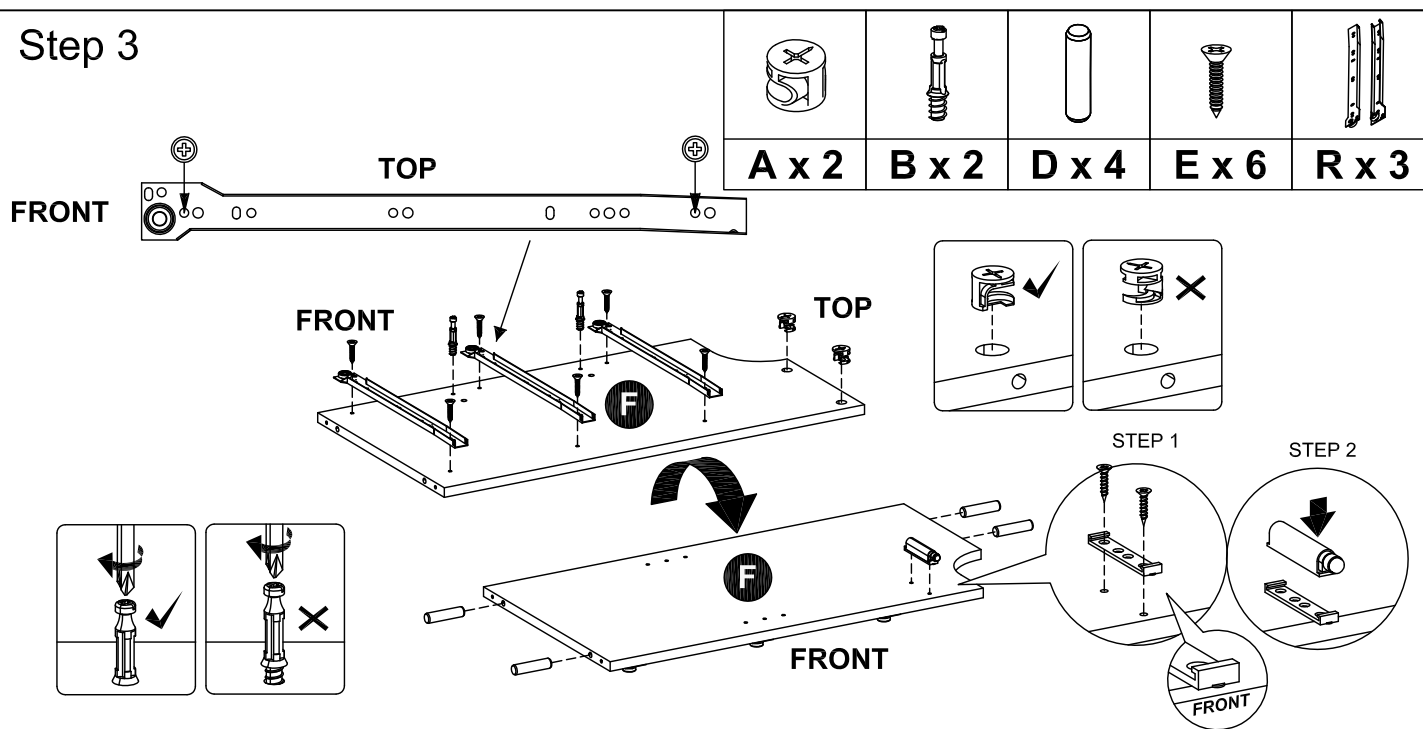

Step 4

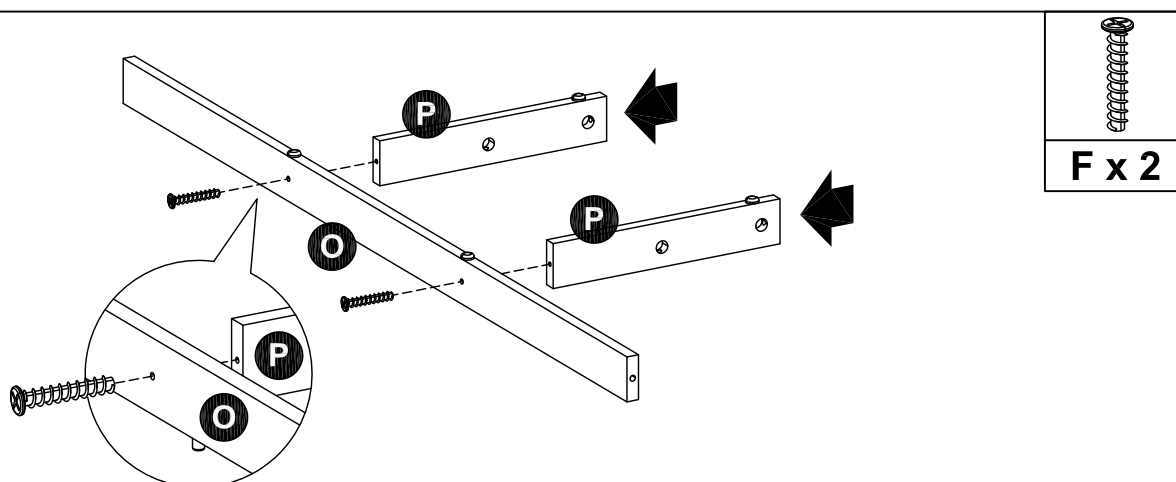


Step 5

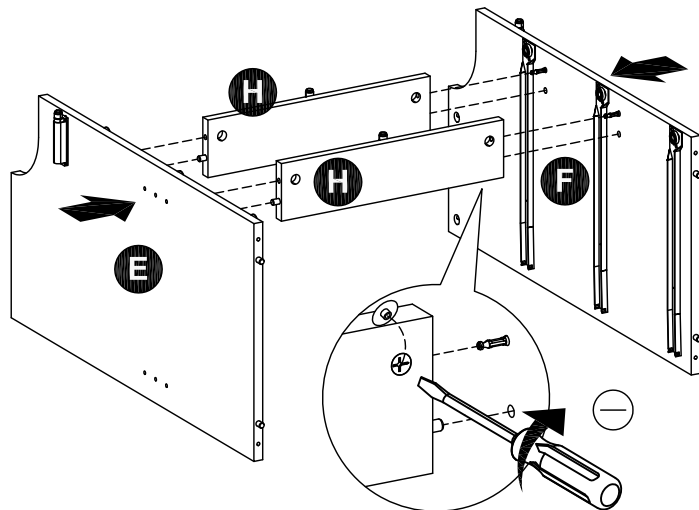


C x 4

Step 6

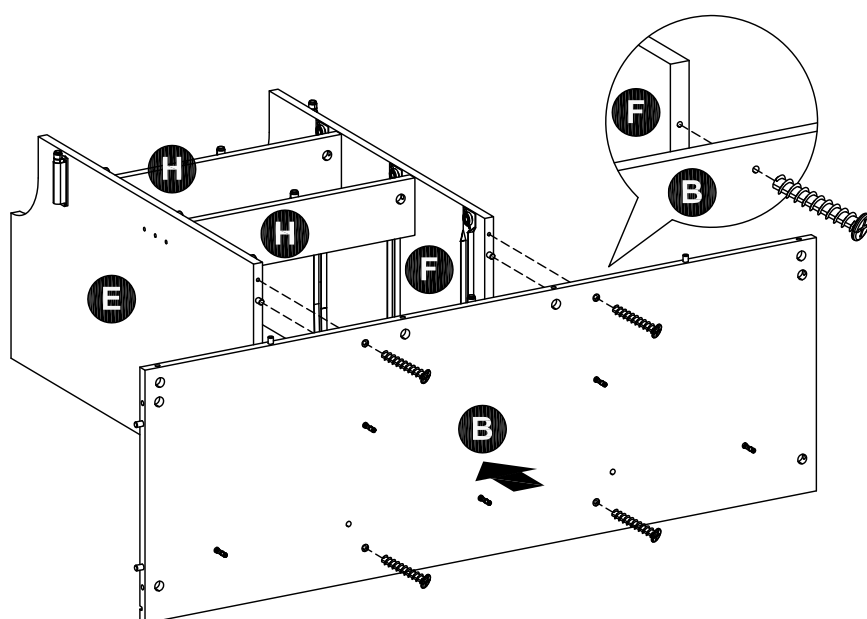



F x 4

Step 7

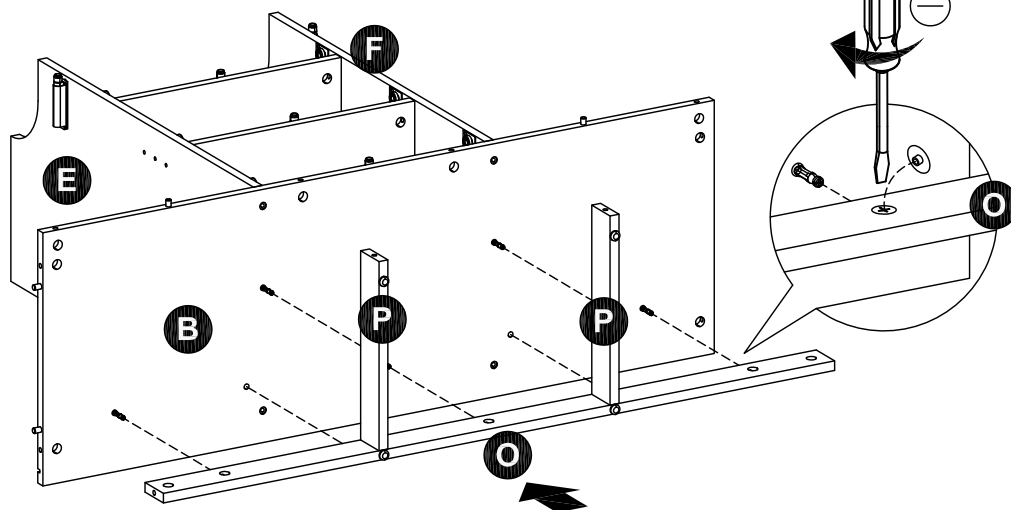


C x 5

Step 8

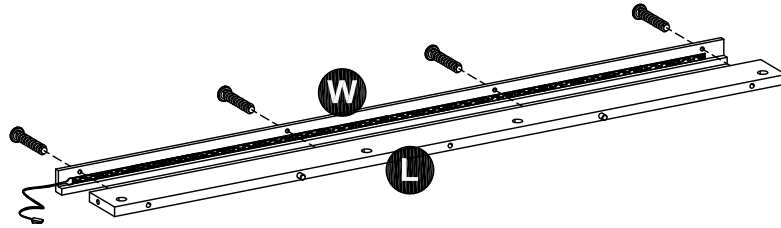


F x 4

Step 9

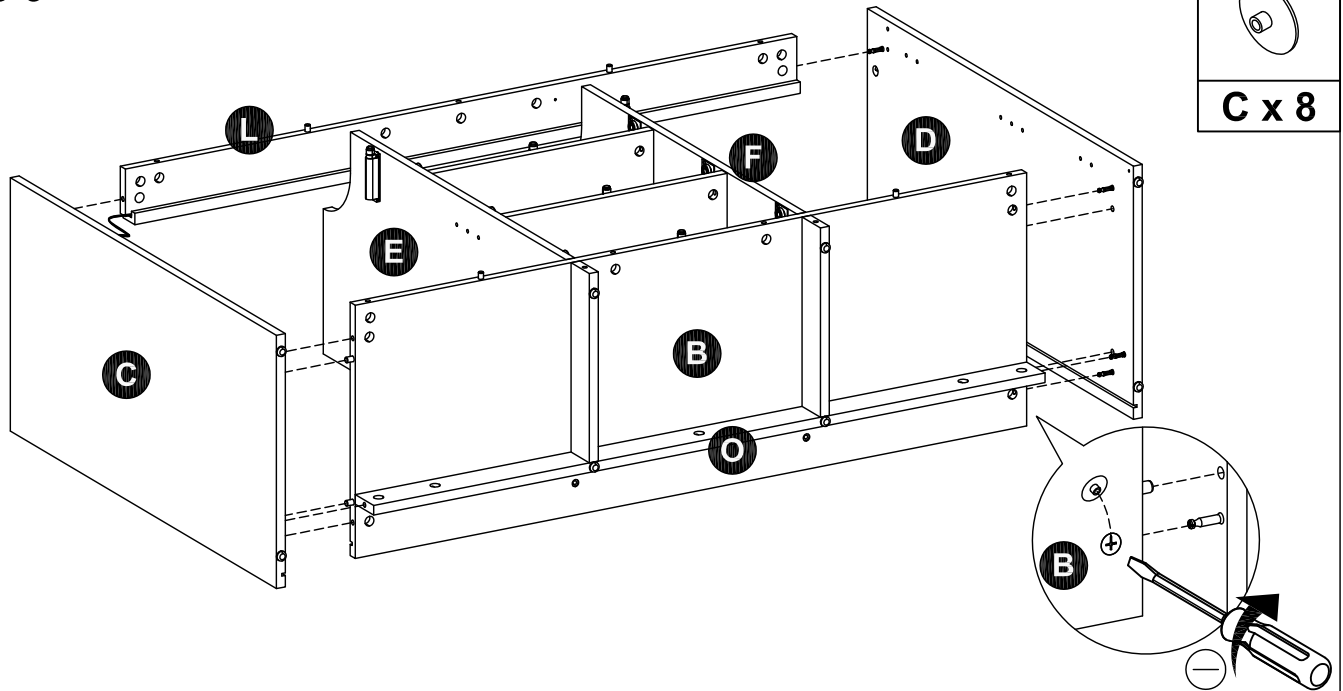

C x 8

Step 10


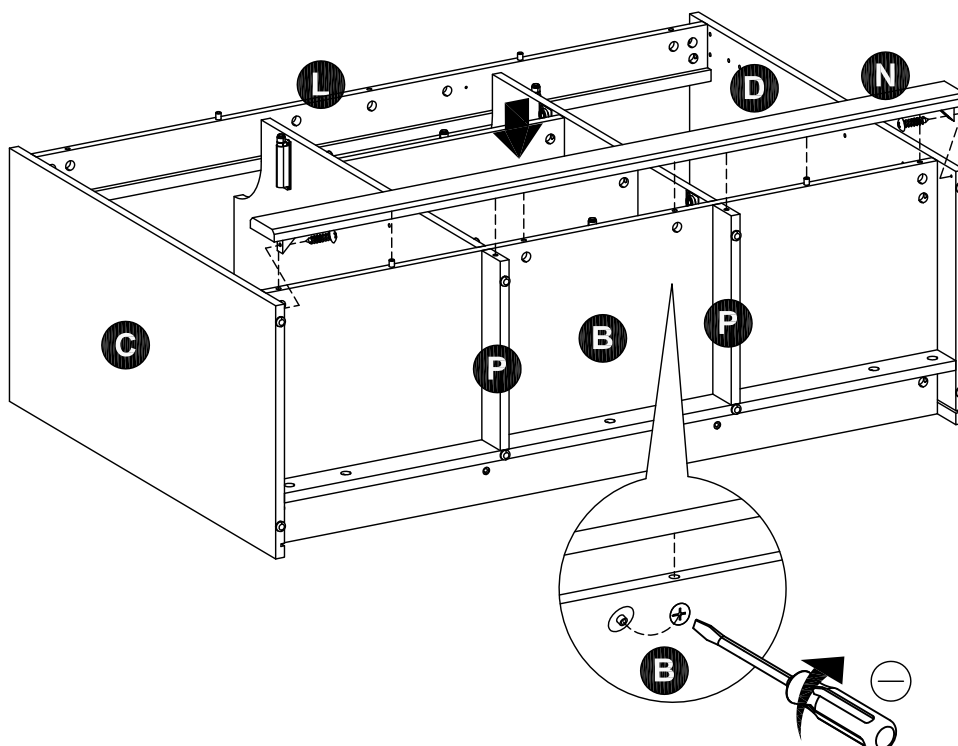


C x 6




U x 4

Step 11

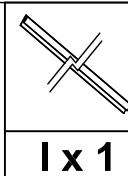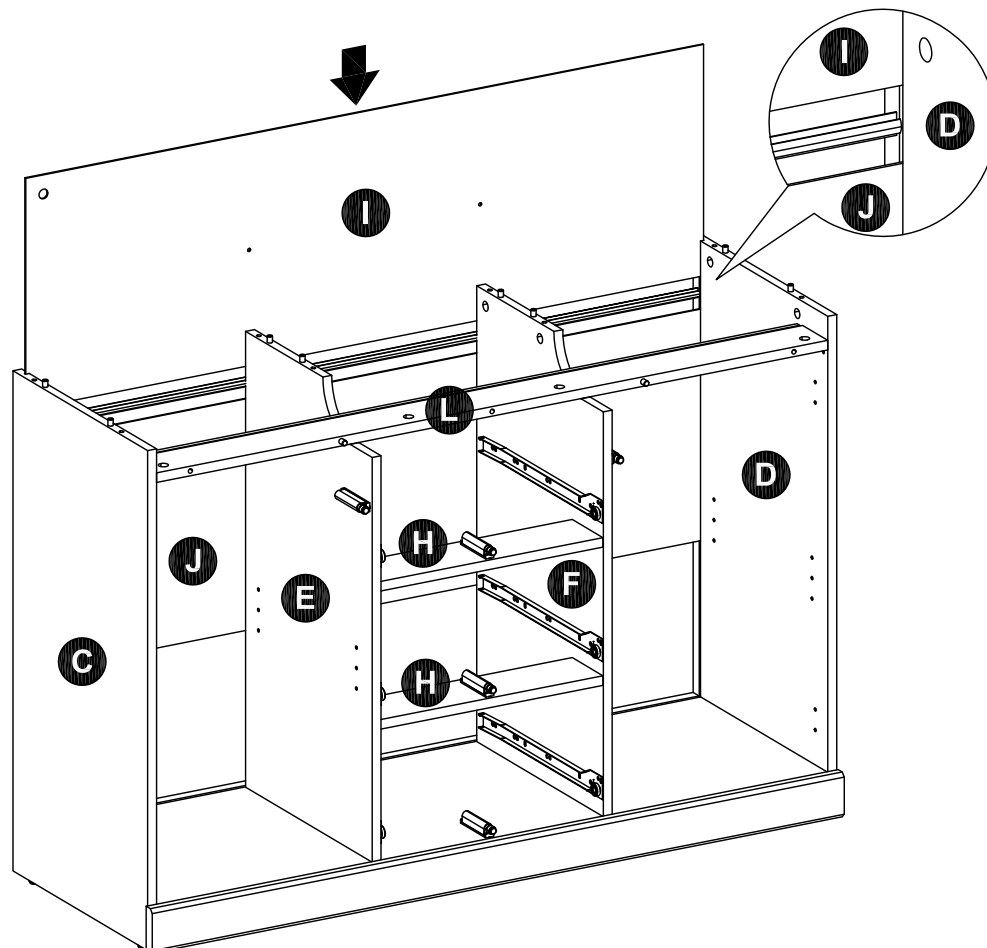


I x 1


Step 12

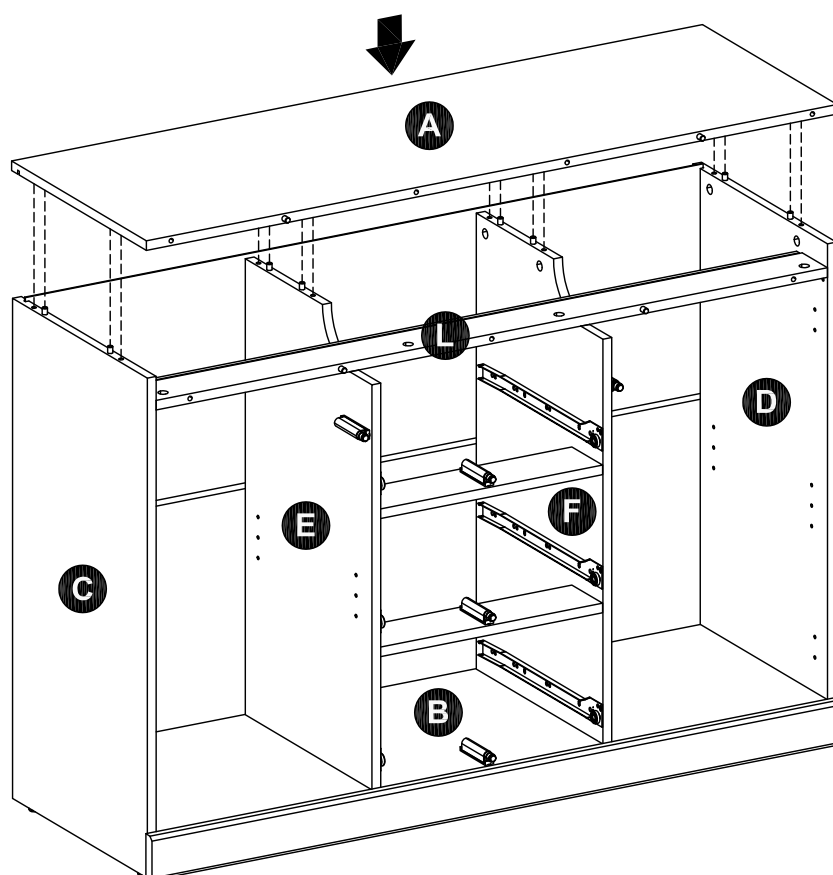





C x 8

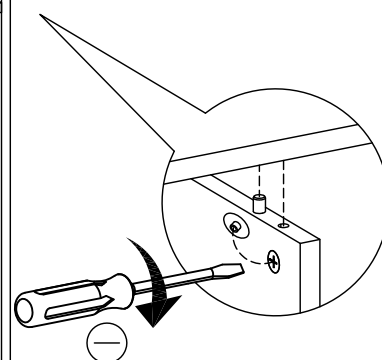


Step 13

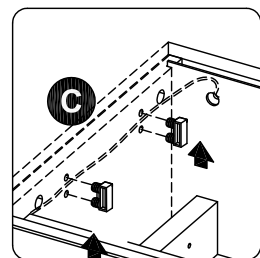





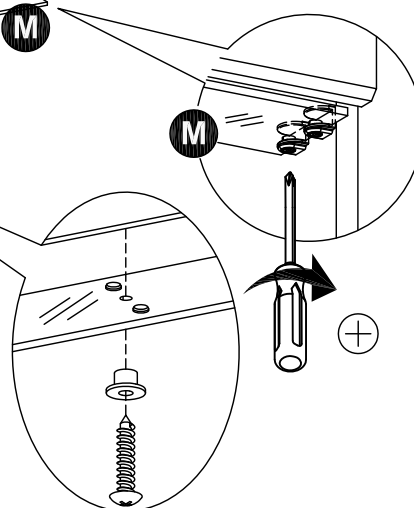
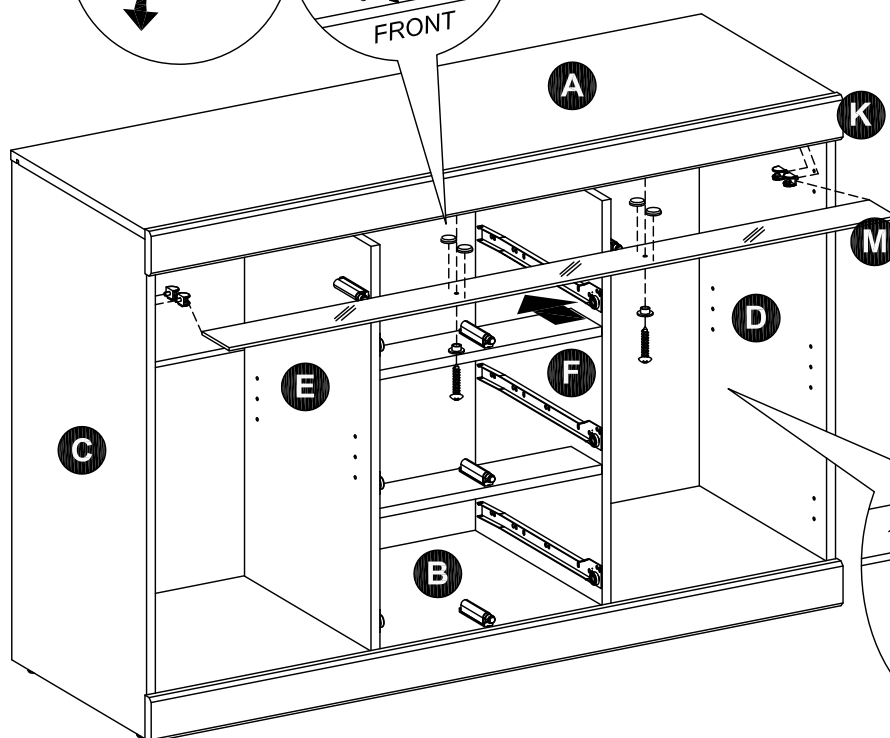
	
C x 3	S x 2

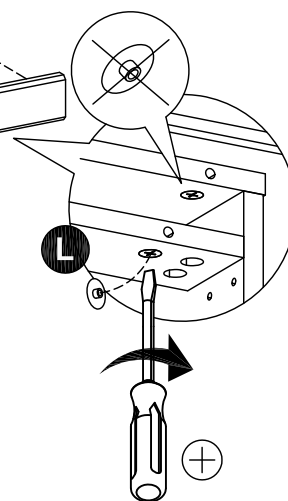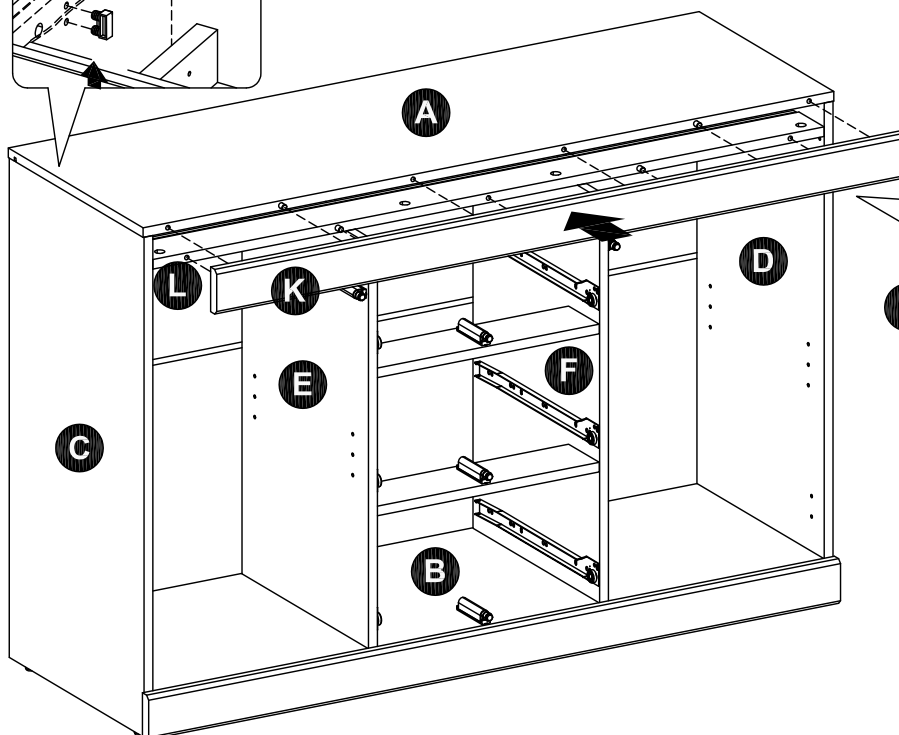



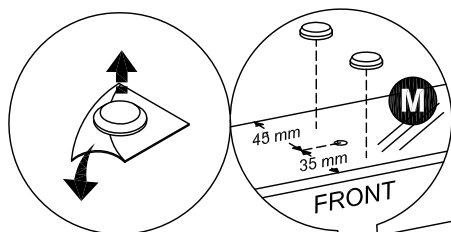


Step 14




			
L x 2	M x 2	N x 4	P x 4




Step 15


				
E x 2	G x 20	H x 20	U x 4	V x 2

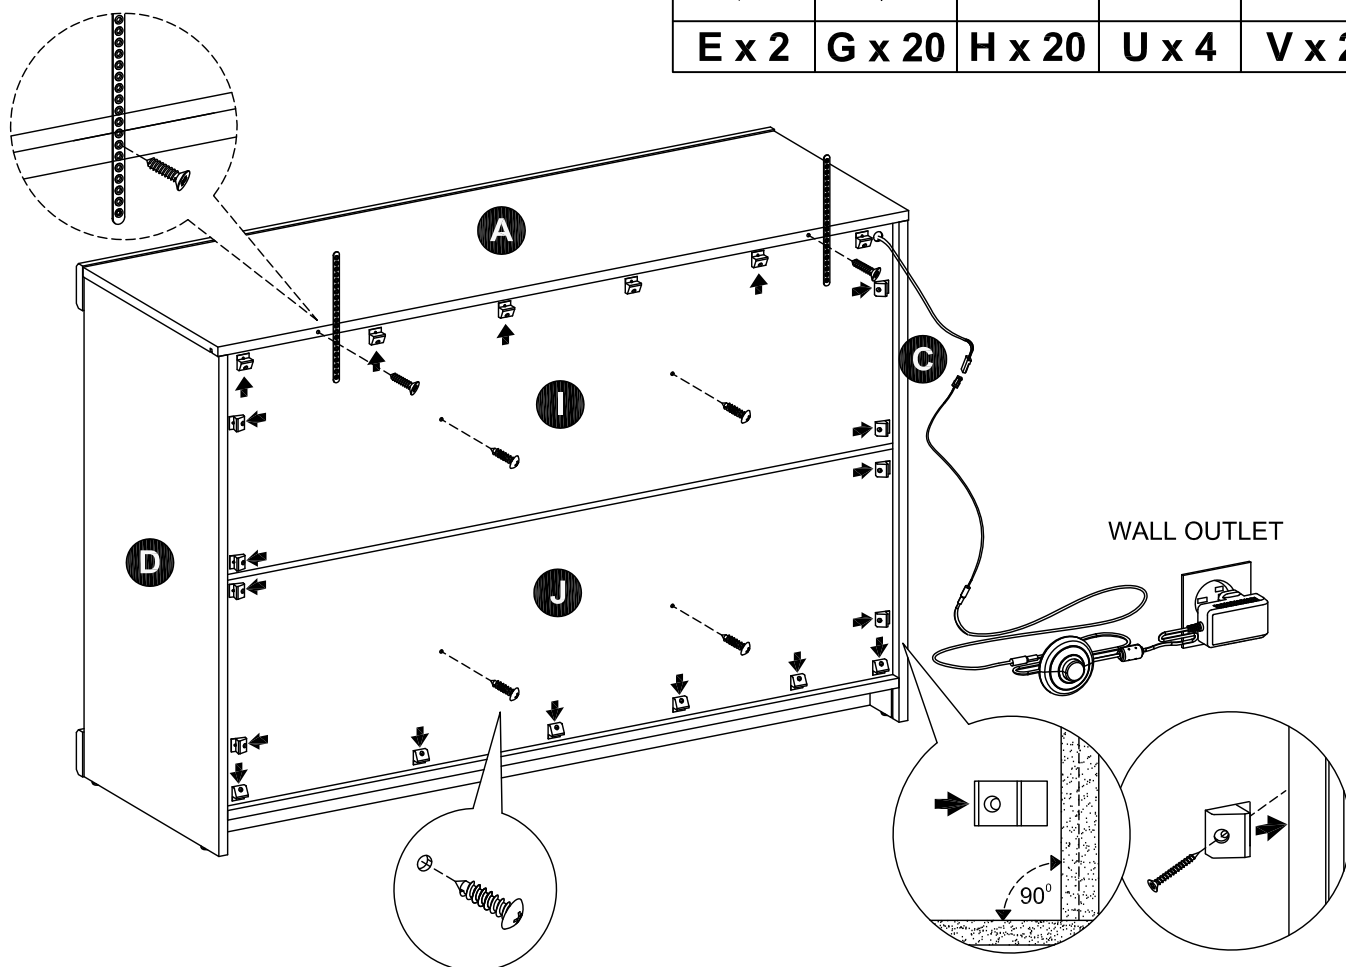



STEP 1

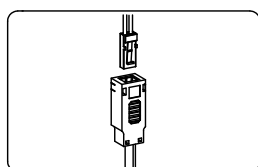


STEP 2

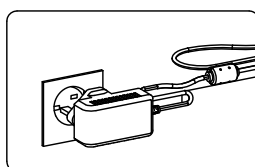


STEP 3

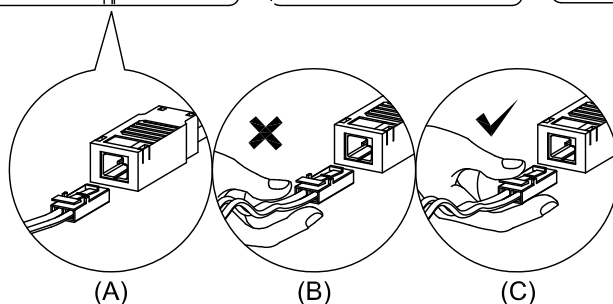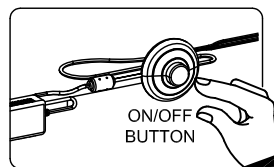

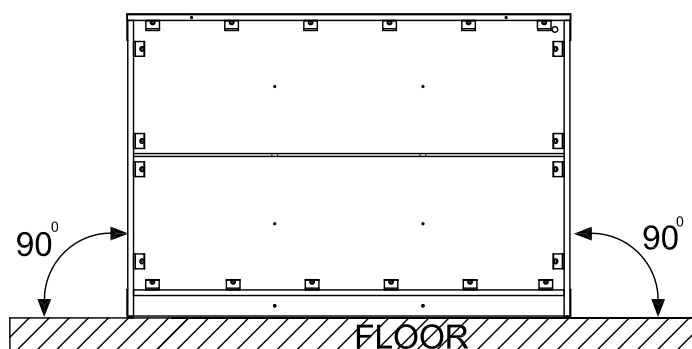


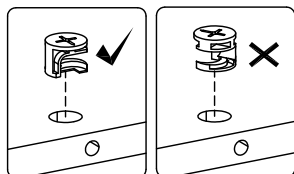
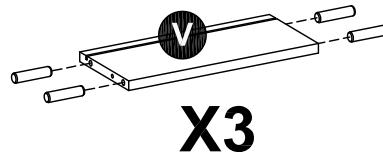
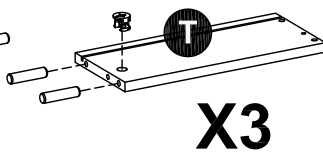
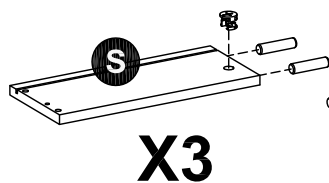
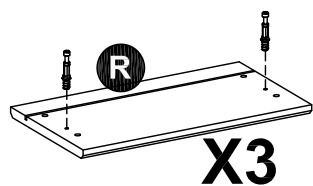
PLEASE ENSURE THAT EACH OF FOUR CORNERS OF THE CABINET ARE SQUARE



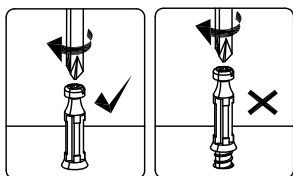

Step 16




		
A x 6	B x 6	D x 24






Step 17

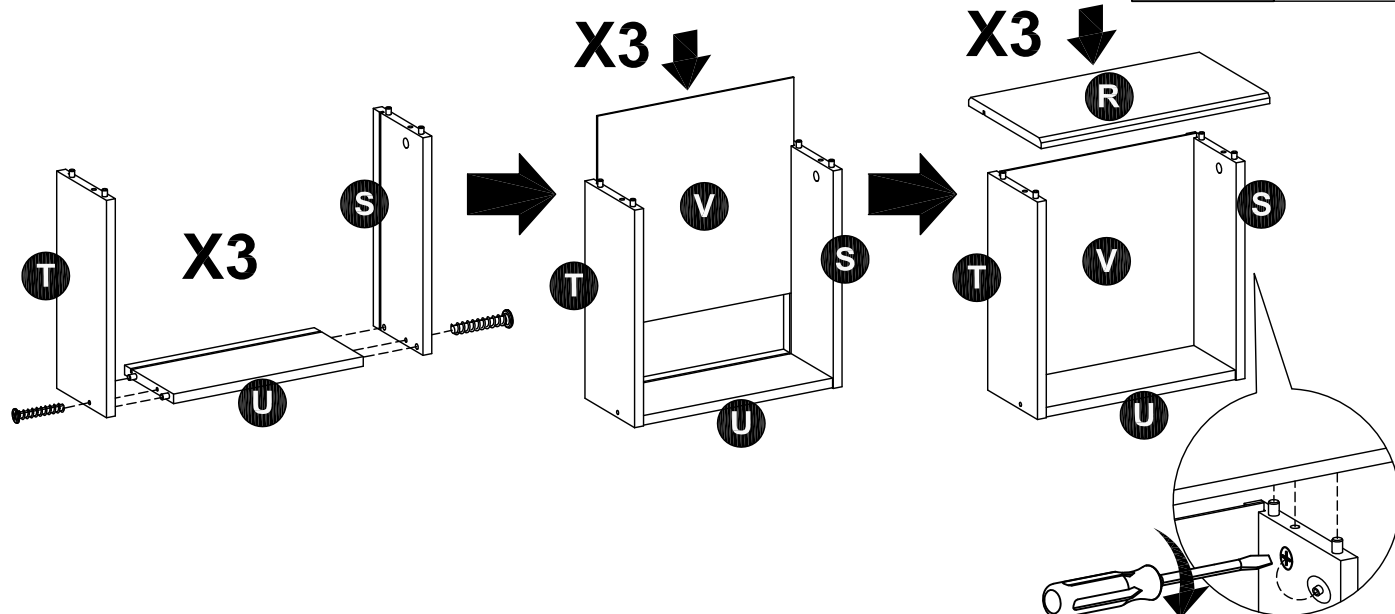	
C x 6	F x 6




Step 18


	
E x 12	R x 3

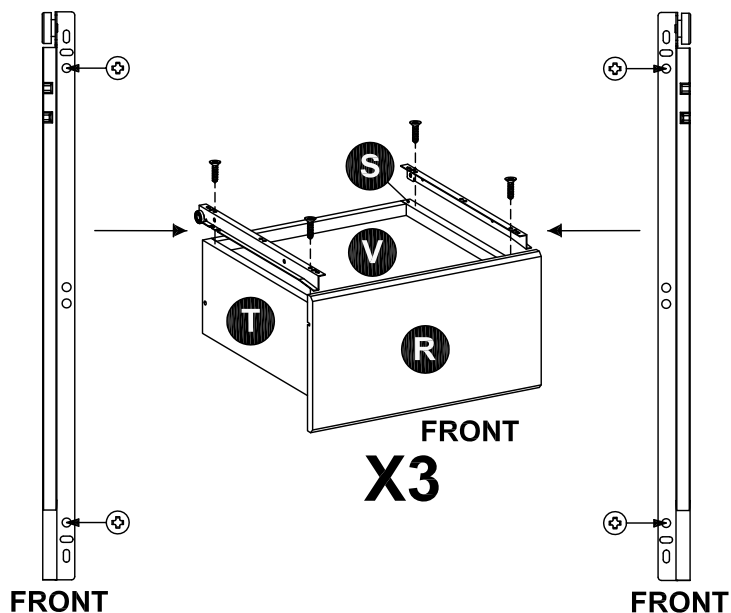

Step 19

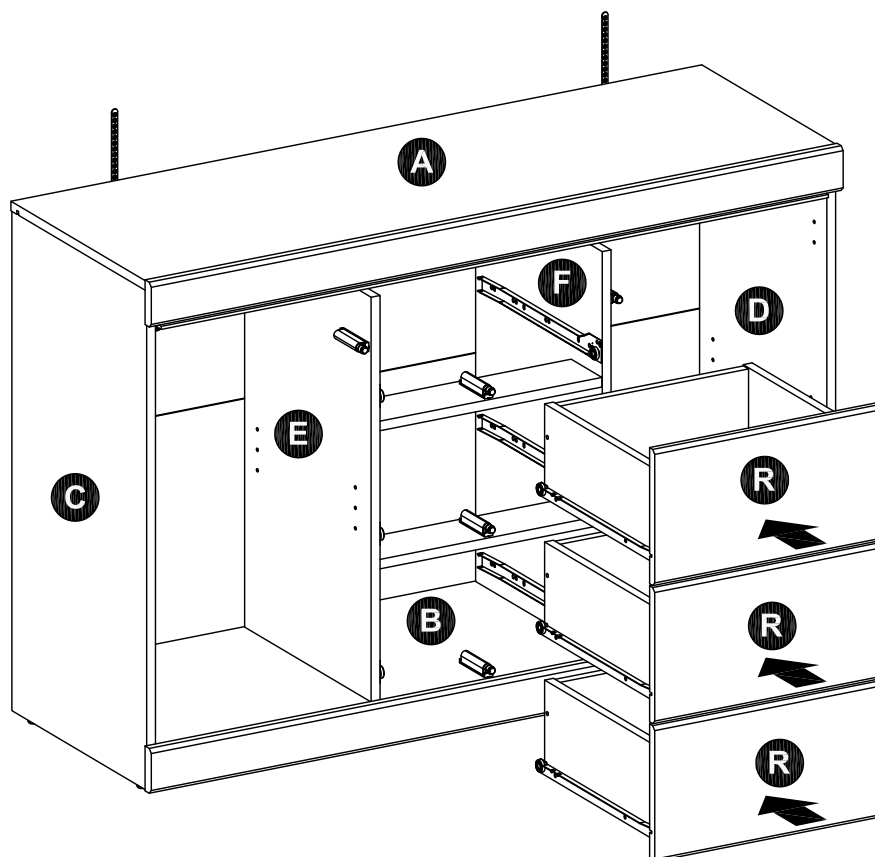




Step 20

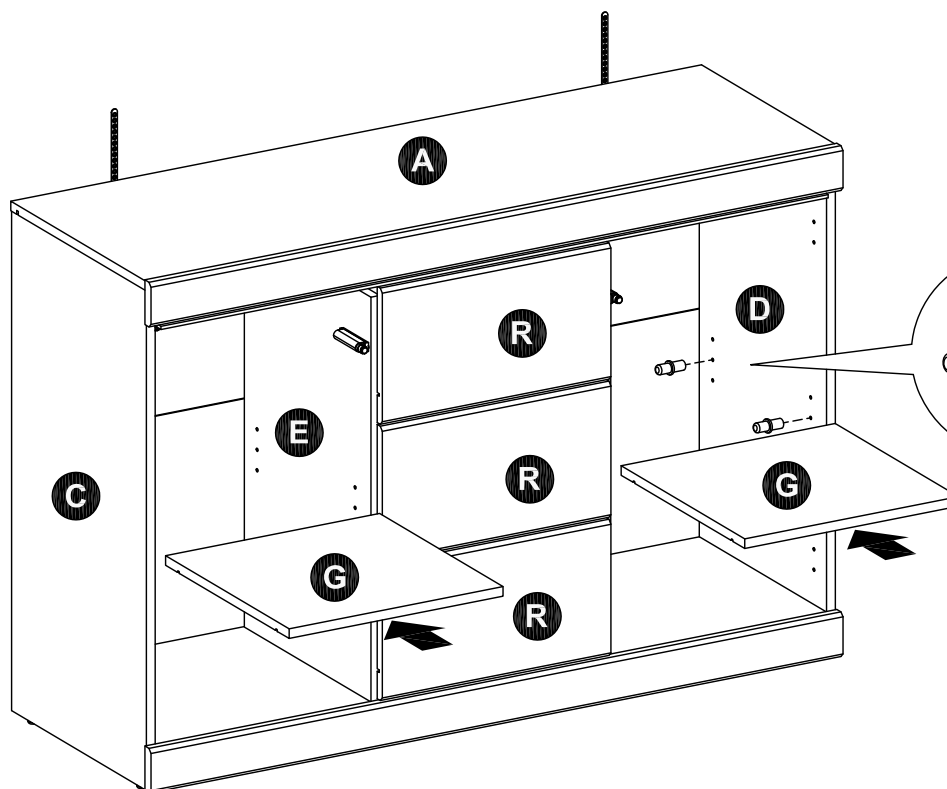


J x 8


Step 21

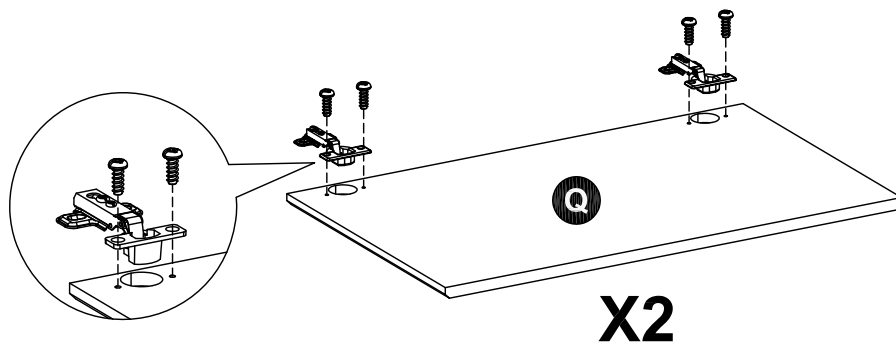

	
W x 8	O x 4

Step 22

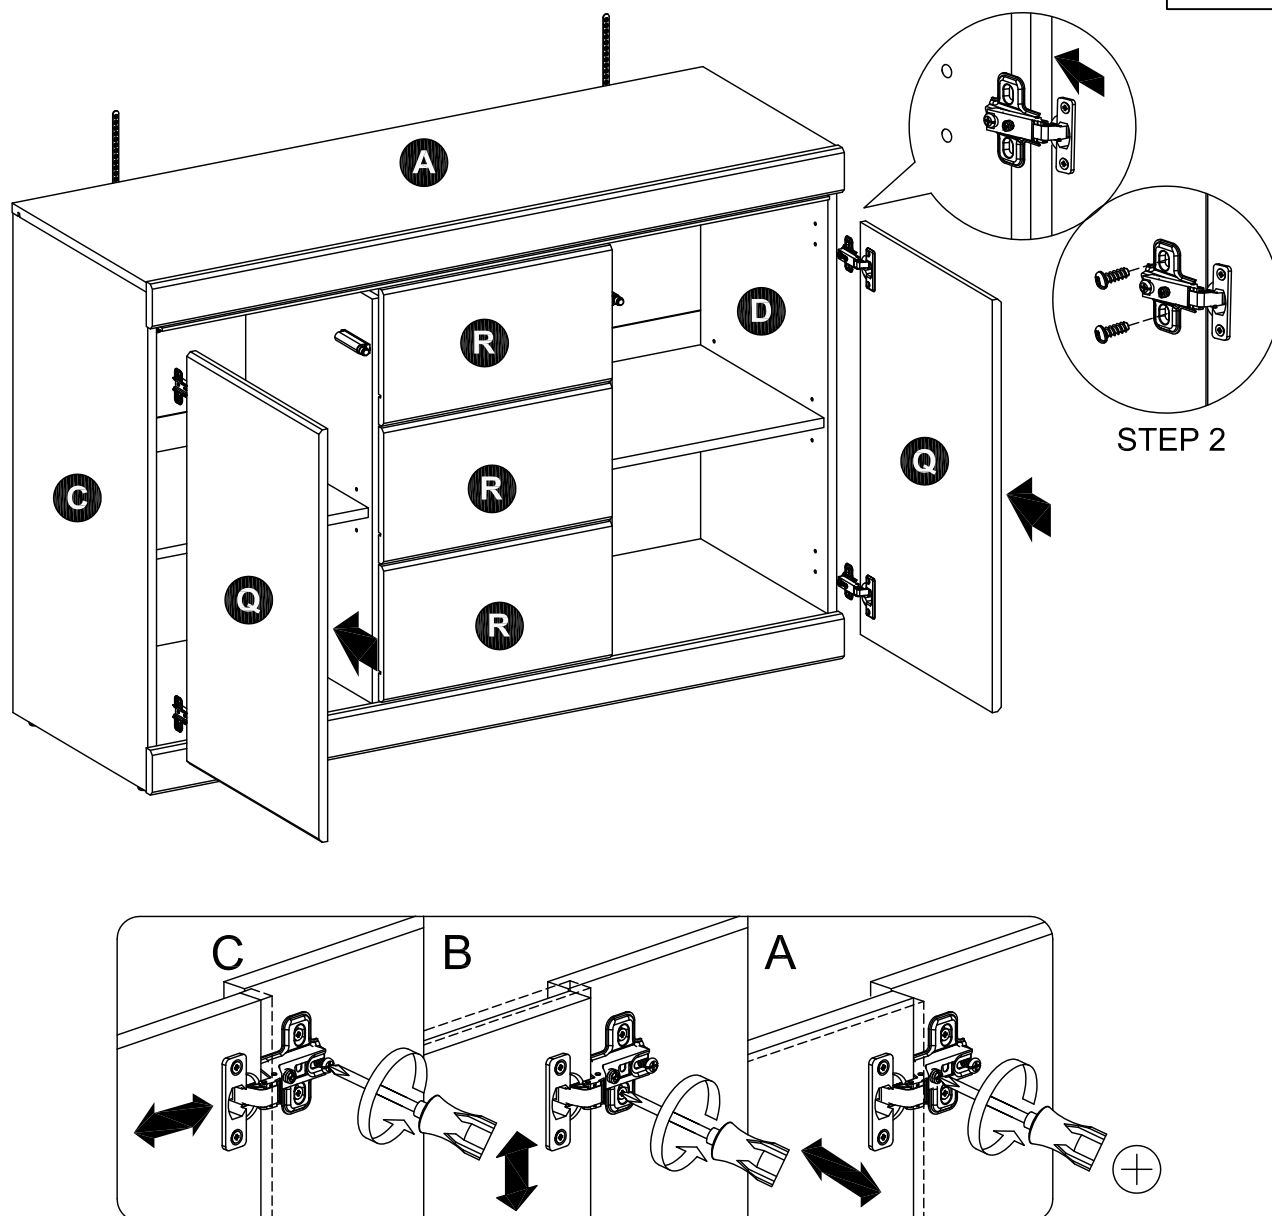



O x 4

FITTING OF ANTI-TIP BRACKET


STEP 1:

Pull the screw in the top panel hole of your furniture

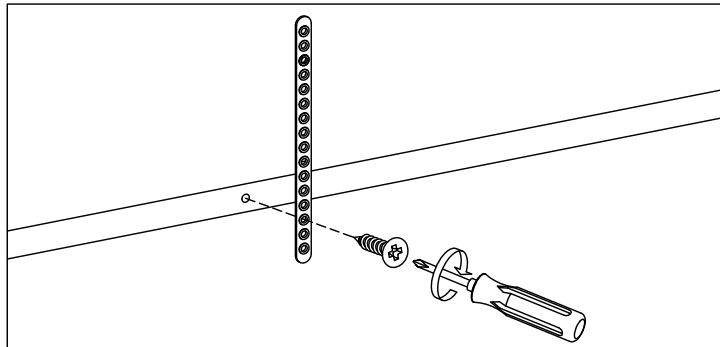


STEP 2:

Make a hole on the wall and pull the wall plug in

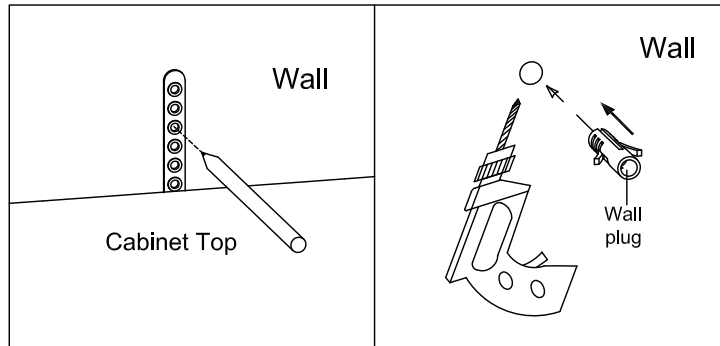

STEP 3:


Pull the screw in the wall plug hole

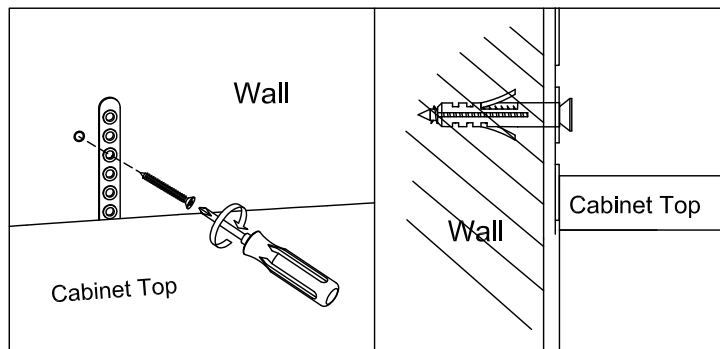


NOTE: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The brackets and screws which to fix the bracket on to the furniture are provided only.

HARDWARE LIST

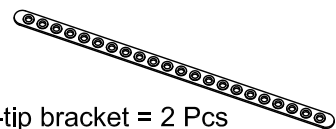

Anti-tip bracket = 2 Pcs



Screw 6 x 13 MM = 2 Pcs