


# 3 Drawer Bedside Cabinet

Assembly Instructions - Please keep for future reference

003 xx 9400

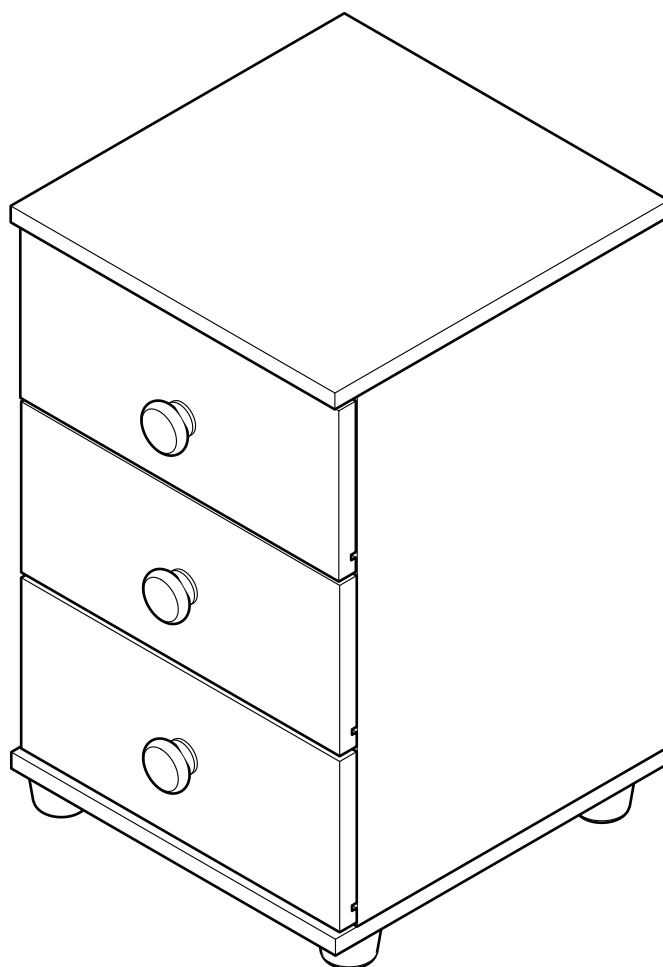

## Dimensions

Width - 34.2cm

Depth - 35.2cm

Height - 54.9cm



MADE IN  
GREAT BRITAIN

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 01709 534123**  
Please turn to back page for important information when contacting Customer Helpline.



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Do Not dispose of packaging until assembly complete.**

- Dispose of all packaging carefully and responsibly when assembly complete.

## Care and maintenance

- To protect the furniture, position the furniture out of direct sunlight and away from direct heat sources such as radiators and fires.

- Do not place the furniture in excessively dry and humid conditions.

- From time to time check that there are no loose screws on this unit.

- Always lift furniture when moving it (do not drag) otherwise the joints may be damaged.

- Do not place hot or cold objects on the surface, always use protective mats to avoid marking the furniture.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

- Clean spills up immediately

- Dust surfaces with a soft, dry, lint free cloth.

- More stubborn marks can be removed using a damp (not wet) cloth. Wipe the surface dry immediately using a soft lint free cloth.


- Do not use detergents, abrasive cleaning products or cleaning products that contain ammonia, solvents or silicone as these may damage the surface finish.

# Components - Panels


Please check you have all the panels listed below



**Important** - Thick lines ——— indicate finished edges

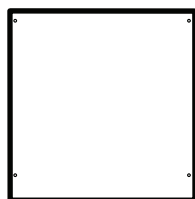


**4991** Top (34.2x35.2cm)

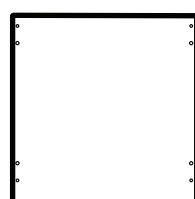

**4885** Bottom (34.2x35.2cm)




**4886** Backpanel (51.0x33.4cm)




**622xx7002**

Left drawer side x3 (30x10cm)




**623xx7002**

Right drawer side x3 (30x10cm)




**624xx7003**

Drawer back x3 (27.6x10cm)



**4718**

Draw Front x3  
(33.6x15.6cm)

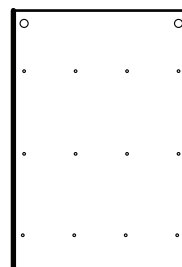

**1230**

End Panel x2  
(48.4x32.8cm)



**4883**

Drawer Bottom x3  
(28.7x29.8cm)






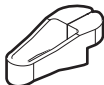












# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 01709 534123** Please turn to back page for important information when contacting Customer Helpline.


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly, In some case more fittings may be supplied than are required.


<b>A</b>  Large cam x 4 Code 760001103	<b>B</b>  Metal dowel x 10 Code 760003004	<b>C</b>  Small cam x 6 Code 760003005
<b>D</b>  Panel pin x 15 Code 760001012	<b>E</b>  8mm screw x 12 Code 700003510	<b>F</b>  Panel pin guide x 1 Code 684004501
<b>H</b>  Runner x 6 Code 760001040	<b>J</b>  9mm bolt x 6 Code 690001078	<b>K</b>  Wooden Dowel x 4 Code 770001006
<b>L</b>  7/8" CSK Screw x 4 Code 690001018	<b>M</b>  M4x20 Bolt x 3 Code 700002006	<b>N</b>  Assembly Screw x 4 Code 690001075
<b>O</b>  Pine Glide Foot x 4 Code 720006001	<b>O</b>  White Glide Foot x 4 Code 720365001	<b>P</b>  Timber Knob x 3 Code 640031118
<b>P</b>  Ceramic Knob x 3 Code 640006001		

**IMPORTANT:** Depending on the colour variation you purchased this unit in, you will have one of the handles and glide feet shown above.


## Tools required



Cross headed screwdriver  
(medium & large )




Tape Measure

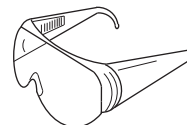

Eye protection  
(when using a  
hammer)




Small Hammer


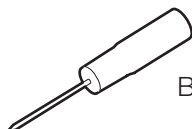


Bradawl

Ruler - Use this ruler to help correctly identify the screws

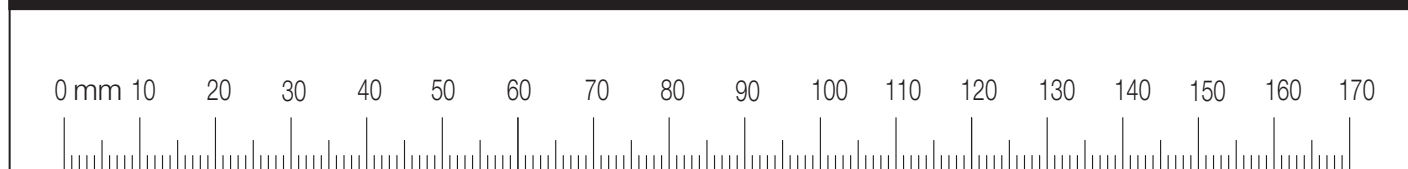

# Exploded View

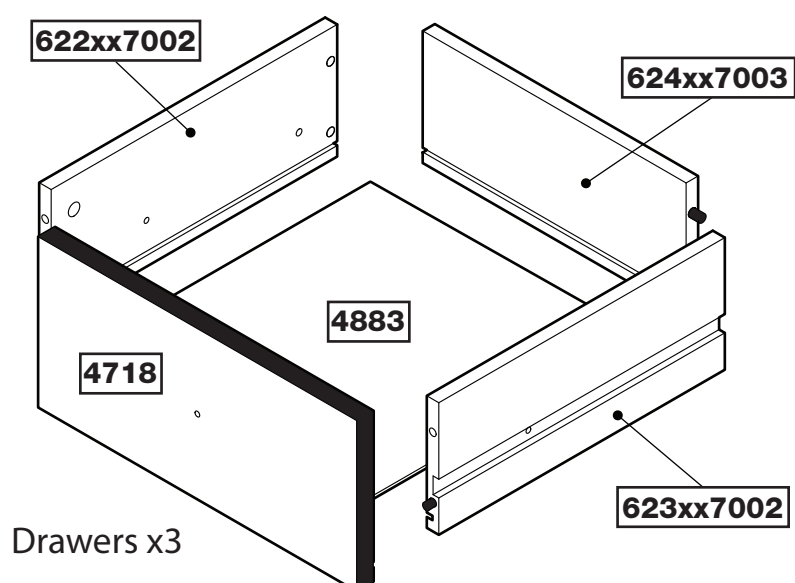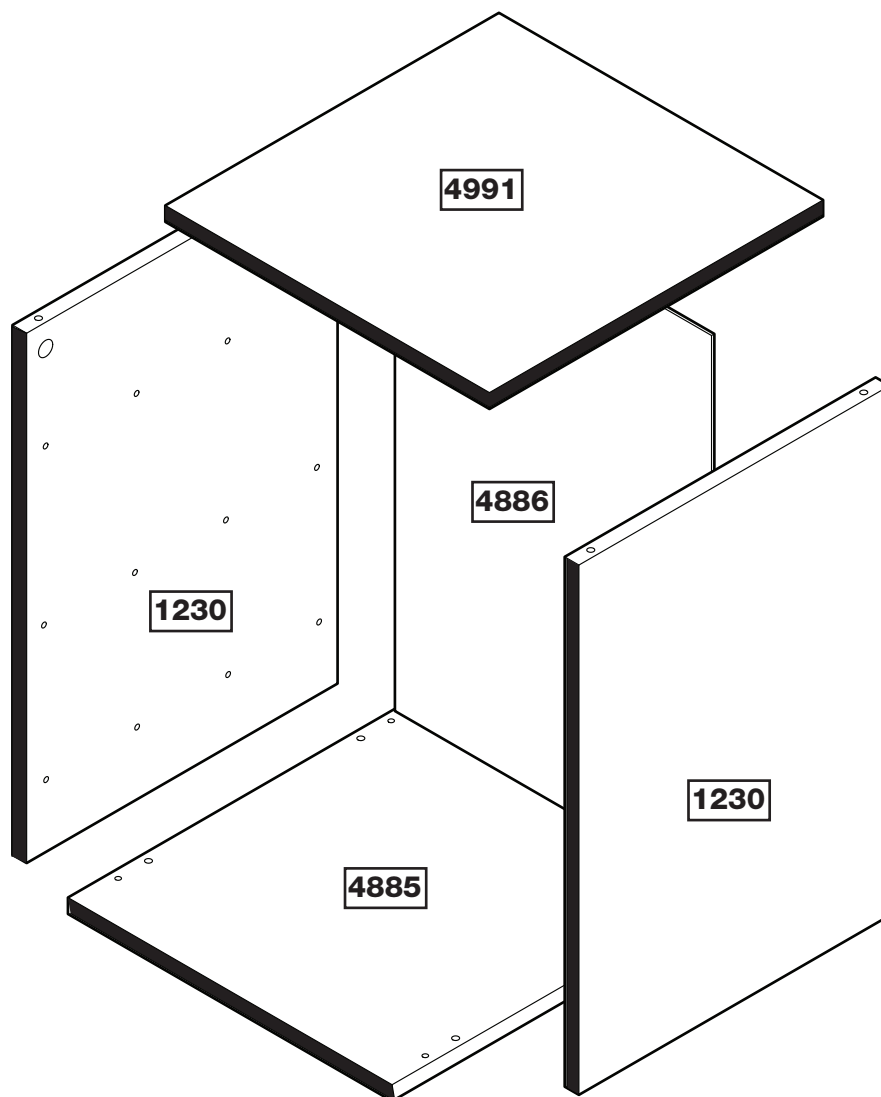

# Assembly Instructions



## Step 1

### Fitting dowels to top panel.

Insert 4 metal dowels **B** into the top panel **4991**.

Note: Tighten metal dowels up fully against the panel.

Do not over-tighten.

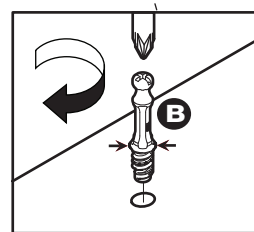
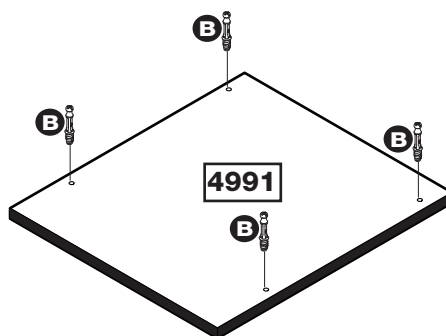


## Step 2


### Fitting cams and dowels to the end panels.

Insert 2 cams **A** into each end panel **1230**.

Insert 2 wooden dowels **K** into each end panel **1230**.

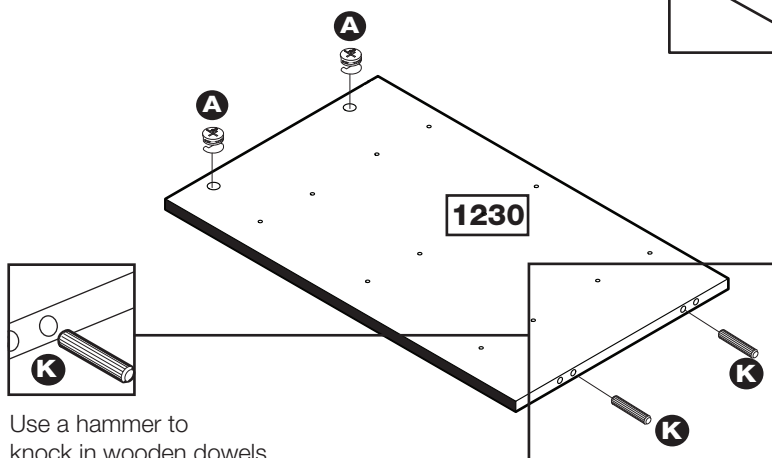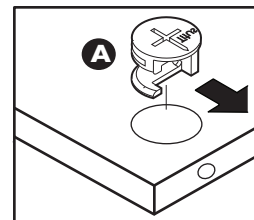

Use a hammer to knock in wooden dowels **K** into inner holes.

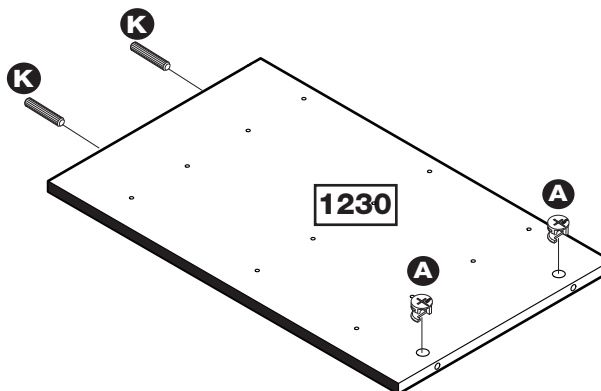


# Assembly Instructions

## Step 3

### Attaching runners to end panels

**Important :-  
Lay end panels out  
as shown**


Position the runner so that the front hole of the runner lines up with the pre-drilled hole nearest to the edge of the panel. Use screws **E** to secure the runner.

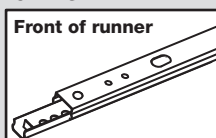

Slide the runner forward revealing the back of the runner. The third hole to the back of the runner should now line up with the second pre-drilled hole.



**Important :-  
Lay end panels  
out as shown**

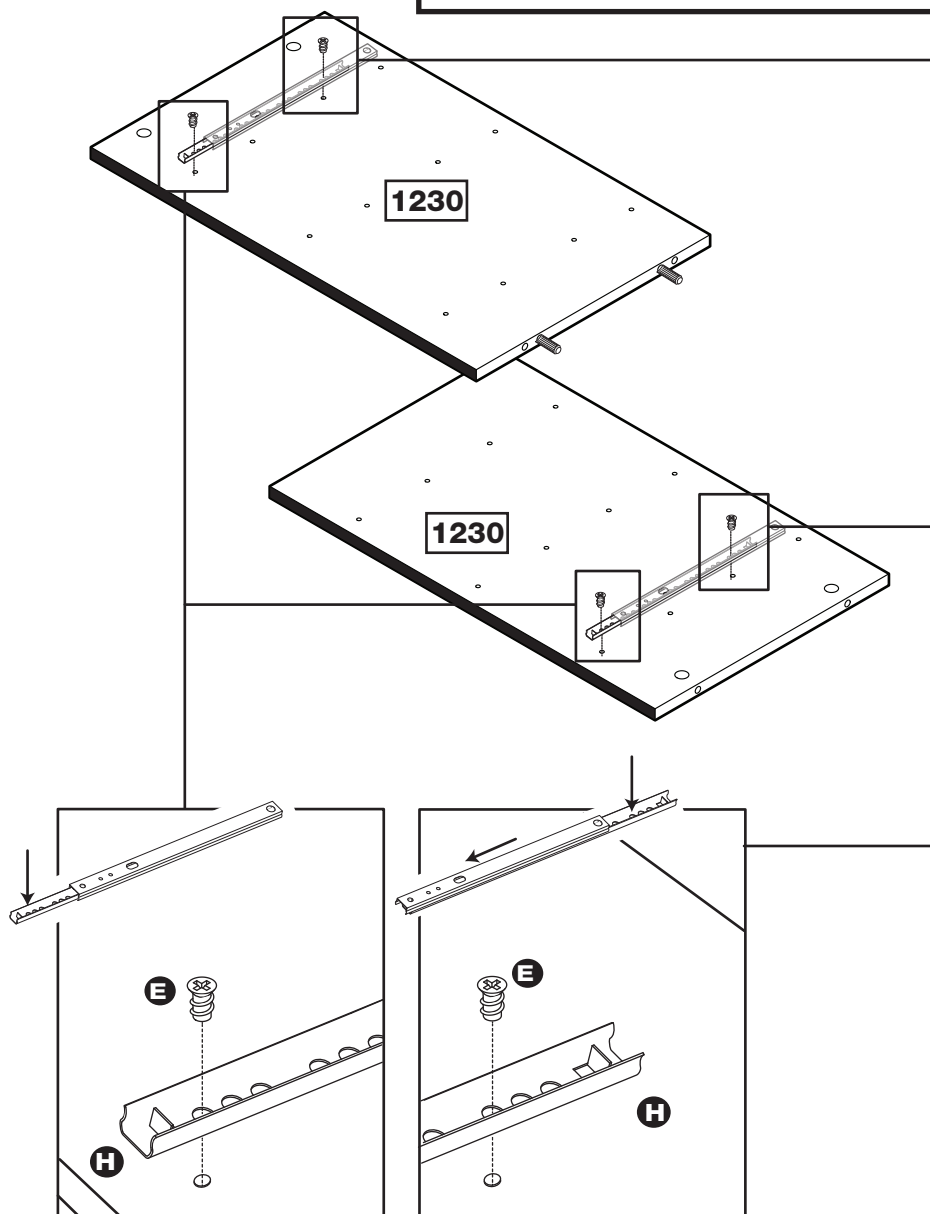


# Assembly Instructions


## Step 4

**A:** Insert small cams into left **622xx7002** and right **623xx7002** drawer sides.

**Note:** Ensure cam arrow points towards the edge with hole.

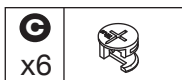


**A**

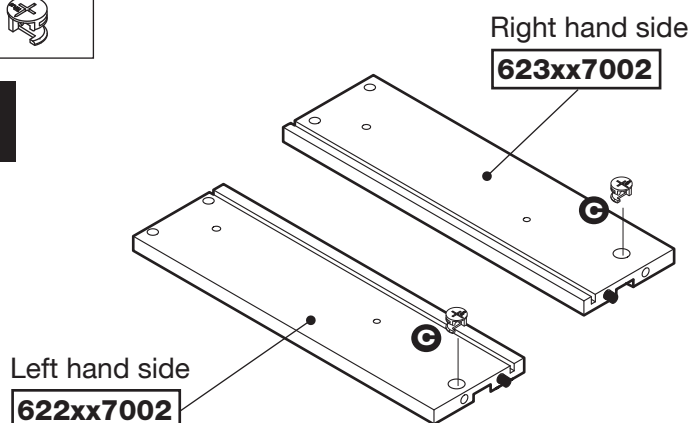

**B:** Insert wooden dowels in drawer back **624xx7003** into holes in left **622xx7002** right **623xx7002** hand drawer sides.


**B**

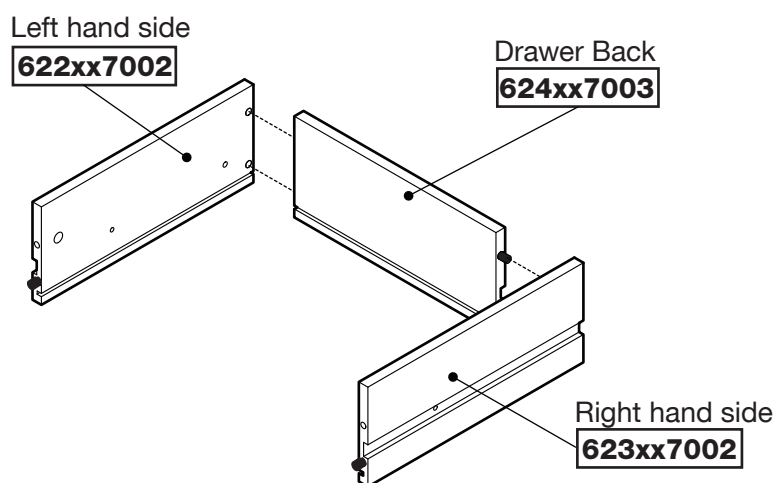

**C:** Insert 2 metal dowels **B** into the the drawer front **4718**



**C**

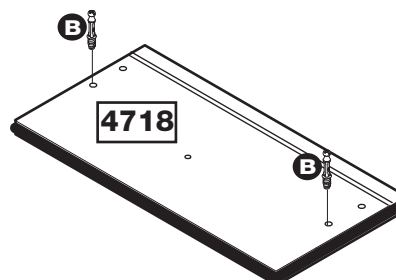


**D:** Sit drawer bottom **4883** into groove on drawer front **4718**.

Ensure foil on the drawer bottom is facing upwards.

**D**

Foil surface facing upwards.  
Plain chipboard surface to underside.

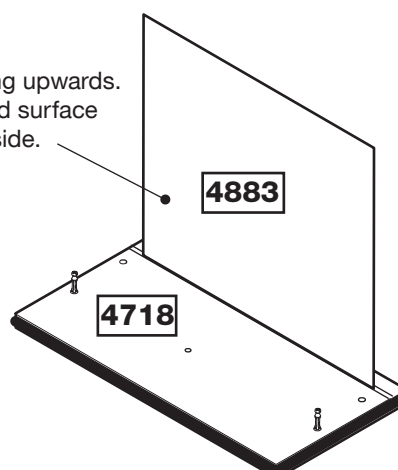




# Assembly Instructions

## Step 4 - Continued


**E:** Locate grooves in left and right drawer sides around drawer bottom and slide down locating cams already inserted in left and right drawer sides onto dowels in drawer front.

Turn cams 180 degrees to lock.

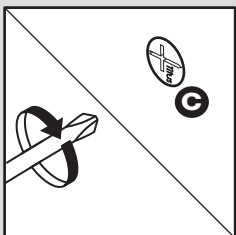


Turn cam 180 degrees to lock

**E**

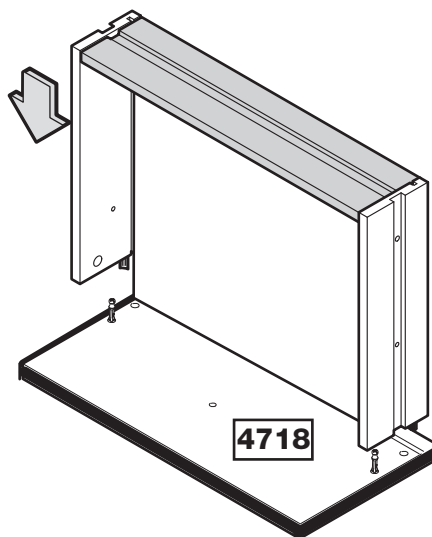

**F:** Secure handles **P** to drawer front **4718** using bolt **M**.

**F**

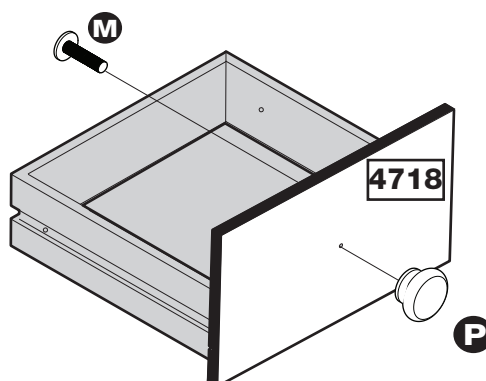


# Assembly Instructions

## Step 5

### Attach the top panel to the end panels.

Connect the dowels in the top panel **4991** to the cams in the end panels **1230**.

Turn cam 180 degrees to lock.


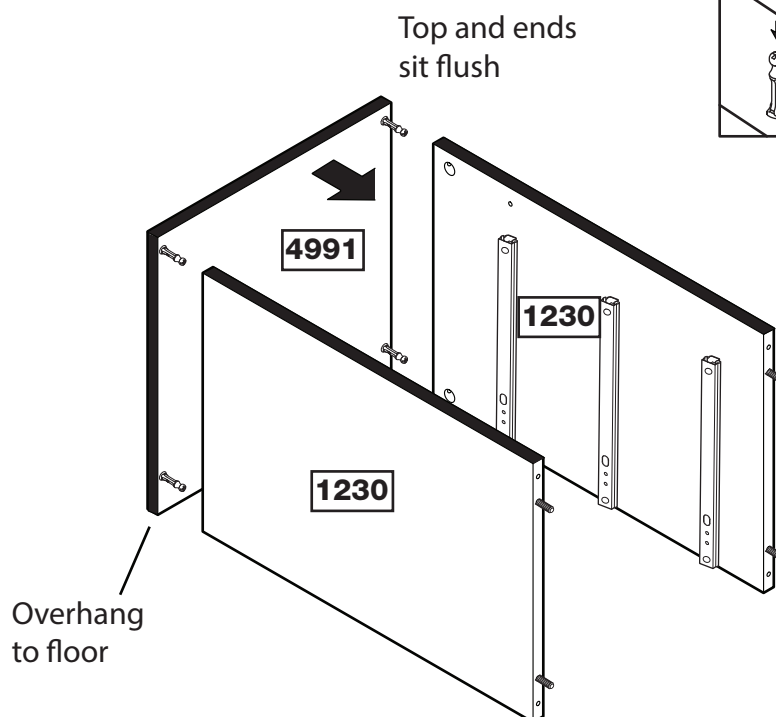


## Step 6

### Attach bottom panel to the end panels.

Locate wooden dowels in end panels **1230** into inner holes on bottom panel **4885**.

Use 4 screws **N** to secure bottom panel **4885** to end panels **1230**.

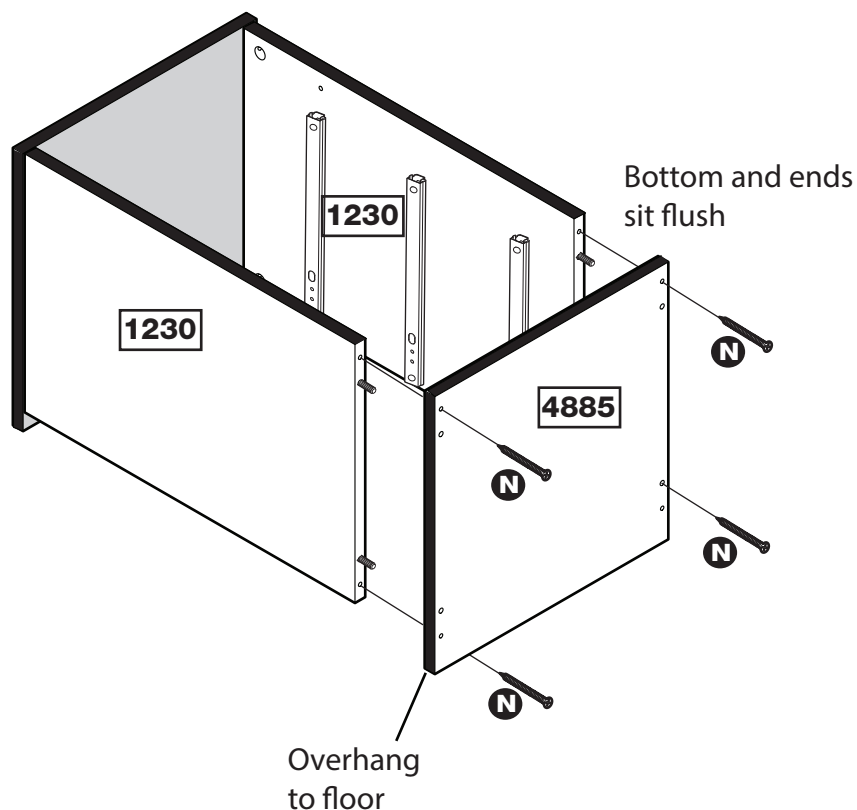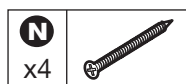

# Assembly Instructions

## Step 7

### Squaring up the unit.


#### IMPORTANT!



Ensure a tape measure is used to square unit up.

Before securing the back it is necessary to square up the unit.

You can do this by measuring between XX - XX and YY - YY ensuring these are the same (DIAG 1). If they are not (DIAG 2) Apply slight pressure as indicated (DIAG 3) until they are the same.


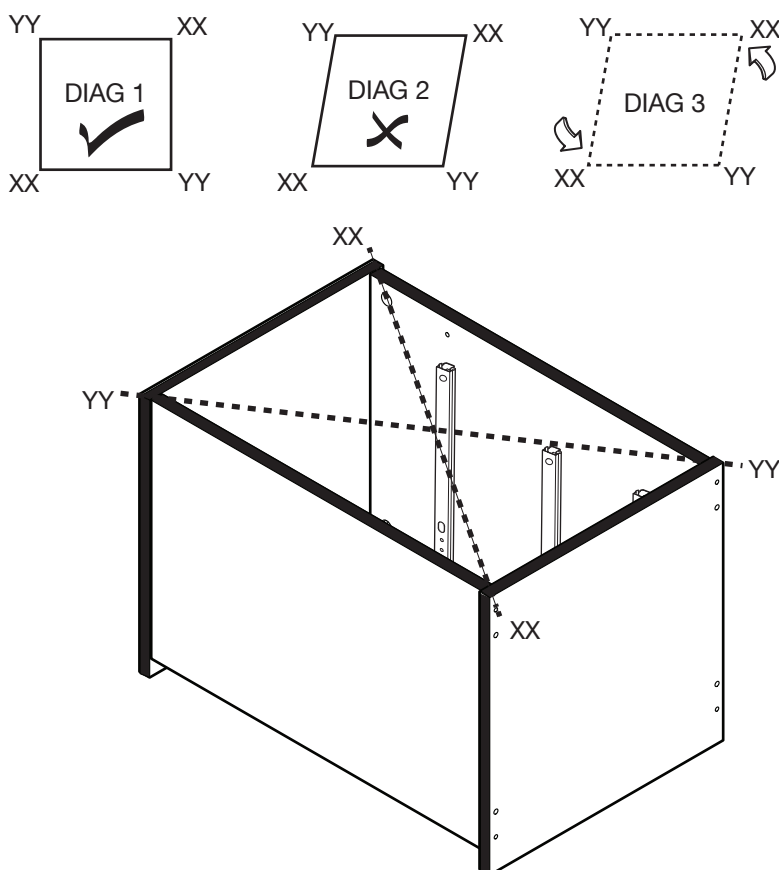


## Step 8

### Attach the back panel to the unit.

Use the panel pin guide when locating the panel pins. This will hold the panel pins vertical and ensure the correct distance from the edge.

**Stand the unit on its top once this step is complete.**

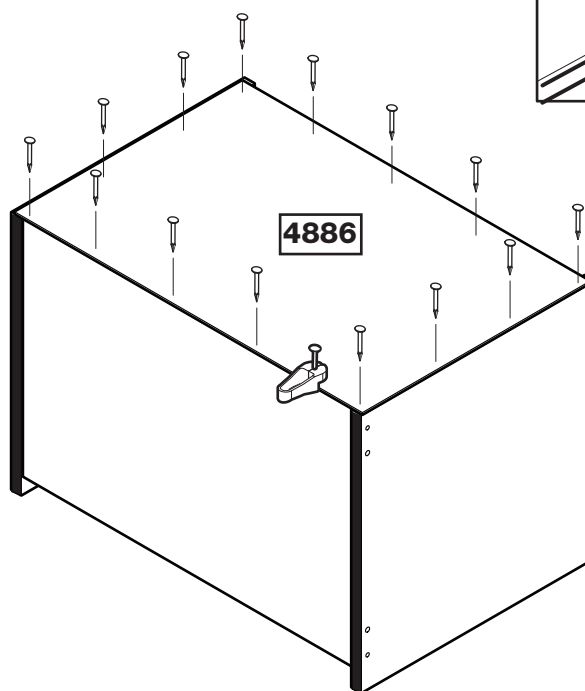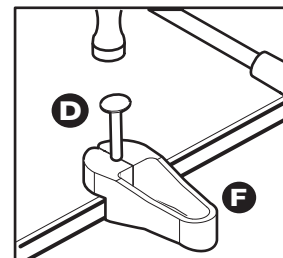

# Assembly Instructions


## Step 9

### Attach feet to bottom panel

Use a bradawl to mark the holes for the feet.

Use 4 screws **L** to attach feet **O** to bottom panel **4885**.




**Stand the unit upright once this step is complete.**

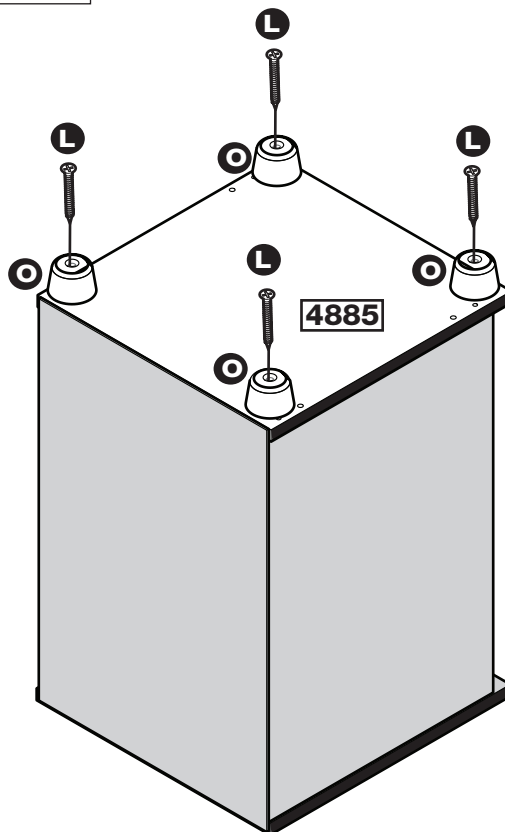

## Step 10

### Fit the drawer.


For this step we recommend you follow the helpful hints on the next page.

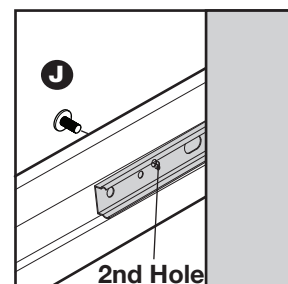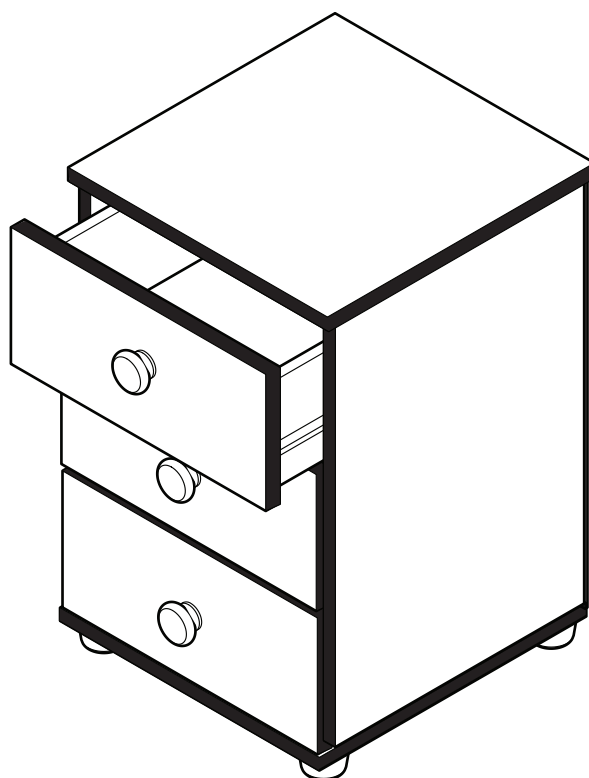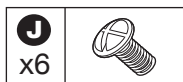


# Assembly Instructions

## Step 11



Locate drawers helpful hints

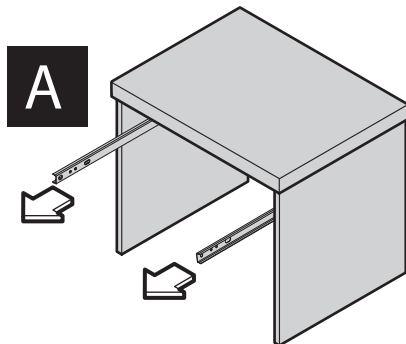

PULL SLIDING PART OF DRAWER RUNNERS OUT SO THEY ARE FULLY EXTENDED.

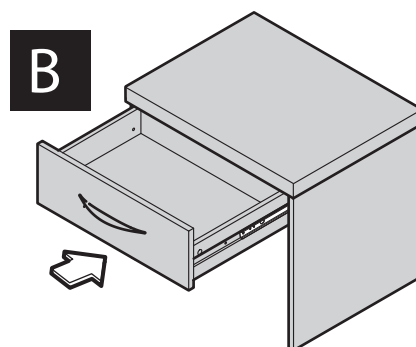


LOCATE DRAWER ONTO RUNNERS WHILST KEEPING RUNNERS EXTENDED.

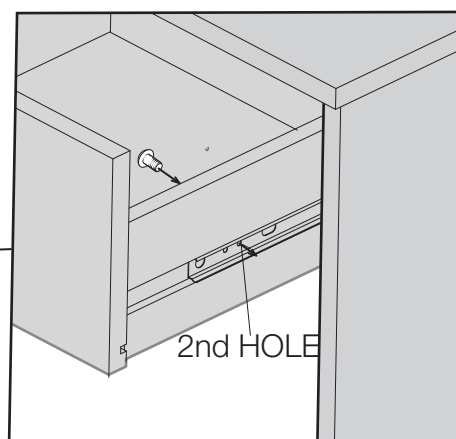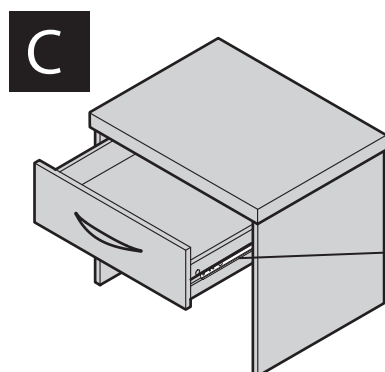

- LINE UP THE FRONT HOLE IN THE DRAWER SIDE WITH THE 2ND THREADED HOLE IN THE RUNNER.
- WHILE PUSHING THE RUNNER AGAINST THE DRAWER SIDE, SCREW THE BOLT FROM THE INSIDE OF THE DRAWER, THROUGH THE HOLE IN THE DRAWER SIDE AND INTO THREADED HOLE IN THE RUNNER.
- REPEAT ON OPPOSITE DRAWER SIDE

Congratulations! Your unit is complete.

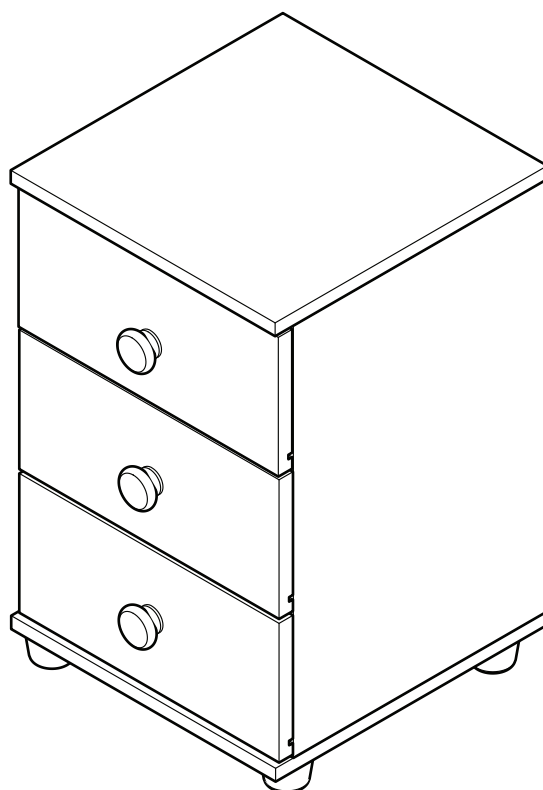

## Important Information

If you need help or have damaged or missing parts, call the **Customer Helpline:**

**01709 534123**

**8am - 4.30pm (Monday to Thursday)**

**8am - 2.30pm (Fridays)**

*(by contacting the customer service line your statutory rights are not affected)*

Please have the following information to hand:

- >> Unit Description
- >> Product Code
- >> Product Colour
- >> Place of Purchase
- >> Catalogue Ref. No.
- >> Item Code
- >> Assembly Instructions

We do have an answer machine should you contact us out of office hours, so in addition to the above information could you leave your name, address, daytime telephone number and the nature of your call on the answerphone. All calls will be actioned asap.

You can also e-mail your requests to us at:

**[customer.helpdesk@addspacefl.co.uk](mailto:customer.helpdesk@addspacefl.co.uk)**

Alternatively, you can write to us at: **Customer Service Department, Addspace Furniture Limited, Braithwell Way, Hellaby Industrial Estate, Hellaby, Rotherham, South Yorkshire, S66 8QY.**

Notes;

Notes;